

Shop Manual

BULLDOZER

D51EX-24
D51PX-24

SERIAL NUMBERS D51EX-B25001 and up
D51PX-B25001

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-18
HOW TO READ THE SHOP MANUAL	00-18
SAFETY NOTICE FOR OPERATION	00-20
PRECAUTIONS TO PREVENT FIRE	00-28
ACTIONS IF FIRE OCCURS	00-30
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-31
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-32
PRECAUTIONS FOR DEF	00-33
STORE AdBlue/DEF	00-34
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-35
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-38
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-45
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-47
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-48
PRACTICAL USE OF KOMTRAX	00-49
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-50
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-54
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-58
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-59
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-61
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-62
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-64
HOW TO READ ELECTRICAL WIRE CODE	00-65
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-69
STANDARD TIGHTENING TORQUE TABLE	00-72
CONVERSION TABLE	00-79
ABBREVIATION LIST	00-84
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
SPECIFICATIONS	01-7
WEIGHT TABLE	01-17
FUEL, COOLANT, LUBRICANT	01-21
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
UREA SCR SYSTEM	10-5
LAYOUT DRAWING OF UREA SCR SYSTEM	10-5
UREA SCR SYSTEM DIAGRAM	10-7
FUNCTION OF UREA SCR SYSTEM	10-8
COMPONENT PARTS OF UREA SCR SYSTEM	10-25
BOOT-UP SYSTEM	10-34
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-34
SYSTEM OPERATING LAMP SYSTEM	10-35
BATTERY DISCONNECT SWITCH	10-37
ENGINE SYSTEM	10-38
LAYOUT DRAWING OF ENGINE SYSTEM	10-38
ENGINE CONTROL SYSTEM	10-40
AUTOMATIC IDLE STOP SYSTEM	10-46
COMPONENT PARTS OF ENGINE SYSTEM	10-49
COOLING SYSTEM	10-67
LAYOUT DRAWING OF COOLING SYSTEM	10-67
COOLING FAN CONTROL SYSTEM	10-69
COMPONENT PARTS OF COOLING SYSTEM	10-72

CONTROL SYSTEM.....	10-81
LAYOUT DRAWING OF CONTROL SYSTEM	10-81
MACHINE MONITOR SYSTEM	10-82
KOMTRAX SYSTEM.....	10-83
COMPONENT PARTS OF CONTROL SYSTEM.....	10-84
HYDRAULIC SYSTEM.....	10-119
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-119
CLSS	10-120
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-123
POWER TRAIN SYSTEM	10-155
LAYOUT DRAWING OF HST SYSTEM	10-155
OPERATION OF HST SYSTEM.....	10-156
STEERING AND BRAKE CONTROL SYSTEM	10-158
HST CONTROL SYSTEM.....	10-160
PARKING BRAKE CONTROL SYSTEM	10-171
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-174
WORK EQUIPMENT SYSTEM	10-210
WORK EQUIPMENT CONTROL	10-210
LAYOUT DRAWING OF FRONT WORK EQUIPMENT	10-212
LAYOUT OF FIXED MULTI-SHANK RIPPER.....	10-213
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-214
UNDERCARRIAGE AND FRAME.....	10-230
MAIN FRAME	10-230
SUSPENSION	10-231
TRACK FRAME AND IDLER CUSHION	10-234
WORK EQUIPMENT.....	10-236
STRUCTURE OF FRONT WORK EQUIPMENT (Serial No.: B25001 to B25300).....	10-236
STRUCTURE OF FRONT WORK EQUIPMENT (Serial No.: B25301 and up).....	10-237
STRUCTURE OF FIXED MULTI-SHANK RIPPER.....	10-238
CAB AND ITS ATTACHMENTS	10-239
ROPS CAB	10-239
CAB MOUNT	10-241
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: D51EX-24	20-3
STANDARD VALUE TABLE FOR ENGINE: D51PX-24	20-7
STANDARD VALUE TABLE FOR MACHINE.....	20-11
STANDARD VALUE TABLE FOR MACHINE: D51EX-24	20-11
STANDARD VALUE TABLE FOR MACHINE: D51PX-24	20-27
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-41
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING	30-5
TOOLS FOR TESTING AND ADJUSTING.....	30-5
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-12
ENGINE AND COOLING SYSTEM.....	30-15
TEST ENGINE SPEED	30-15
TEST BOOST PRESSURE.....	30-17
TEST EXHAUST GAS COLOR.....	30-18
TEST AND ADJUST VALVE CLEARANCE.....	30-20
TEST COMPRESSION PRESSURE.....	30-22
TEST BLOWBY PRESSURE	30-27
TEST ENGINE OIL PRESSURE	30-29
VISUAL CHECK INSIDE OF EGR VALVE.....	30-30
CLEAN INSIDE OF EGR VALVE.....	30-32
TEST FUEL PRESSURE	30-35
TEST FUEL DISCHARGE, RETURN AND LEAKAGE	30-40

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$