

Shop Manual

PLANTER

D61EM-23MO

SERIAL NUMBERS B10001 and up

KOMATSU

SHOP MANUAL

PLANTER

D61EM-23M0

Model Serial Number

D61EM-23M0 B10001 and up

00 Index and foreword

Index

00 Index and foreword	00-1
Foreword, safety and general information	00-13
Important safety notice	00-13
Precautions to prevent fire	00-18
How to read the shop manual	00-20
Explanation of terms for maintenance standard	00-22
Handling equipment of fuel system devices	00-24
Handling of intake system parts	00-25
Handling of hydraulic equipment	00-26
Method of disconnecting and connecting of push-pull type coupler	00-28
Handling of electrical equipment	00-31
How to read electric wire code	00-39
Precautions when performing operation	00-42
Practical use of KOMTRAX	00-47
Standard tightening torque table	00-48
List of abbreviation	00-54
Conversion table	00-59
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specifications	01-4
Weight table	01-9
Table of fuel, coolant, and lubricants	01-11
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine related parts	10-3
Cooling system	10-5
Cooling fan motor	10-7
Oil cooler bypass and HST charge safety valve	10-13
Power train	10-19
Power train system	10-19
Damper	10-22
Hydraulic component layout of HST	10-23
Steering and brake control	10-24
HST pump	10-26
HST motor	10-41
Charge pump	10-56
Solenoid valve	10-57
Final drive	10-66
Undercarriage and frame	10-70
Main frame	10-70
Suspension	10-71
Track frame and idler cushion	10-73
Hydraulic system	10-75
Hydraulic component layout of work equipment	10-75
Work equipment control system	10-76
Hydraulic tank	10-77
CLSS	10-79
Work equipment and cooling fan pump	10-82

Control valve	10-93
Accumulator	10-119
Work equipment-	10-121
Planter unit-	10-121
Cab and its attachments	10-122
ROPS cab	10-122
Cab mount	10-124
Electrical system	10-125
Engine control system	10-125
Cooling system control system	10-128
HST control system	10-130
Parking brake control system	10-141
System operating lamp function	10-144
Battery disconnect switch function	10-145
Machine monitor system	10-147
KOMTRAX system	10-170
System component parts	10-173
HST controller	10-176
Sensor	10-188
20 Standard value tables	20-1
Table of contents	20-2
Standard service value table	20-3
Standard value table for engine	20-3
Standard value table for machine	20-4
Standard value table for electrical system	20-10
30 Testing and adjusting	30-1
Table of contents	30-2
Related information on testing and adjusting	30-4
Tools for testing and adjusting	30-4
Sketch of tools for testing and adjusting	30-7
Engine and cooling system	30-9
Testing engine speed	30-9
Testing boost pressure	30-11
Testing exhaust gas color	30-13
Testing and adjusting valve clearance	30-15
Measuring compression pressure	30-18
Testing blowby pressure	30-21
Testing engine oil pressure	30-22
Testing fuel pressure	30-23
Testing fuel discharge, return and leakage	30-28
Bleeding air from fuel system	30-33
Testing fuel circuit for leakage	30-35
Handling cylinder cutout mode operation	30-36
Handling no-injection cranking operation	30-37
Testing of installed condition of cylinder heads and manifolds	30-38
Testing engine piping for damage and looseness	30-39
Check alternator belt, replace	30-40
Power train	30-42
Testing and adjusting HST oil pressure	30-42
Testing output pressure of solenoid valve	30-47
Testing if machine travels straight	30-51
Simple test procedure for brake performance	30-52
Adjusting deceleration/brake pedal	30-53

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$