

Shop Manual

BULLDOZER

D65EX -16

D65PX -16

D65WX-16

SERIAL NUMBERS

D65EX- 80001

D65PX- 80001 and up

D65WX-80001

ecot3

KOMATSU

BULLDOZER

D65EX-16

D65PX-16

D65WX-16

Machine model	Serial number
D65EX-16	80001 and up
D65PX-16	80001 and up
D65WX-16	80001 and up

00 Index and foreword

100 Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04887-18
00 Index and foreword	SEN04923-18
100 Index	SEN04931-18
200 Foreword and general information	SEN04932-02
01 General	SEN04924-04
100 Specification and technical data.....	SEN04933-04
10 Structure, function and maintenance standard.....	SEN04925-08
100 Engine and cooling system	SEN04963-01
201 Power train, Part 1	SEN04964-01
202 Power train, Part 2	SEN04965-01
300 Undercarriage and frame	SEN04966-04
401 Hydraulic system, Part 1	SEN04967-00
402 Hydraulic system, Part 2	SEN04968-01
403 Hydraulic system, Part 3	SEN04969-00
500 Work equipment.....	SEN04970-03
600 Cab and its attachments	SEN04971-02
700 Electrical system	SEN04972-02
20 Standard value table.....	SEN04926-04
100 Standard service value table.....	SEN05118-04
30 Testing and adjusting	SEN04927-07
101 Testing and adjusting, Part 1.....	SEN05119-03
102 Testing and adjusting, Part 2.....	SEN05120-03
103 Testing and adjusting, Part 3.....	SEN05121-02
104 Testing and adjusting, Part 4.....	SEN05122-02
40 Troubleshooting.....	SEN04928-04
100 Failure code table and fuse locations	SEN05029-02
200 General information on troubleshooting.....	SEN05030-01
301 Troubleshooting by failure code (Display of code), Part 1	SEN05031-00
302 Troubleshooting by failure code (Display of code), Part 2	SEN05032-01
303 Troubleshooting by failure code (Display of code), Part 3	SEN05033-01
304 Troubleshooting by failure code (Display of code), Part 4	SEN05034-01
305 Troubleshooting by failure code (Display of code), Part 5	SEN05035-01
306 Troubleshooting by failure code (Display of code), Part 6	SEN05036-01
400 Troubleshooting of electrical system (E-mode).....	SEN05037-01
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN05038-00
600 Troubleshooting of engine (S-mode).....	SEN05039-00
50 Disassembly and assembly.....	SEN04929-10
100 General information on disassembly and assembly	SEN05110-03
200 Engine and cooling system	SEN05111-02

300 Power train	SEN05112-03
400 Undercarriage and frame	SEN05113-06
500 Hydraulic system	SEN05114-02
600 Work equipment	SEN05115-02
700 Cab and its attachments.....	SEN05116-02
800 Electrical system	SEN05117-01
80 Appendix.....	SEN05040-01
100 Air conditioner	SEN05041-01
90 Diagrams and drawings	SEN04930-04
100 Hydraulic diagrams and drawings	SEN04934-02
200 Electrical diagrams and drawings.....	SEN04935-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$