

# Shop Manual

BULLDOZER

***D71EXi -24***

***D71EXi -24E0***

***D71PXi-24***

***D71PXi-24E0***

SERIAL NUMBERS      D71EXi-70002      and up  
D71PXi-70002



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information .....	00-23
How to Read the Shop Manual .....	00-23
Safety Notice for Operation .....	00-25
Precautions to Prevent Fire .....	00-33
Procedures If Fire Occurs .....	00-35
Precautions for Disposing of Waste Materials .....	00-36
Procedures for Exhaust Gas Regulations .....	00-37
Precautions for DEF .....	00-38
Store DEF .....	00-39
Precautions When You Handle Hydraulic Equipment .....	00-40
Precautions When You Disconnect and Connect Pipings .....	00-43
Precautions When You Handle Electrical Equipment .....	00-50
Precautions When You Handle Fuel System Equipment .....	00-52
Precautions When You Handle Intake System Equipment .....	00-53
Practical Use of KOMTRAX .....	00-54
Disconnect and Connect Push-Pull Type Coupler .....	00-55
Precautions for Disconnection and Connection of Connectors .....	00-59
How to Disconnect and Connect Deutsch Connector .....	00-63
How to Disconnect and Connect Slide Lock Type Connector .....	00-64
How to Disconnect and Connect Connector with Lock to Pull .....	00-66
How to Disconnect and Connect Connector with Lock to Push .....	00-67
How to Disconnect and Connect Connector with Housing to Rotate .....	00-69
How to Read the Codes for Electric Cable .....	00-70
Explanation of Terms for Maintenance Standard .....	00-74
Standard Tightening Torque Table .....	00-77
Conversion Table .....	00-84
Abbreviation List .....	00-89
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Specifications .....	01-9
Weight Table .....	01-25
Fuel, Coolant, Lubricants (For North America) .....	01-31
Fuel, Coolant, Lubricants (For European Union) .....	01-33
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-6
Layout Drawing of Urea SCR System .....	10-6
Urea SCR System Diagram .....	10-8
Function of Urea SCR System .....	10-9
Component Parts of Urea SCR System .....	10-27
Boot-up System .....	10-36
Layout Drawing of Boot-up System .....	10-36
System Operating Lamp System .....	10-37
Battery Disconnect Switch .....	10-40
Assistance Valve for Startup .....	10-42
Engine System .....	10-43
Layout Drawing of Engine System .....	10-43
Engine Control System .....	10-45
Engine Automatic Warm-up System .....	10-50
Automatic Idle Stop System .....	10-51
Component Parts of Engine System .....	10-54
Cooling System .....	10-73
Layout Drawing of Cooling System .....	10-73

Cooling Fan Control System .....	10-75
Component Parts of Cooling System .....	10-77
Control System .....	10-88
Layout Drawing of Control System .....	10-88
Machine Monitor System.....	10-89
KOMTRAX System .....	10-91
Component Parts of Control System .....	10-92
Hydraulic System .....	10-135
Layout Drawing of Hydraulic System.....	10-135
CLSS .....	10-136
Component Parts of Hydraulic System.....	10-140
Power Train System.....	10-177
Layout Drawing of HST System .....	10-177
Operation of HST System .....	10-178
Steering and Brake Control System .....	10-180
HST Control System .....	10-182
Parking Brake Control System .....	10-193
Component Parts of Power Train System.....	10-197
Work Equipment System.....	10-239
Work Equipment Control .....	10-239
Layout Drawing of Front Work Equipment.....	10-241
Layout Drawing of Fixed Multi-Shank Ripper .....	10-242
Component Parts of Work Equipment System .....	10-243
ICT System .....	10-264
Layout Drawing of ICT System.....	10-264
System Diagram of ICT Control System.....	10-266
Blade Control System .....	10-268
Assist Control System .....	10-273
Back Grade Mode System .....	10-275
Cut Control System.....	10-277
Smooth Start System .....	10-290
Slip Control System.....	10-292
Speed Control System .....	10-294
Straight Travel Correction System.....	10-296
Quick Surface Control System .....	10-300
System of Triangulated Surface from AS-BUILT.....	10-302
2 Surfaces Selection Control System .....	10-304
Lift Layer Control System .....	10-306
HST Speed Range Control System.....	10-308
2D Laser Machine Control System.....	10-310
Component Parts of ICT System.....	10-312
Undercarriage and Frame .....	10-338
Main Frame.....	10-338
Suspension .....	10-339
Track Frame and Idler Cushion .....	10-342
Work Equipment .....	10-345
Structure of Front Work Equipment.....	10-345
Structure of Fixed Multi-Shank Ripper.....	10-346
CAB Related Parts.....	10-347
ROPS CAB .....	10-347
CAB Mount .....	10-349
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: D71EXI-24.....	20-3
Standard Value Table for Engine: D71EXI-24E0 .....	20-7
Standard Value Table for Engine: D71PXI-24.....	20-11
Standard Value Table for Engine: D71PXI-24E0 .....	20-15

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$