

Shop Manual

MOTOR GRADER

GD535-6

Hydraulic drive fan specification

SERIAL NUMBERS 3002 and up

KOMATSU

00 Index and foreword

Table of contents

00 Index and foreword

Table of contents	00-2
Foreword, safety, basic information	00-21
How to read the shop manual	00-21
Safety notice for operation	00-23
Precautions to prevent fire	00-29
Actions if fire occurs	00-30
Precautions for removal of dangerous materials	00-30
Steps necessary to meet exhaust gas regulations	00-31
General character and precautions for usage	00-32
Precautions when you add DEF	00-32
Precautions when you store DEF	00-32
Precautions for fire hazard and leakage	00-32
The other precautions	00-32
Store DEF	00-33
Precautions for handling hydraulic equipment	00-34
Precautions for disconnection and connection of pipings	00-36
Precautions for handling electrical equipment	00-43
Precautions for handling fuel system equipment	00-45
Precautions for handling intake system equipment	00-46
Practical use of KOMTRAX	00-47
Disconnect and connect push-pull type coupler	00-48
Method for disconnecting and connecting type 1 push-pull type coupler	00-48
Method for disconnecting and connecting type 2 push-pull type coupler	00-49
Method for disconnecting and connecting type 3 push-pull type coupler	00-50
Precautions for disconnection and connection of connectors	00-52
Method for disconnecting and connecting Deutsch connector	00-56
Method for disconnecting and connecting slide lock type connector	00-57
Method for disconnecting and connecting connector with lock to pull	00-58
Method for disconnecting and connecting connector with lock to push	00-59
Method for disconnecting and connecting connector with housing to rotate	00-61
How to read electrical wire code	00-62
Explanation of terms for maintenance standard	00-66
Standard tightening torque table	00-68
Conversion table	00-75
Abbreviation list	00-80

01 Specification

Specifications	01-3
Specification drawing	01-3
Specifications	01-5
Weight table	01-11
Fuel, coolant, and lubricant	01-12
Use of fuel, coolant and lubricants according to ambient temperature	01-12

10 Structure and function

Urea SCR system	10-5
Layout drawing of Urea SCR system	10-5
Urea SCR system diagram	10-7
Function of Urea SCR system	10-8
Function of DEF supply system	10-8
Inducement strategy	10-11
Component parts of Urea SCR system	10-17
SCR assembly	10-17
DEF tank	10-19
DEF pump	10-21

DEF injector	10-22
DEF hose	10-23
DEF tank heating valve	10-24
Boot-up system	10-25
Layout drawing of boot-up system	10-25
System operating lamp system	10-27
System operating lamp system diagram	10-27
Function of system operating lamp system	10-27
Battery disconnect switch	10-28
Function of battery disconnect switch	10-28
Operation of battery disconnect switch	10-28
Preheating system	10-29
Preheating system diagram	10-29
Function of automatic preheating system	10-29
Operation of automatic preheating system	10-29
Function of manual preheating system	10-30
Operation of manual preheating system	10-30
Engine shutdown secondary switch	10-31
Function of engine shutdown secondary switch	10-31
Operation of engine shutdown secondary switch	10-31
Engine system	10-32
Layout drawing of engine system	10-32
Function of engine system	10-33
Engine control system	10-34
Engine control system diagram	10-34
Engine automatic warm-up function	10-35
Engine automatic warm-up cancel function	10-35
Operation of engine control system	10-35
Engine power mode selector system	10-37
Engine power mode selector system diagram	10-37
Function of engine power mode selector system	10-37
Operation of engine power mode selector system	10-37
Component parts of engine system	10-38
Turbocharger	10-38
Crankcase ventilation system	10-41
Impactor (Filterless)	10-42
Exhaust throttle valve	10-43
KDPF	10-44
Cooling system	10-48
Layout drawing of cooling system	10-48
Cooling fan control system	10-50
Component parts of cooling system	10-53
Cooling fan motor	10-53
Cooling fan speed sensor	10-60
Power train system	10-61
Power train system drawing	10-61
Power train piping drawing	10-62
Transmission control	10-63
Component parts of power train system	10-64
Torque converter	10-64
Transmission	10-67
Transmission control valve	10-86
ECMV	10-88
Main relief valve and torque converter relief valve	10-95
Front axle	10-97
Rear axle	10-100
Bevel gear	10-101
Final drive	10-103
Tandem drive	10-105

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$