

Shop Manual

MOTOR GRADER

GD655-7

SERIAL NUMBERS GD655-65001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-26
How to Read the Shop Manual	00-26
Safety Notice for Operation	00-28
Precautions to Prevent Fire	00-36
Procedures If Fire Occurs	00-38
Precautions for Disposing of Waste Materials	00-39
Procedures for Exhaust Gas Regulations	00-40
Precautions for DEF	00-41
Store DEF	00-42
Precautions When You Handle Hydraulic Equipment	00-43
Precautions When You Disconnect and Connect Pipings	00-46
Precautions When You Handle Electrical Equipment	00-53
Precautions When You Handle Fuel System Equipment	00-55
Precautions When You Handle Intake System Equipment	00-56
Practical Use of KOMTRAX	00-57
Disconnect and Connect Push-Pull Type Coupler	00-58
Precautions for Disconnection and Connection of Connectors	00-62
How to Disconnect and Connect Deutsch Connector	00-66
How to Disconnect and Connect Slide Lock Type Connector	00-67
How to Disconnect and Connect Connector with Lock to Pull	00-69
How to Disconnect and Connect Connector with Lock to Push	00-70
How to Disconnect and Connect Connector with Housing to Rotate	00-72
How to Read the Codes for Electric Cable	00-73
Explanation of Terms for Maintenance Standard	00-77
Standard Tightening Torque Table	00-80
Conversion Table	00-87
Abbreviation List	00-92
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Specifications	01-5
Weight Table	01-11
Fuel, Coolant, Lubricant	01-12
10 Structure and Function	10-1
Table of Contents	10-2
Urea SCR System	10-6
Layout Drawing of Urea SCR System	10-6
Urea SCR System Diagram	10-9
Function of Urea SCR System	10-10
Component Parts of Urea SCR System	10-26
Boot-up System	10-36
Layout Drawing of Boot-up System	10-36
System Operating Lamp System	10-38
Battery Disconnect Switch	10-40
Preheating System	10-42
Engine Shutdown Secondary Switch	10-44
Engine System	10-45
Layout Drawing of Engine System	10-45
Engine Control System	10-46
Engine Power Mode Selector System	10-49
Automatic Idle Stop System	10-50
Component Parts of Engine System	10-51
Cooling System	10-70
Layout Drawing of Cooling System	10-70

Cooling Fan Control System	10-72
Component Parts of Cooling System	10-75
Control System	10-83
Layout Drawing of Control System (Machine with Gateway Function Controller)	10-83
Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-85
Machine Monitor System.....	10-87
Rearview Monitor System	10-89
KOMTRAX System	10-90
Seating Switch System	10-92
Component Parts of Control System	10-94
Hydraulic System	10-147
Layout Drawing of Hydraulic System.....	10-147
CLSS	10-148
Component Parts of Hydraulic System.....	10-152
Power Train System.....	10-187
Layout Drawing of Power Train System	10-187
Operation of Power Train System	10-191
Transmission Control System.....	10-192
Transmission Protection Function	10-196
Component Parts of Power Train System.....	10-197
Steering System.....	10-248
Layout Drawing of Steering System	10-248
Steering Column	10-250
Steering Lever System.....	10-251
Component Parts of Steering System	10-255
Work Equipment System.....	10-258
Layout Drawing of Work Equipment System	10-258
Work Equipment Control System	10-262
Work Equipment Lock System	10-263
Cross Slope System.....	10-265
Component Parts of Work Equipment System	10-266
Brake System.....	10-280
Layout Drawing of Brake System	10-280
Parking Brake Control System	10-282
Component Parts of Brake System	10-283
Undercarriage and Frame	10-298
Frame and Center Hinge Pin.....	10-298
Tires.....	10-299
Work Equipment	10-301
Circle, Draw Bar.....	10-301
Blade	10-304
Lifter.....	10-306
CAB Related Parts.....	10-308
ROPS CAB	10-308
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: GD655-7.....	20-3
Standard Value Table for Machine.....	20-6
Standard Value Table for Machine: GD655-7	20-6
Machine Posture and Procedures to Measure Performance	20-20
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-6
Related Information on Testing and Adjusting	30-7
Differences In Machine Monitor Symbols	30-7
Tools for Testing and Adjusting.....	30-8
Sketch of Tools for Testing and Adjusting	30-20

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$