

# Shop Manual

MOTOR GRADER

***GD675-7EO***

SERIAL NUMBERS    65001    and up

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information .....	00-29
How to Read the Shop Manual .....	00-29
Safety Notice for Operation .....	00-31
Precautions to Prevent Fire .....	00-39
Procedures If Fire Occurs .....	00-41
Precautions for Disposing of Waste Materials .....	00-42
Procedures for Exhaust Gas Regulations .....	00-43
Precautions for DEF .....	00-44
Store DEF .....	00-45
Precautions When You Handle Hydraulic Equipment .....	00-46
Precautions When You Disconnect and Connect Pipings .....	00-49
Precautions When You Handle Electrical Equipment .....	00-56
Precautions When You Handle Fuel System Equipment .....	00-58
Precautions When You Handle Intake System Equipment .....	00-59
Practical Use of KOMTRAX .....	00-60
Disconnect and Connect Push-Pull Type Coupler .....	00-61
Precautions for Disconnection and Connection of Connectors .....	00-65
How to Disconnect and Connect Deutsch Connector .....	00-69
How to Disconnect and Connect Slide Lock Type Connector .....	00-70
How to Disconnect and Connect Connector with Lock to Pull .....	00-72
How to Disconnect and Connect Connector with Lock to Push .....	00-73
How to Disconnect and Connect Connector with Housing to Rotate .....	00-75
How to Read the Codes for Electric Cable .....	00-76
Explanation of Terms for Maintenance Standard .....	00-80
Standard Tightening Torque Table .....	00-83
Conversion Table .....	00-90
Abbreviation List .....	00-95
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Specifications .....	01-5
Weight Table .....	01-11
Fuel, Coolant, Lubricant .....	01-12
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-6
Layout Drawing of Urea SCR System .....	10-6
Urea SCR System Diagram .....	10-9
Function of Urea SCR System .....	10-10
Component Parts of Urea SCR System .....	10-27
Boot-up System .....	10-37
Layout Drawing of Boot-up System .....	10-37
System Operating Lamp System .....	10-39
Battery Disconnect Switch .....	10-41
Preheating System .....	10-43
Engine Shutdown Secondary Switch .....	10-45
Engine System .....	10-46
Layout Drawing of Engine System .....	10-46
Engine Control System .....	10-47
Engine Power Mode Selector System .....	10-50
Automatic Idle Stop System .....	10-51
Component Parts of Engine System .....	10-52
Cooling System .....	10-71
Layout Drawing of Cooling System .....	10-71

Cooling Fan Control System .....	10-73
Component Parts of Cooling System .....	10-76
Control System .....	10-84
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-84
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-86
Machine Monitor System.....	10-88
Rearview Monitor System .....	10-90
KOMTRAX System .....	10-91
Seating Switch System .....	10-93
Operator Detection System .....	10-95
Component Parts of Control System .....	10-97
Hydraulic System .....	10-153
Layout Drawing of Hydraulic System.....	10-153
CLSS .....	10-154
Component Parts of Hydraulic System.....	10-158
Power Train System .....	10-193
Layout Drawing of Power Train System .....	10-193
Operation of Power Train System .....	10-197
Transmission Control System.....	10-198
Transmission Protection Function .....	10-202
Component Parts of Power Train System.....	10-203
Steering System.....	10-254
Layout Drawing of Steering System .....	10-254
Steering Column .....	10-256
Steering Lever System.....	10-257
Component Parts of Steering System .....	10-261
Work Equipment System.....	10-264
Layout Drawing of Work Equipment System .....	10-264
Work Equipment Control System .....	10-268
Work Equipment Lock System .....	10-269
Cross Slope System.....	10-271
Component Parts of Work Equipment System .....	10-272
Brake System.....	10-287
Layout Drawing of Brake System .....	10-287
Parking Brake Control System .....	10-289
Component Parts of Brake System .....	10-291
Undercarriage and Frame .....	10-306
Frame and Center Hinge Pin.....	10-306
Tires .....	10-307
Work Equipment .....	10-309
Circle, Draw Bar .....	10-309
Blade .....	10-312
Lifter.....	10-314
CAB Related Parts .....	10-316
ROPS CAB .....	10-316
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: GD675-7E0 .....	20-3
Standard Value Table for Machine.....	20-6
Standard Value Table for Machine: GD675-7E0 .....	20-6
Machine Posture and Procedures to Measure Performance .....	20-20
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-6
Related Information on Testing and Adjusting .....	30-7
Differences In Machine Monitor Symbols .....	30-7
Tools for Testing and Adjusting.....	30-8

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$