

SHOP MANUAL

HYDRAULIC EXCAVATOR

HB215LC-2

Model	Serial Number
HB215LC-2	K60001 and up

00 Index and foreword

Index (ALL-0310-001A00A)

00 Index and foreword	00-1
Foreword, safety and general information	00-16
Important safety notice (Hybrid).....	00-16
How to read the shop manual.....	00-25
Explanation of terms for maintenance standard	00-27
Handling equipment of fuel system devices	00-29
Handling of intake system parts.....	00-30
Handling of hydraulic equipment	00-31
Method of disconnecting and connecting of push-pull type coupler	00-33
Handling of electrical equipment.....	00-36
How to read electric wire code (Hybrid).....	00-44
Precautions when performing operation	00-51
Practical use of KOMTRAX	00-57
Handling hybrid components and high voltage wiring harness.....	00-58
Standard tightening torque table.....	00-64
List of abbreviation.....	00-72
Conversion table.....	00-78
01 Specification.....	01-1
Specifications.....	01-3
Specification drawing.....	01-3
Working range drawings	01-5
Specifications.....	01-6
Weight table.....	01-11
Table of fuel, coolant, and lubricants	01-13
10 Structure and function.....	10-1
Engine and cooling system.....	10-4
Engine related parts.....	10-4
VFT	10-5
EGR system piping drawing	10-9
EGR system circuit diagram	10-10
EGR valve.....	10-11
EGR cooler	10-13
KCCV layout drawing.....	10-14
KCCV ventilator	10-16
KDOC muffler	10-19
Cooling system	10-20
Hybrid system	10-22
Outline of hybrid system	10-22
Configuration of hybrid system	10-23
Protective function of hybrid component.....	10-24
Protection function for workers when disassembling hybrid component	10-26
Cooling system of hybrid component.....	10-28
Interlock function.....	10-29
Motor-generator	10-30
Electric swing motor.....	10-32
Electric control unit	10-34
High voltage wiring harness (power cable).....	10-36
Water pump	10-37
Power train.....	10-39
Power train system	10-39
Swing circle.....	10-41
Swing machinery with swing brake.....	10-42
Final drive	10-44
Undercarriage and frame.....	10-46
Track frame and idler cushion	10-46
Hydraulic system	10-47
Hydraulic component layout	10-47

Valve control	10-49
Hydraulic tank	10-51
CLSS	10-53
Main pump	10-58
Pilot oil filter	10-88
Control valve	10-89
Travel motor	10-146
PPC valve	10-159
Solenoid valve	10-182
Attachment circuit selector valve (for low pressure circuit)	10-185
Center swivel joint	10-188
Accumulator	10-190
ATT EPC valve assembly	10-192
Return oil filter	10-194
Quick coupler control valve	10-195
Work equipment	10-198
Work equipment	10-198
Work equipment shim	10-199
Bucket play adjustment shim	10-200
Cab and its attachments	10-201
Cab mount and cab tipping stopper	10-201
ROPS cab	10-202
Electrical system	10-203
Electrical control system	10-203
Machine monitor system	10-265
KOMTRAX system	10-289
Sensor	10-292
Auto grease system	10-320
20 Standard value tables	20-1
Standard service value table	20-3
Standard value table for engine	20-3
Standard value table for machine	20-5
Standard value table for electrical system	20-23
30 Testing and adjusting	30-1
Related information on testing and adjusting	30-3
Tools for testing and adjusting	30-3
Sketch of tools for testing and adjusting	30-8
Engine and cooling system	30-10
Testing engine speed	30-10
Testing boost pressure	30-12
Testing exhaust gas color	30-15
Testing and adjusting valve clearance	30-17
Testing compression pressure	30-20
Testing blowby pressure	30-24
Testing engine oil pressure	30-26
Testing fuel pressure	30-27
Testing fuel discharge, return and leakage	30-32
Bleeding air from fuel system	30-34
Testing fuel circuit for leakage	30-36
Handling cylinder cutout mode operation	30-37
Handling no-injection cranking operation	30-38
Testing and adjusting air conditioner compressor belt tension	30-39
Replacing fan belt	30-41
Hybrid system	30-42
Precautions related to hybrid equipment	30-42
Bleeding air from hybrid cooling system	30-43
Testing water pressure of hybrid coolant	30-45
Testing swing parking brake	30-47

00 Index and foreword

Index

Cleaning and replacing oil filter of electric swing motor	30-48
Power train.....	30-49
Testing swing circle bearing clearance.....	30-49
Undercarriage and frame.....	30-50
Testing and adjusting track tension	30-50
Hydraulic system	30-52
Releasing remaining pressure from hydraulic circuit.....	30-52
Testing oil pressure of control circuit	30-56
Testing and adjusting oil pressure in work equipment and travel circuits.....	30-58
Testing and adjusting oil pressure in pump PC control circuit.....	30-62
Testing and adjusting oil pressure in pump LS control circuit.....	30-67
Testing outlet pressure of solenoid valve	30-75
Testing PPC valve outlet pressure	30-79
Adjusting play of work equipment and swing PPC valves	30-81
Measuring and adjusting quick coupler control valve output pressure	30-82
Testing pump swash plate sensor	30-83
Isolating the parts causing hydraulic drift in work equipment	30-84
Testing oil leakage.....	30-86
Bleeding air from hydraulic circuit.....	30-88
Cab and its attachments	30-90
Testing cab tipping stopper.....	30-90
Adjusting mirrors.....	30-91
Electrical system.....	30-95
Special functions of machine monitor.....	30-95
KOMTRAX terminal start-up procedure.....	30-174
Adjusting rearview camera angle.....	30-177
Handling voltage circuit of engine controller.....	30-180
Handling battery disconnect switch	30-181
Testing diodes	30-182
Pm clinic	30-184
Pm Clinic service	30-184
40 Troubleshooting	40-1
Related information on troubleshooting	40-10
Troubleshooting points	40-10
Sequence of events in troubleshooting.....	40-12
Checks before troubleshooting.....	40-14
Inspection procedure before troubleshooting	40-17
Preparation for troubleshooting of electrical system.....	40-38
Classification and procedures for troubleshooting.....	40-44
Symptom and troubleshooting numbers.....	40-47
Information in troubleshooting table.....	40-51
Diagnostic procedure for wiring harness open circuit of pressure sensor system.....	40-54
Connector list and layout	40-57
Connector contact identification.....	40-70
T-branch box and T-branch adapter table	40-109
Fuse location table.....	40-115
Failure codes table	40-117
Troubleshooting by failure code (Display of code).....	40-135
Failure code [879AKA] A/C Inner Sensor Open Circuit	40-135
Failure code [879AKB] A/C Inner Sensor Short Circuit	40-136
Failure code [879BKA] A/C Outer Sensor Open Circuit	40-137
Failure code [879BKB] A/C Outer Sensor Short Circuit.....	40-138
Failure code [879CKA] Ventilating Sensor Open Circuit	40-139
Failure code [879CKB] Ventilating Sensor Short Circuit.....	40-140
Failure code [879DKZ] Sunlight Sensor Open or Short Circuit.....	40-141
Failure code [879EMC] Ventilation Damper Abnormality	40-142
Failure code [879FMC] Air Mix Damper Abnormality	40-143
Failure code [879GKX] Refrigerant Abnormality.....	40-144

Failure code [989L00] Engine Controller Lock Caution1	40-145
Failure code [A900FR] Abrupt Engine Stop by Auto Idle Stop 3	40-148
Failure code [A900N6] Abrupt Engine Stop by Auto Idle Stop 1	40-149
Failure code [A900NY] Abrupt Engine Stop by Auto Idle Stop 2	40-150
Failure code [AA10NX] Air Cleaner Clogging	40-151
Failure code [AB00KE] Charge Voltage Low	40-153
Failure code [B@BAZG] Eng Oil Press Low	40-155
Failure code [B@BAZK] Eng Oil Level Low	40-156
Failure code [B@BCNS] Eng Water Overheat	40-158
Failure code [B@BCZK] Eng Water Level Low	40-159
Failure code [B@HANS] Hyd Oil Overheat	40-161
Failure code [CA115] Eng Ne and Bkup Speed Sens Error	40-162
Failure code [CA122] Chg Air Press Sensor High Error	40-163
Failure code [CA123] Chg Air Press Sensor Low Error	40-165
Failure code [CA131] Throttle Sensor High Error	40-167
Failure code [CA132] Throttle Sensor Low Error	40-169
Failure code [CA144] Coolant Temp Sens High Error	40-171
Failure code [CA145] Coolant Temp Sens Low Error	40-173
Failure code [CA153] Chg Air Temp Sensor High Error	40-175
Failure code [CA154] Chg Air Temp Sensor Low Error	40-177
Failure code [CA187] Sensor 2 Supply Volt Low Error	40-179
Failure code [CA221] Ambient Press Sensor High Error	40-182
Failure code [CA222] Ambient Press Sens Low Error	40-184
Failure code [CA227] Sensor 2 Supply Volt High Error	40-186
Failure code [CA234] Eng Overspeed	40-187
Failure code [CA238] Ne Speed Sensor Supply Volt Error	40-188
Failure code [CA239] Ne Speed Sens Supply Volt High Error	40-190
Failure code [CA271] IMV/PCV1 Short Error	40-192
Failure code [CA272] IMV/PCV1 Open Error	40-194
Failure code [CA295] Ambient Press Sens In Range Error	40-196
Failure code [CA322] Inj #1(L#1) Open/Short Error	40-197
Failure code [CA324] Inj #3(L#3) Open/Short Error	40-200
Failure code [CA331] Inj #2(L#2) Open/Short Error	40-202
Failure code [CA332] Inj #4(L#4) Open/Short Error	40-204
Failure code [CA343] ECM Critical Internal Failure	40-206
Failure code [CA351] Injectors Drive Circuit Error	40-207
Failure code [CA352] Sensor 1 Supply Volt Low Error	40-208
Failure code [CA356] Mass Air Flow Sensor High Error	40-210
Failure code [CA357] Mass Air Flow Sensor Low Error	40-212
Failure code [CA386] Sensor 1 Supply Volt High Error	40-214
Failure code [CA428] Water in Fuel Sensor High Error	40-215
Failure code [CA429] Water in Fuel Sensor Low Error	40-217
Failure code [CA435] Eng Oil Press Sw Error	40-219
Failure code [CA441] Battery Voltage Low Error	40-221
Failure code [CA442] Battery Voltage High Error	40-223
Failure code [CA449] Rail Press Very High Error	40-224
Failure code [CA451] Rail Press Sensor High Error	40-225
Failure code [CA452] Rail Press Sensor Low Error	40-227
Failure code [CA466] KVGT Motor Driver Position Error	40-229
Failure code [CA488] Chg Air Temp High Torque Derate	40-231
Failure code [CA515] Rail Press Sens Sup Volt High Error	40-232
Failure code [CA516] Rail Press Sens Sup Volt Low Error	40-234
Failure code [CA553] Rail Press High Error	40-236
Failure code [CA555] Crankcase Press High Error 1	40-237
Failure code [CA556] Crankcase Press High Error 2	40-238
Failure code [CA559] Rail Press Low Error	40-239
Failure code [CA689] Eng Ne Speed Sensor Error	40-242
Failure code [CA691] Intake Air Temp Sens High Error	40-245

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$