

Shop Manual

**HYDRAULIC
EXCAVATOR**

**HB365LC-3
HB365NLC-3**

SERIAL NUMBERS **5001 and up**
K70001 and up

00 INDEX AND FOREWORD

INDEX

(ALL-A-0310-001-10-B)

00 INDEX AND FOREWORD 00-1

 ABBREVIATION LIST 00-21

 FOREWORD, SAFETY, BASIC INFORMATION 00-27

 HOW TO READ THE SHOP MANUAL 00-27

 SAFETY NOTICE FOR OPERATION 00-29

 PRECAUTIONS PARTICULARLY FOR HYBRID MACHINES 00-37

 PRECAUTIONS TO PREVENT FIRE 00-38

 ACTIONS IF FIRE OCCURS 00-40

 PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS 00-41

 ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS 00-42

 PRECAUTIONS FOR DEF 00-43

 STORE AdBlue/DEF 00-44

 PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT 00-45

 PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS 00-48

 PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT 00-55

 PRECAUTIONS FOR MAINTENANCE OF HYBRID SYSTEM 00-57

 PRECAUTIONS AGAINST HIGH VOLTAGE AND HIGH TEMPERATURE 00-58

 PRECAUTIONS FOR NORMAL CHECK AND MAINTENANCE 00-59

 PRECAUTIONS FOR THE MACHINE NOT TO BE TIPPED OVER AND FOR HYBRID COMPONENTS NOT TO BE DAMAGED 00-60

 PRECAUTIONS FOR THE MACHINE NOT TO BE SUBMERGED 00-61

 PRECAUTIONS FOR THE COLD SEASON 00-62

 PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT 00-63

 PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT 00-64

 PRACTICAL USE OF KOMTRAX 00-65

 DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER 00-66

 PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS 00-70

 METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR 00-74

 METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR 00-75

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ... 00-77

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. 00-78

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE 00-80

 HOW TO READ THE CODES (SYMBOLS) FOR ELECTRIC CABLE 00-81

 EXPLANATION OF TERMS FOR MAINTENANCE STANDARD 00-87

 STANDARD TIGHTENING TORQUE TABLE 00-90

 CONVERSION TABLE 00-97

01 SPECIFICATIONS 01-1

 CONTENTS 01-2

 ABBREVIATION LIST 01-3

 SPECIFICATIONS 01-9

 SPECIFICATION DRAWING 01-9

 WORKING RANGE DRAWINGS 01-10

 SPECIFICATIONS 01-11

 WEIGHT TABLE 01-15

 TABLE OF FUEL, COOLANT, AND LUBRICANTS 01-17

10 STRUCTURE AND FUNCTION 10-1

 CONTENTS 10-2

 ABBREVIATION LIST 10-6

 UREA SCR SYSTEM 10-12

 LAYOUT DRAWING OF UREA SCR SYSTEM 10-12

 UREA SCR SYSTEM DIAGRAM 10-16

 FUNCTION OF UREA SCR SYSTEM 10-17

 COMPONENT PARTS OF UREA SCR SYSTEM 10-37

 BOOT-UP SYSTEM 10-46

 LAYOUT DRAWING OF BOOT-UP SYSTEM 10-46

SYSTEM OPERATING LAMP SYSTEM	10-48
BATTERY DISCONNECT SWITCH	10-50
ENGINE SYSTEM	10-51
LAYOUT DRAWING OF ENGINE SYSTEM	10-51
ENGINE CONTROL SYSTEM	10-53
AUTO-DECELERATION SYSTEM	10-56
ENGINE AUTOMATIC WARM-UP SYSTEM	10-58
OVERHEAT PREVENTION SYSTEM	10-60
TURBOCHARGER PROTECTION SYSTEM	10-63
AUTOMATIC IDLE STOP SYSTEM	10-65
COMPONENT PARTS OF ENGINE SYSTEM	10-69
COOLING SYSTEM.....	10-85
LAYOUT DRAWING OF COOLING SYSTEM	10-85
HYBRID SYSTEM.....	10-87
LAYOUT DRAWING OF HYBRID SYSTEM	10-87
SYSTEM DIAGRAM OF HYBRID SYSTEM.....	10-88
STRUCTURE OF HYBRID SYSTEM	10-89
HYBRID PROTECTION SYSTEM.....	10-90
COOLING SYSTEM OF HYBRID COMPONENTS	10-92
INTERLOCK SYSTEM OF HYBRID COMPONENTS	10-93
WORKER PROTECTION SYSTEM FOR WHEN DISASSEMBLING THE HYBRID COMPONENTS	10-94
.....	10-94
COMPONENT PARTS OF HYBRID SYSTEM	10-96
CONTROL SYSTEM.....	10-103
LAYOUT DRAWING OF CONTROL SYSTEM	10-103
MACHINE MONITOR SYSTEM	10-106
KomVision SYSTEM	10-108
KOMTRAX SYSTEM.....	10-112
PPC LEVERS	10-113
AUTOMATIC GREASE SYSTEM.....	10-115
COMPONENT PARTS OF CONTROL SYSTEM.....	10-130
HYDRAULIC SYSTEM.....	10-164
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-164
CLSS	10-167
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-186
PUMP AND VALVE CONTROL SYSTEM	10-192
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-195
WORK EQUIPMENT SYSTEM	10-278
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-278
STRUCTURE OF VALVE CONTROL	10-284
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-285
MACHINE PUSH-UP SYSTEM.....	10-287
PPC LOCK SYSTEM	10-289
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-290
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-292
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-294
SWING SYSTEM.....	10-320
LAYOUT DRAWING OF SWING SYSTEM	10-320
SWING CONTROL SYSTEM DIAGRAM	10-323
COMPONENT PARTS OF SWING SYSTEM.....	10-326
TRAVEL SYSTEM.....	10-330
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-330
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-334
COMPONENT PARTS OF TRAVEL SYSTEM	10-336
UNDERCARRIAGE AND FRAME.....	10-357
LAYOUT DRAWING OF UNDERCARRIAGE	10-357
WORK EQUIPMENT.....	10-359
STRUCTURE OF WORK EQUIPMENT	10-359

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$