

# Shop Manual

**HYDRAULIC  
EXCAVATOR**

**HB365LC-3  
HB365NLC-3**

**SERIAL NUMBERS**      **5001 and up**  
**K70001 and up**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-23
FOREWORD, SAFETY, BASIC INFORMATION .....	00-29
HOW TO READ THE SHOP MANUAL .....	00-29
SAFETY NOTICE FOR OPERATION .....	00-31
PRECAUTIONS PARTICULARLY FOR HYBRID MACHINES .....	00-39
PRECAUTIONS TO PREVENT FIRE .....	00-40
ACTIONS IF FIRE OCCURS .....	00-42
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-43
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-44
PRECAUTIONS FOR DEF .....	00-45
STORE AdBlue/DEF .....	00-46
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-47
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-50
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-57
PRECAUTIONS FOR MAINTENANCE OF HYBRID SYSTEM .....	00-59
PRECAUTIONS AGAINST HIGH VOLTAGE AND HIGH TEMPERATURE .....	00-60
PRECAUTIONS FOR NORMAL CHECK AND MAINTENANCE .....	00-61
PRECAUTIONS FOR THE MACHINE NOT TO BE TIPPED OVER AND FOR HYBRID COMPO- NENTS NOT TO BE DAMAGED .....	00-62
PRECAUTIONS FOR THE MACHINE NOT TO BE SUBMERGED .....	00-63
PRECAUTIONS FOR THE COLD SEASON .....	00-64
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-65
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-66
PRACTICAL USE OF KOMTRAX .....	00-67
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-68
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-72
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-76
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-77
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-79
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-80
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE . .....	00-82
HOW TO READ THE CODES (SYMBOLS) FOR ELECTRIC CABLE .....	00-83
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-89
STANDARD TIGHTENING TORQUE TABLE .....	00-92
CONVERSION TABLE .....	00-99
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
WORKING RANGE DRAWINGS .....	01-10
SPECIFICATIONS .....	01-11
WEIGHT TABLE .....	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-17
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-6
UREA SCR SYSTEM .....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-12
UREA SCR SYSTEM DIAGRAM .....	10-16
FUNCTION OF UREA SCR SYSTEM .....	10-17
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-37
BOOT-UP SYSTEM .....	10-46
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-46

SYSTEM OPERATING LAMP SYSTEM .....	10-48
BATTERY DISCONNECT SWITCH .....	10-50
ENGINE SYSTEM .....	10-51
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-51
ENGINE CONTROL SYSTEM .....	10-53
AUTO-DECELERATION SYSTEM .....	10-56
ENGINE AUTOMATIC WARM-UP SYSTEM .....	10-58
OVERHEAT PREVENTION SYSTEM .....	10-60
TURBOCHARGER PROTECTION SYSTEM .....	10-63
AUTOMATIC IDLE STOP SYSTEM .....	10-65
COMPONENT PARTS OF ENGINE SYSTEM .....	10-69
COOLING SYSTEM.....	10-85
LAYOUT DRAWING OF COOLING SYSTEM .....	10-85
HYBRID SYSTEM.....	10-87
LAYOUT DRAWING OF HYBRID SYSTEM .....	10-87
SYSTEM DIAGRAM OF HYBRID SYSTEM.....	10-88
STRUCTURE OF HYBRID SYSTEM .....	10-89
HYBRID PROTECTION SYSTEM.....	10-90
COOLING SYSTEM OF HYBRID COMPONENTS .....	10-92
INTERLOCK SYSTEM OF HYBRID COMPONENTS .....	10-93
WORKER PROTECTION SYSTEM FOR WHEN DISASSEMBLING THE HYBRID COMPONENTS .....	10-94
COMPONENT PARTS OF HYBRID SYSTEM .....	10-96
CONTROL SYSTEM.....	10-103
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-103
MACHINE MONITOR SYSTEM .....	10-106
KomVision SYSTEM .....	10-107
KOMTRAX SYSTEM.....	10-111
PPC LEVERS .....	10-112
AUTOMATIC GREASE SYSTEM.....	10-114
COMPONENT PARTS OF CONTROL SYSTEM.....	10-129
HYDRAULIC SYSTEM.....	10-167
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-167
CLSS .....	10-170
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-190
PUMP AND VALVE CONTROL SYSTEM .....	10-196
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-199
WORK EQUIPMENT SYSTEM .....	10-282
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-282
STRUCTURE OF VALVE CONTROL .....	10-288
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-289
MACHINE PUSH-UP SYSTEM.....	10-291
PPC LOCK SYSTEM .....	10-293
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-294
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-296
TOOL CONTROL SYSTEM .....	10-298
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-300
SWING SYSTEM .....	10-333
LAYOUT DRAWING OF SWING SYSTEM .....	10-333
SWING CONTROL SYSTEM DIAGRAM .....	10-336
COMPONENT PARTS OF SWING SYSTEM.....	10-339
TRAVEL SYSTEM.....	10-343
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-343
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-347
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-349
UNDERCARRIAGE AND FRAME.....	10-370
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-370
WORK EQUIPMENT.....	10-372

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$