





---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-22
FOREWORD, SAFETY, BASIC INFORMATION .....	00-28
HOW TO READ THE SHOP MANUAL.....	00-28
SAFETY NOTICE FOR OPERATION.....	00-30
PRECAUTIONS PARTICULARLY FOR HYBRID MACHINES.....	00-38
PRECAUTIONS TO PREVENT FIRE.....	00-39
ACTIONS IF FIRE OCCURS .....	00-41
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS.....	00-42
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-43
METHOD FOR CHECKING ENGINE TYPE .....	00-44
PRECAUTIONS FOR DEF.....	00-46
STORE AdBlue/DEF .....	00-47
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT.....	00-48
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-51
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-58
PRECAUTIONS FOR MAINTENANCE OF HYBRID SYSTEM.....	00-60
PRECAUTIONS AGAINST HIGH VOLTAGE AND HIGH TEMPERATURE.....	00-61
PRECAUTIONS FOR NORMAL CHECK AND MAINTENANCE.....	00-62
PRECAUTIONS FOR THE MACHINE NOT TO BE TIPPED OVER AND FOR HYBRID COMPO- NENTS NOT TO BE DAMAGED .....	00-63
PRECAUTIONS FOR THE MACHINE NOT TO BE SUBMERGED.....	00-64
PRECAUTIONS FOR THE COLD SEASON.....	00-65
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT.....	00-66
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT.....	00-67
PRACTICAL USE OF KOMTRAX.....	00-68
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER.....	00-69
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS.....	00-73
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR.....	00-77
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR.....	00-78
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-80
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-81
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .. .....	00-83
HOW TO READ THE CODES (SYMBOLS) FOR ELECTRIC CABLE.....	00-84
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-90
STANDARD TIGHTENING TORQUE TABLE.....	00-93
CONVERSION TABLE.....	00-100
01 SPECIFICATIONS .....	01-1
CONTENTS.....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS .....	01-10
SPECIFICATIONS .....	01-11
WEIGHT TABLE .....	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-17
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS.....	10-2
ABBREVIATION LIST .....	10-6
UREA SCR SYSTEM.....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM.....	10-12
UREA SCR SYSTEM DIAGRAM .....	10-16
FUNCTION OF UREA SCR SYSTEM.....	10-17
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-43
BOOT-UP SYSTEM.....	10-52

LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-52
SYSTEM OPERATING LAMP SYSTEM .....	10-54
BATTERY DISCONNECT SWITCH .....	10-56
ENGINE SYSTEM .....	10-57
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-57
ENGINE CONTROL SYSTEM .....	10-59
AUTO-DECELERATION SYSTEM .....	10-62
ENGINE AUTOMATIC WARM-UP SYSTEM .....	10-64
OVERHEAT PREVENTION SYSTEM .....	10-66
TURBOCHARGER PROTECTION SYSTEM .....	10-69
AUTOMATIC IDLE STOP SYSTEM .....	10-71
COMPONENT PARTS OF ENGINE SYSTEM .....	10-75
COOLING SYSTEM.....	10-91
LAYOUT DRAWING OF COOLING SYSTEM .....	10-91
HYBRID SYSTEM.....	10-93
LAYOUT DRAWING OF HYBRID SYSTEM.....	10-93
SYSTEM DIAGRAM OF HYBRID SYSTEM.....	10-94
STRUCTURE OF HYBRID SYSTEM .....	10-95
HYBRID PROTECTION SYSTEM.....	10-96
COOLING SYSTEM OF HYBRID COMPONENTS .....	10-98
INTERLOCK SYSTEM OF HYBRID COMPONENTS .....	10-99
WORKER PROTECTION SYSTEM FOR WHEN DISASSEMBLING THE HYBRID COMPONENTS .....	10-100
COMPONENT PARTS OF HYBRID SYSTEM .....	10-102
CONTROL SYSTEM.....	10-109
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-109
MACHINE MONITOR SYSTEM .....	10-112
KomVision SYSTEM .....	10-113
KOMTRAX SYSTEM.....	10-117
PPC LEVERS .....	10-118
AUTOMATIC GREASE SYSTEM.....	10-120
COMPONENT PARTS OF CONTROL SYSTEM.....	10-135
HYDRAULIC SYSTEM.....	10-173
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-173
CLSS .....	10-176
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-196
PUMP AND VALVE CONTROL SYSTEM .....	10-202
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-205
WORK EQUIPMENT SYSTEM .....	10-288
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-288
STRUCTURE OF VALVE CONTROL .....	10-294
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-295
MACHINE PUSH-UP SYSTEM.....	10-297
PPC LOCK SYSTEM .....	10-299
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-300
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-302
TOOL CONTROL SYSTEM .....	10-304
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-306
SWING SYSTEM .....	10-339
LAYOUT DRAWING OF SWING SYSTEM .....	10-339
SWING CONTROL SYSTEM DIAGRAM .....	10-342
COMPONENT PARTS OF SWING SYSTEM.....	10-345
TRAVEL SYSTEM.....	10-349
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-349
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-353
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-355
UNDERCARRIAGE AND FRAME.....	10-376
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-376

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$