

Shop Manual

DUMP TRUCK

HD325-8E0
HD405-8E0

SERIAL NUMBERS

HD325-55001 and up
HD405-55001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATIONS	00-25
FOREWORD, SAFETY, BASIC INFORMATION	00-30
HOW TO READ THE SHOP MANUAL	00-30
SAFETY NOTICE FOR OPERATION	00-32
PRECAUTIONS TO PREVENT FIRE	00-40
ACTIONS IF FIRE OCCURS	00-41
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-41
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-42
PRECAUTIONS FOR DEF	00-43
STORE DEF	00-44
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-45
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-47
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-56
PRACTICAL USE OF KOMTRAX	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE	00-71
HOW TO READ ELECTRICAL WIRE CODE	00-72
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-76
STANDARD TIGHTENING TORQUE TABLE	00-78
CONVERSION TABLE	00-85
01 SPECIFICATIONS	01-1
ABBREVIATIONS	01-3
SPECIFICATIONS	01-8
SPECIFICATION DRAWING	01-8
SPECIFICATIONS	01-12
WEIGHT TABLE	01-22
FUEL, COOLANT, AND LUBRICATING OIL (EU SPECIFICATION)	01-24
10 STRUCTURE AND FUNCTION	10-1
ABBREVIATIONS	10-7
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-15
FUNCTION OF UREA SCR SYSTEM	10-16
COMPONENT PARTS OF UREA SCR SYSTEM	10-27
BOOT-UP SYSTEM	10-36
LAYOUT DRAWING OF BOOT-UP SYSTEM (For machines equipped with KOMTRAX terminal)	10-36
LAYOUT DRAWING OF BOOT-UP SYSTEM (For machines equipped with emergency engine stop switch) (For machines equipped with KOMTRAX terminal)	10-38
LAYOUT DRAWING OF BOOT-UP SYSTEM (For machines equipped with gateway function controller)	10-40
LAYOUT DRAWING OF BOOT-UP SYSTEM (For machines equipped with emergency engine stop switch) (For machines equipped with gateway function controller)	10-42

SYSTEM OPERATING LAMP SYSTEM	10-44
BATTERY DISCONNECT SWITCH	10-46
ENGINE SHUTDOWN SECONDARY SWITCH	10-48
ENGINE SYSTEM	10-50
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-50
ENGINE CONTROL SYSTEM	10-53
AUTOMATIC IDLE STOP SYSTEM	10-58
COMPONENT PARTS OF ENGINE SYSTEM	10-60
COOLING SYSTEM	10-78
LAYOUT DRAWING OF COOLING SYSTEM	10-78
RADIATOR FAN CONTROL SYSTEM	10-80
COMPONENT PARTS OF COOLING SYSTEM.....	10-82
CONTROL SYSTEM	10-97
LAYOUT DRAWING OF CONTROL SYSTEM (For machines equipped with KOMTRAX terminal)	10-97
LAYOUT DRAWING OF CONTROL SYSTEM (For machines equipped with gateway function controller)	10-99
RETARDER AND HOIST CONTROL SYSTEM	10-101
MACHINE MONITOR SYSTEM	10-103
REARVIEW MONITOR SYSTEM	10-107
KOMTRAX SYSTEM.....	10-108
PAYLOAD METER SYSTEM	10-110
DROWSINESS DETECTION SYSTEM.....	10-122
COMPONENT PARTS OF CONTROL SYSTEM	10-127
HYDRAULIC SYSTEM	10-188
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-188
COMPONENT PARTS OF HYDRAULIC SYSTEM.....	10-189
POWER TRAIN SYSTEM	10-208
LAYOUT DRAWING OF POWER TRAIN SYSTEM	10-208
TRANSMISSION CONTROL SYSTEM	10-211
GEAR SHIFT CONTROL SYSTEM.....	10-217
DIRECTION CONTROL SYSTEM	10-220
KOMATSU TRACTION CONTROL SYSTEM (KTCS).....	10-221
TRAVEL SPEED LIMITATION SYSTEM	10-223
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-227
WORK EQUIPMENT SYSTEM	10-274
WORK EQUIPMENT CONTROL	10-274
LAYOUT DRAWING OF WORK EQUIPMENT CONTROL	10-274
HOIST CONTROL.....	10-275
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM	10-277
STEERING SYSTEM	10-284
LAYOUT DRAWING OF STEERING SYSTEM.....	10-284
STEERING COLUMN	10-286
STEERING CONTROL LINKAGE.....	10-287
COMPONENT PARTS OF STEERING SYSTEM	10-288
BRAKE SYSTEM	10-306
LAYOUT DRAWING OF BRAKE SYSTEM	10-306
RETARDER CONTROL.....	10-307
ARSC SYSTEM	10-308
COMPONENT PARTS OF BRAKE SYSTEM.....	10-309
UNDERCARRIAGE AND FRAME	10-332
REAR AXLE SUPPORT	10-332

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$