

Shop Manual

DUMP TRUCK

HD785-8

SERIAL NUMBERS 50001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-26
How to Read the Shop Manual	00-26
Safety Notice for Operation	00-28
Precautions to Prevent Fire	00-36
Procedures If Fire Occurs	00-38
Precautions for Disposing of Waste Materials	00-39
Engine Technology to Conform Exhaust Gas Emission	00-40
Precautions When You Handle Hydraulic Equipment	00-41
Precautions When You Disconnect and Connect Pipings	00-44
Precautions When You Handle Electrical Equipment	00-51
Precautions When You Handle Fuel System Equipment	00-53
Precautions When You Handle Intake System Equipment	00-54
Practical Use of KOMTRAX	00-55
Disconnect and Connect Push-Pull Type Coupler	00-56
Precautions for Disconnection and Connection of Connectors	00-60
How to Disconnect and Connect Deutsch Connector	00-64
How to Disconnect and Connect Slide Lock Type Connector	00-65
How to Disconnect and Connect Connector with Lock to Pull	00-67
How to Disconnect and Connect Connector with Lock to Push	00-68
How to Disconnect and Connect Connector with Housing to Rotate	00-70
Standard Tightening Torque Table	00-71
Conversion Table	00-78
Abbreviation List	00-83
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Specifications	01-5
Weight Table	01-10
Fuel, Coolant, Lubricant	01-12
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-7
Layout Drawing of Boot-up System	10-7
Pre-lubrication System	10-10
System Operating Lamp System	10-13
Battery Disconnect Switch	10-14
Starting Motor Disconnect Switch	10-15
Preheating System	10-16
Engine Shutdown Secondary Switch	10-18
Emergency Engine Stop Switch	10-19
Engine System	10-20
Layout Drawing of Engine System	10-20
Engine Control System	10-22
Engine Power Mode Selector System	10-24
Automatic Idle Stop System	10-25
Component Parts of Engine System	10-27
Cooling System	10-48
Layout Drawing of Cooling System	10-48
Cooling Fan Control System	10-50
Component Parts of Cooling System	10-55
Control System	10-68
Layout Drawing of Control System	10-68
Layout Drawing of Control System (Machine with Mobile Communication Terminal)	10-70
Machine Monitor System	10-72

Rearview Monitor System	10-74
KOMTRAX Plus System	10-75
Payload Meter System	10-82
Machine Lock-out System	10-90
Automatic Suspension System	10-94
Drowsiness Detection System	10-97
Component Parts of Control System	10-102
Hydraulic System	10-183
Layout Drawing of Hydraulic System	10-183
Component Parts of Hydraulic System	10-184
Power Train System	10-207
Layout Drawing of Power Train System	10-207
Transmission Control System	10-211
Transmission Gear Shift Control System	10-213
Transmission Protection Function	10-215
Gear Shift Control System	10-219
Komatsu Traction Control System (KTCS)	10-222
Travel Speed Limitation System	10-224
Component Parts of Power Train System	10-228
Work Equipment System	10-280
Layout Drawing of Work Equipment System	10-280
Hoist Control System	10-282
Buddy System	10-284
Component Parts of Work Equipment System	10-286
Steering System	10-292
Layout Drawing of Steering System	10-292
Secondary Steering System	10-293
Steering Column	10-294
Steering Linkage	10-295
Component Parts of Steering System	10-296
Brake System	10-311
Layout Drawing of Brake System	10-311
Retarder Control	10-314
ARSC System	10-316
ABS	10-318
Component Parts of Brake System	10-323
Undercarriage and Frame	10-348
Suspension	10-348
Front Suspension	10-350
Rear Suspension	10-351
Front Suspension Cylinder	10-352
Rear Suspension Cylinder	10-358
Tires	10-360
Work Equipment	10-361
Structure of Work Equipment	10-361
Function of Work Equipment	10-362
CAB Related Parts	10-363
ROPS CAB	10-363
CAB Mount	10-364
Lifting System	10-365
Power Ladder System	10-365
Power Ladder System	10-368
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine HD785-8	20-3
Standard Value Table for Machine	20-8
Standard Value Table for Machine HD785-8	20-8

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$