

# Shop Manual

DUMP TRUCK

***HD785-8R***

SERIAL NUMBERS    58001    and up

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information .....	00-22
How to Read the Shop Manual .....	00-22
Safety Notice for Operation .....	00-24
Precautions to Prevent Fire .....	00-32
Procedures If Fire Occurs .....	00-34
Precautions for Disposing of Waste Materials .....	00-35
Precautions When You Handle Hydraulic Equipment .....	00-36
Precautions When You Disconnect and Connect Pipings .....	00-39
Precautions When You Handle Electrical Equipment .....	00-46
Precautions When You Handle Fuel System Equipment .....	00-48
Precautions When You Handle Intake System Equipment .....	00-49
Practical Use of KOMTRAX .....	00-50
Disconnect and Connect Push-Pull Type Coupler .....	00-51
Precautions for Disconnection and Connection of Connectors .....	00-55
How to Disconnect and Connect Deutsch Connector .....	00-59
How to Disconnect and Connect Slide Lock Type Connector .....	00-60
How to Disconnect and Connect Connector with Lock to Pull .....	00-62
How to Disconnect and Connect Connector with Lock to Push .....	00-63
How to Disconnect and Connect Connector with Housing to Rotate .....	00-65
Standard Tightening Torque Table .....	00-66
Conversion Table .....	00-73
Abbreviation List .....	00-78
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Specifications .....	01-5
Weight Table .....	01-10
Fuel, Coolant, Lubricant .....	01-12
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Boot-up System .....	10-7
Layout Drawing of Boot-up System .....	10-7
Pre-lubrication System .....	10-10
System Operating Lamp System .....	10-13
Battery Disconnect Switch .....	10-14
Starting Motor Disconnect Switch .....	10-15
Preheating System .....	10-16
Engine Shutdown Secondary Switch .....	10-18
Emergency Engine Stop Switch .....	10-19
Engine System .....	10-20
Layout Drawing of Engine System .....	10-20
Engine Control System .....	10-22
Engine Power Mode Selector System .....	10-24
Automatic Idle Stop System .....	10-25
Component Parts of Engine System .....	10-27
Cooling System .....	10-32
Layout Drawing of Cooling System .....	10-32
Control System .....	10-34
Layout Drawing of Control System .....	10-34
Layout Drawing of Control System (Machine with Mobile Communication Terminal) .....	10-36
Machine Monitor System .....	10-38
Rearview Monitor System .....	10-40
KOMTRAX Plus System .....	10-41
Payload Meter System .....	10-48

Automatic Suspension System.....	10-56
Drowsiness Detection System.....	10-59
Component Parts of Control System .....	10-62
Hydraulic System .....	10-136
Layout Drawing of Hydraulic System.....	10-136
Component Parts of Hydraulic System.....	10-137
Power Train System.....	10-160
Layout Drawing of Power Train System .....	10-160
Transmission Control System.....	10-164
Transmission Gear Shift Control System.....	10-166
Transmission Protection Function .....	10-168
Gear Shift Control System.....	10-172
Komatsu Traction Control System (KTCS) .....	10-175
Travel Speed Limitation System.....	10-177
Component Parts of Power Train System.....	10-181
Work Equipment System.....	10-233
Layout Drawing of Work Equipment System .....	10-233
Hoist Control System .....	10-235
Component Parts of Work Equipment System .....	10-238
Steering System.....	10-244
Layout Drawing of Steering System .....	10-244
Secondary Steering System.....	10-245
Steering Column .....	10-246
Steering Linkage .....	10-247
Component Parts of Steering System .....	10-248
Brake System.....	10-263
Layout Drawing of Brake System .....	10-263
Retarder Control .....	10-266
ARSC System .....	10-268
ABS .....	10-270
Exhaust Brake.....	10-275
Component Parts of Brake System .....	10-278
Undercarriage and Frame .....	10-303
Suspension .....	10-303
Front Suspension.....	10-305
Rear Suspension .....	10-306
Front Suspension Cylinder .....	10-307
Rear Suspension Cylinder.....	10-313
Tires.....	10-315
Work Equipment .....	10-316
Structure of Work Equipment .....	10-316
Function of Work Equipment .....	10-317
CAB Related Parts .....	10-318
ROPS CAB .....	10-318
CAB Mount .....	10-319
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine HD785-8R .....	20-3
Standard Value Table for Machine.....	20-8
Standard Value Table for Machine HD785-8R .....	20-8
Machine Posture and Procedures to Measure Performance .....	20-28
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-6
Related Information on Testing and Adjusting .....	30-7
Tools for Testing and Adjusting.....	30-7
Sketch of Tools for Testing and Adjusting .....	30-18

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$