

Shop Manual

ARTICULATED
DUMP TRUCK

HM250-2

SERIAL NUMBERS 2001 and up

ecot3

KOMATSU

ARTICULATED DUMP TRUCK

HM250-2

Machine model	Serial number
HM250-2	2001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04733-10
00 Index and foreword	SEN04734-10
100 Index	SEN04735-10
200 Foreword and general information	SEN04736-02
01 Specification	SEN04737-00
100 Specification and technical data	SEN04738-00
10 Structure, function and maintenance standard	SEN04739-01
100 Engine and cooling system	SEN04740-00
201 Power train, Part 1	SEN04741-00
202 Power train, Part 2	SEN04742-00
300 Steering system	SEN04743-00
400 Brake system	SEN04744-00
500 Undercarriage and frame	SEN04745-00
600 Hydraulic system	SEN04746-00
700 Cab and its attachments	SEN04747-01
801 Electrical system, Part 1	SEN04748-00
802 Electrical system, Part 2	SEN04749-00
803 Electrical system, Part 3	SEN04750-00
20 Standard value table	SEN04751-01
100 Standard service value table	SEN04816-01
30 Testing and adjusting	SEN04752-06
101 Testing and adjusting, Part 1	SEN04817-05
102 Testing and adjusting, Part 2	SEN04818-03
103 Testing and adjusting, Part 3	SEN04819-02
40 Troubleshooting	SEN04753-03
100 Failure code table and fuse locations	SEN04820-00
200 General information on troubleshooting	SEN04821-03
301 Troubleshooting by failure code, Part 1	SEN04822-01
302 Troubleshooting by failure code, Part 2	SEN04823-01
303 Troubleshooting by failure code, Part 3	SEN04824-01
304 Troubleshooting by failure code, Part 4	SEN04825-01
305 Troubleshooting by failure code, Part 5	SEN04826-01
306 Troubleshooting by failure code, Part 6	SEN04827-01
307 Troubleshooting by failure code, Part 7	SEN04828-00
308 Troubleshooting by failure code, Part 8	SEN04829-00
400 Troubleshooting of electrical system (E-mode)	SEN04830-00
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04831-00
600 Troubleshooting of engine (S-mode)	SEN04832-00

50 Disassembly and assembly	SEN04754-06
100 General information on disassembly and assembly	SEN04911-04
200 Engine and cooling system	SEN04912-01
301 Power train, Part 1	SEN04913-01
302 Power train, Part 2	SEN04914-00
303 Power train, Part 3	SEN04915-00
304 Power train, Part 4	SEN04916-01
305 Power train, Part 5	SEN04917-01
400 Undercarriage and frame	SEN04918-01
500 Hydraulic system	SEN04919-01
600 Body	SEN04920-01
700 Cab and its attachments	SEN04921-02
800 Electrical system	SEN04922-00
60 Air conditioner	SEN04961-01
100 Structure, function, testing, adjusting, and troubleshooting	SEN04962-01
90 Diagrams and drawings	SEN04755-03
100 Hydraulic diagrams and drawings	SEN04756-00
200 Electrical diagrams and drawings	SEN04757-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$