

# Shop Manual

ARTICULATED  
DUMP TRUCK

**HM350-2**

SERIAL NUMBERS 2001 and up

**ecot3**

**KOMATSU**



---

# ARTICULATED DUMP TRUCK

## HM350-2

Machine model	Serial number
HM350-2	2001 and up

---

## 00 Index and foreword

### Index

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00238-17
00 Index and foreword	SEN00487-17
Index	SEN00488-17 ●
Foreword and general information	SEN00489-05
01 Specification	SEN00490-01
Specification and technical data	SEN00491-01
10 Structure, function and maintenance standard	SEN00492-04
Engine and cooling system	SEN00493-01
Power train, Part 1	SEN00494-01
Power train, Part 2	SEN00495-02
Steering system	SEN00496-01
Brake system	SEN00497-02
Undercarriage and frame	SEN00498-02
Hydraulic system	SEN00499-02
Cab and its attachments	SEN00500-01
Electrical system, Part 1	SEN00501-01
Electrical system, Part 2	SEN00502-03
Electrical system, Part 3	SEN00503-01
20 Standard value table	SEN00504-02
Standard service value table	SEN01481-02
30 Testing and adjusting	SEN00505-07
Testing and adjusting, Part 1	SEN01482-07 ●
Testing and adjusting, Part 2	SEN01483-06 ●
Testing and adjusting, Part 3	SEN01484-03 ●
40 Troubleshooting	SEN00506-05
General information on troubleshooting	SEN01485-04
Troubleshooting by failure code, General	SEN01486-01
Troubleshooting by failure code, Part 1	SEN01487-01 ●
Troubleshooting by failure code, Part 2	SEN01488-01
Troubleshooting by failure code, Part 3	SEN01489-03

---

Troubleshooting by failure code, Part 4	SEN01490-04 ●
Troubleshooting by failure code, Part 5	SEN01491-02 ●
Troubleshooting by failure code, Part 6	SEN01492-01
Troubleshooting by failure code, Part 7	SEN01493-00
Troubleshooting by failure code, Part 8	SEN01494-01 ●
Troubleshooting for electrical system (E-mode)	SEN01495-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01496-00
Troubleshooting of engine (S-mode)	SEN01497-01
50 Disassembly and assembly	SEN00507-10
General information on disassembly and assembly	SEN01471-08 ●
Engine and cooling system	SEN01472-05
Power train, Part 1	SEN01473-05
Power train, Part 2	SEN01474-02 ●
Power train, Part 3	SEN01475-03 ●
Undercarriage and frame	SEN01476-06
Hydraulic system	SEN01477-03
Cab and its attachments	SEN01478-03
Electrical system	SEN01479-02
90 Diagrams and drawings	SEN00508-08
Hydraulic diagrams and drawings	SEN00509-02
Electrical diagrams and drawings	SEN00510-08

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$