

Shop Manual

ARTICULATED
DUMP TRUCK

HM350-2

SERIAL NUMBERS 2001 and up

ecot3

KOMATSU

ARTICULATED DUMP TRUCK

HM350-2

Machine model	Serial number
HM350-2	2001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00238-20
00 Index and foreword	SEN00487-20
Index	SEN00488-20
Foreword and general information	SEN00489-07
01 Specification	SEN00490-01
Specification and technical data	SEN00491-01
10 Structure, function and maintenance standard	SEN00492-04
Engine and cooling system	SEN00493-01
Power train, Part 1	SEN00494-01
Power train, Part 2	SEN00495-02
Steering system	SEN00496-01
Brake system	SEN00497-02
Undercarriage and frame	SEN00498-02
Hydraulic system	SEN00499-02
Cab and its attachments	SEN00500-01
Electrical system, Part 1	SEN00501-01
Electrical system, Part 2	SEN00502-03
Electrical system, Part 3	SEN00503-01
20 Standard value table	SEN00504-02
Standard service value table	SEN01481-02
30 Testing and adjusting	SEN00505-09
Testing and adjusting, Part 1	SEN01482-09
Testing and adjusting, Part 2	SEN01483-06
Testing and adjusting, Part 3	SEN01484-03
40 Troubleshooting	SEN00506-07
General information on troubleshooting	SEN01485-05
Troubleshooting by failure code, General	SEN01486-01
Troubleshooting by failure code, Part 1	SEN01487-02
Troubleshooting by failure code, Part 2	SEN01488-02
Troubleshooting by failure code, Part 3	SEN01489-03
Troubleshooting by failure code, Part 4	SEN01490-04
Troubleshooting by failure code, Part 5	SEN01491-03
Troubleshooting by failure code, Part 6	SEN01492-01
Troubleshooting by failure code, Part 7	SEN01493-01
Troubleshooting by failure code, Part 8	SEN01494-02
Troubleshooting for electrical system (E-mode)	SEN01495-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01496-00
Troubleshooting of engine (S-mode)	SEN01497-01

50 Disassembly and assembly	SEN00507-12
General information on disassembly and assembly	SEN01471-09
Engine and cooling system	SEN01472-05
Power train, Part 1	SEN01473-05
Power train, Part 2	SEN01474-02
Power train, Part 3	SEN01475-04
Undercarriage and frame	SEN01476-06
Hydraulic system	SEN01477-03
Cab and its attachments	SEN01478-03
Electrical system	SEN01479-02
90 Diagrams and drawings	SEN00508-08
Hydraulic diagrams and drawings	SEN00509-02
Electrical diagrams and drawings	SEN00510-08

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$