

Shop Manual

ARTICULATED
DUMP TRUCK

HM350-2R

SERIAL NUMBERS 7001 and up

KOMATSU

ARTICULATED DUMP TRUCK

HM350-2R

Machine model Serial number

HM350-2R 7001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03017-13
00 Index and foreword	SEN03018-13
Index	SEN03019-13
Foreword and general information	SEN03020-04
01 Specification	SEN03021-00
Specification and technical data	SEN03022-00
10 Structure, function and maintenance standard	SEN03023-01
Engine and cooling system	SEN03024-00
Power train, Part 1	SEN03025-01
Power train, Part 2	SEN03026-01
Steering system	SEN03027-00
Brake system	SEN03028-00
Undercarriage and frame	SEN03029-00
Hydraulic system	SEN03030-00
Cab and its attachments	SEN03031-00
Electrical system, Part 1	SEN03032-00
Electrical system, Part 2	SEN03033-00
Electrical system, Part 3	SEN03034-00
20 Standard value table	SEN03035-00
Standard service value table	SEN03347-00
30 Testing and adjusting	SEN03036-05
Testing and adjusting, Part 1	SEN03348-05
Testing and adjusting, Part 2	SEN03349-03
Testing and adjusting, Part 3	SEN03350-01
40 Troubleshooting	SEN03037-05
Failure code table and fuse locations	SEN03351-01
General information on troubleshooting	SEN03352-03
Troubleshooting by failure code (Display of code), Part 1	SEN03353-02
Troubleshooting by failure code (Display of code), Part 2	SEN03354-02
Troubleshooting by failure code (Display of code), Part 3	SEN03355-02
Troubleshooting by failure code (Display of code), Part 4	SEN03356-03
Troubleshooting by failure code (Display of code), Part 5	SEN03357-03
Troubleshooting by failure code (Display of code), Part 6	SEN03358-01
Troubleshooting by failure code (Display of code), Part 7	SEN03359-01
Troubleshooting by failure code (Display of code), Part 8	SEN03360-02
Troubleshooting of electrical system (E-mode)	SEN03361-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03362-00
Troubleshooting of engine (S-mode)	SEN03363-01

50 Disassembly and assembly	SEN03038-08
General information on disassembly and assembly	SEN04135-04
Engine and cooling system (SAA6D140E-5)	SEN04136-00
Engine (SAA6D140E-5)	SEN04137-02
Power train, Part 1	SEN04138-02
Power train, Part 2 (Differential)	SEN04139-01
Power train, Part 3 (Final drive, brake, axle)	SEN04140-03
Undercarriage and frame	SEN04141-03
Hydraulic system	SEN04142-00
Cab and its attachments	SEN04143-01
Electrical system	SEN04144-00
90 Diagrams and drawings	SEN03039-03
Hydraulic diagrams and drawings	SEN03040-00
Electrical diagrams and drawings	SEN03041-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$