

Shop Manual

ARTICULATED
DUMP TRUCK

HM400-2

SERIAL NUMBERS 2001 and up

ecot3

KOMATSU

ARTICULATED DUMP TRUCK

HM400-2

Machine model	Serial number
HM400-2	2001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00239-23
00 Index and foreword	SEN00511-23
Index	SEN00512-23 ●
Foreword and general information	SEN00513-05
01 Specification	SEN00514-01
Specification and technical data	SEN00515-01
10 Structure, function and maintenance standard	SEN00516-07
Engine and cooling system	SEN00517-01
Power train, Part 1	SEN00518-01
Power train, Part 2	SEN00519-03
Steering system	SEN00520-01
Brake system	SEN00521-03
Undercarriage and frame	SEN00522-03
Hydraulic system	SEN00523-02
Cab and its attachments	SEN00524-02
Electrical system, Part 1	SEN00525-01
Electrical system, Part 2	SEN00526-04
Electrical system, Part 3	SEN04228-01
Electrical system, Part 4	SEN00527-03
20 Standard value table	SEN00528-03
Standard service value table	SEN00915-03
30 Testing and adjusting	SEN00529-14
Testing and adjusting, Part 1	SEN00916-09 ●
Testing and adjusting, Part 2	SEN00917-11 ●
Testing and adjusting, Part 3	SEN00918-05 ●
40 Troubleshooting	SEN00530-10
General information on troubleshooting	SEN01107-04
Troubleshooting by failure code, General	SEN01262-01
Troubleshooting by failure code, Part 1	SEN01108-01 ●
Troubleshooting by failure code, Part 2	SEN01109-02

Troubleshooting by failure code, Part 3	SEN01110-03
Troubleshooting by failure code, Part 4	SEN01111-04
Troubleshooting by failure code, Part 5	SEN01112-03 ●
Troubleshooting by failure code, Part 6	SEN01113-01
Troubleshooting by failure code, Part 7	SEN01114-00
Troubleshooting by failure code, Part 8	SEN01115-01 ●
Troubleshooting for electrical system (E-mode)	SEN01116-04
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01117-00
Troubleshooting of engine (S-mode)	SEN01118-01
50 Disassembly and assembly	SEN00531-15
General information on disassembly and assembly	SEN01442-08
Engine and cooling system	SEN01443-06
Power train, Part 1	SEN01444-08
Power train, Part 2	SEN01445-04
Power train, Part 3	SEN01446-04 ●
Undercarriage and frame	SEN01447-07
Hydraulic system	SEN01448-04
Cab and its attachments	SEN01449-03
Electrical system	SEN01450-02
90 Diagrams and drawings	SEN00532-08
Hydraulic diagrams and drawings	SEN00533-02
Electrical diagrams and drawings	SEN00534-08

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$