

# Shop Manual

ARTICULATED  
DUMP TRUCK

**HM400-2R**

SERIAL NUMBERS 7001 and up

**KOMATSU**



---

# ARTICULATED DUMP TRUCK

## HM400-2R

Machine model	Serial number
HM400-2R	7001 and up

---

## 00 Index and foreword

### Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03042-18
00 Index and foreword	SEN03043-18
Index	SEN03044-18
Foreword and general information	SEN03045-03
01 Specification	SEN03046-00
Specification and technical data	SEN03047-00
10 Structure, function and maintenance standard	SEN03048-06
Engine and cooling system	SEN03049-00
Power train, Part 1	SEN03050-01
Power train, Part 2	SEN03051-02
Steering system	SEN03052-00
Brake system	SEN03053-01
Undercarriage and frame	SEN03054-01
Hydraulic system	SEN03055-00
Cab and its attachments	SEN03056-00
Electrical system, Part 1	SEN03057-00
Electrical system, Part 2	SEN03058-00
Electrical system, Part 3	SEN04229-02
Electrical system, Part 4	SEN03059-02
20 Standard value table	SEN03060-00
Standard service value table	SEN03132-00
30 Testing and adjusting	SEN03061-07
Testing and adjusting, Part 1	SEN03133-06
Testing and adjusting, Part 2	SEN03134-04
Testing and adjusting, Part 3	SEN03135-03
40 Troubleshooting	SEN03062-07
Failure code table and fuse locations	SEN03136-02
General information on troubleshooting	SEN03137-03
Troubleshooting by failure code (Display of code), Part 1	SEN03138-03
Troubleshooting by failure code (Display of code), Part 2	SEN03139-02
Troubleshooting by failure code (Display of code), Part 3	SEN03140-02
Troubleshooting by failure code (Display of code), Part 4	SEN03141-04
Troubleshooting by failure code (Display of code), Part 5	SEN03142-04
Troubleshooting by failure code (Display of code), Part 6	SEN03143-02
Troubleshooting by failure code (Display of code), Part 7	SEN03144-02
Troubleshooting by failure code (Display of code), Part 8	SEN03145-03
Troubleshooting of electrical system (E-mode)	SEN03146-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03147-00

---

Troubleshooting of engine (S-mode)	SEN03148-01
50 Disassembly and assembly	SEN03063-08
General information on disassembly and assembly	SEN03122-04
Engine and cooling system (SAA6D140E-5)	SEN03123-00
Engine (SAA6D140E-5)	SEN03124-02
Power train, Part 1	SEN03125-02
Power train, Part 2 (Differential)	SEN03126-02
Power train, Part 3 (Final drive, brake, axle)	SEN03127-03
Undercarriage and frame	SEN03128-03
Hydraulic system	SEN03129-00
Cab and its attachments	SEN03130-01
Electrical system	SEN03131-00
90 Diagrams and drawings	SEN03064-06
Hydraulic diagrams and drawings	SEN03065-00
Electrical diagrams and drawings	SEN03066-06

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$