

Shop Manual

ARTICULATED
DUMP TRUCK

HM400-3

SERIAL NUMBERS 3001 and up

KOMATSU

ARTICULATED DUMP TRUCK

HM400-3

Model Serial Number

HM400-3 3001 and up

00 Index and foreword

Index

| | |
|--|--------|
| 00 Index and foreword | 00-1 |
| Index | 00-2 |
| Foreword, safety and general information | 00-17 |
| Important safety notice | 00-17 |
| How to read the shop manual | 00-24 |
| Explanation of terms for maintenance standard | 00-26 |
| Handling equipment of fuel system devices | 00-28 |
| Handling of intake system parts | 00-29 |
| Handling of hydraulic equipment | 00-30 |
| Method of disconnecting and connecting of push-pull type coupler | 00-32 |
| Handling of electrical equipment | 00-35 |
| How to read electric wire code | 00-43 |
| Precautions when performing operation | 00-46 |
| Practical use of KOMTRAX | 00-51 |
| Standard tightening torque table | 00-52 |
| List of abbreviation | 00-58 |
| Conversion table | 00-63 |
| 01 Specification | 01-1 |
| Table of contents | 01-2 |
| Specifications | 01-3 |
| Specification drawing | 01-3 |
| Specifications | 01-5 |
| Weight table | 01-11 |
| Table of fuel, coolant, and lubricants | 01-12 |
| 10 Structure and function | 10-1 |
| Table of contents | 10-2 |
| Engine and cooling system | 10-4 |
| Engine related parts | 10-4 |
| Output shaft | 10-6 |
| VGT | 10-7 |
| EGR system piping drawing | 10-13 |
| EGR system circuit diagram | 10-15 |
| EGR valve | 10-16 |
| EGR cooler | 10-18 |
| KCCV layout drawing | 10-20 |
| KCCV ventilator | 10-22 |
| KDPF | 10-24 |
| Cooling system | 10-30 |
| Radiator fan pump | 10-32 |
| Aftercooler fan motor | 10-41 |
| Radiator fan motor | 10-52 |
| Center brake cooling remote motor | 10-61 |
| Center brake cooling remote pump | 10-65 |
| Oil cooler bypass valve | 10-66 |
| Power train | 10-67 |
| Power train system | 10-67 |
| Drive shaft | 10-69 |
| Torque converter and transmission hydraulic piping | 10-70 |
| Torque converter | 10-71 |
| Transmission | 10-77 |
| Transmission control valve | 10-102 |
| Forward and reverse clutch ECMV and gear speed clutch ECMV | 10-105 |
| Lockup clutch ECMV | 10-112 |
| Differential lock clutch ECMV | 10-116 |
| Main relief valve, torque converter relief valve, and main flow selector valve | 10-120 |
| Axle | 10-126 |
| Differential | 10-129 |
| Final drive | 10-133 |

| | |
|---|---------|
| Steering system..... | 10-136 |
| Layout of steering devices | 10-136 |
| Steering column..... | 10-137 |
| Flow amplifier valve..... | 10-138 |
| Steering valve..... | 10-142 |
| Emergency steering pump | 10-147 |
| Brake system | 10-149 |
| Layout of brake parts..... | 10-149 |
| Parking brake solenoid and accumulator charge valve | 10-151 |
| Accumulator | 10-157 |
| Shut off solenoid valve..... | 10-158 |
| Brake valve | 10-159 |
| Proportional pressure reducing valve | 10-164 |
| Slack adjuster..... | 10-166 |
| Brake | 10-170 |
| Brake system tank | 10-173 |
| Parking brake | 10-174 |
| Undercarriage and frame..... | 10-177 |
| Suspension | 10-177 |
| Suspension cylinder..... | 10-181 |
| Oscillation hitch | 10-184 |
| Hydraulic system | 10-185 |
| Hydraulic component layout..... | 10-185 |
| Dump body control..... | 10-187 |
| Hydraulic tank..... | 10-188 |
| Steering and hoist pump..... | 10-189 |
| Hoist valve | 10-200 |
| Steering pump selector solenoid valve..... | 10-206 |
| Dump EPC valve | 10-207 |
| Center brake cooling remote motor..... | 10-209 |
| Front brake cooling relief valve | 10-218 |
| Center brake cooling relief valve..... | 10-219 |
| Cab and its attachments..... | 10-220 |
| ROPS cab..... | 10-220 |
| Cab tilt | 10-221 |
| Electrical system | 10-222 |
| Electrical control system..... | 10-222 |
| Machine monitor system..... | 10-251 |
| Rear view monitor system..... | 10-274 |
| KOMTRAX system..... | 10-278 |
| System component parts..... | 10-282 |
| Sensor..... | 10-309 |
| 20 Standard value tables..... | 20-1 |
| Table of contents | 20-2 |
| Standard service value table..... | 20-3 |
| Standard value table for engine | 20-3 |
| Standard value table for machine | 20-5 |
| 30 Testing and adjusting | 30-1 |
| Table of contents | 30-2 |
| Precautions before work..... | 30-3-1 |
| Related information on testing and adjusting | 30-4 |
| Tools for testing and adjusting | 30-4 |
| Sketch of tools for testing and adjusting | 30-10 |
| Engine and cooling system..... | 30-13 |
| Testing engine speed | 30-13 |
| Testing boost pressure | 30-14 |
| Testing exhaust gas temperature..... | 30-16 |
| Testing exhaust gas color | 30-18 |
| Test mass air flow and temperature sensor | 30-19-1 |
| Adjusting valve clearance | 30-20 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$