

Shop Manual

ARTICULATED
DUMP TRUCK

HM400-3R

SERIAL NUMBERS 8001 and up

KOMATSU

ARTICULATED DUMP TRUCK

HM400-3R

Model Serial Number

HM400-3R 8001 and up

00 Index and foreword

Index

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-16
Important safety notice	00-16
How to read the shop manual	00-23
Explanation of terms for maintenance standard	00-25
Handling equipment of fuel system devices	00-27
Handling of intake system parts	00-28
Handling of hydraulic equipment	00-29
Method of disconnecting and connecting of push-pull type coupler	00-31
Handling of electrical equipment	00-34
How to read electric wire code	00-42
Precautions when performing operation	00-45
Practical use of KOMTRAX	00-50
Standard tightening torque table	00-51
List of abbreviation	00-57
Conversion table	00-62
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specifications	01-5
Weight table	01-11
Table of fuel, coolant, and lubricants	01-12
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-4
Engine related parts	10-4
Output shaft	10-5
Turbocharger	10-6
Muffler	10-8
Cooling system	10-9
Radiator fan pump	10-11
Aftercooler fan motor	10-19
Radiator fan motor	10-30
Center brake cooling remote motor	10-39
Center brake cooling remote pump	10-43
Oil cooler bypass valve	10-44
Power train	10-45
Power train system	10-45
Drive shaft	10-47
Torque converter and transmission hydraulic piping	10-48
Torque converter	10-49
Transmission	10-55
Transmission control valve	10-80
Forward and reverse clutch ECMV and gear speed clutch ECMV	10-83
Lockup clutch ECMV	10-90
Differential lock clutch ECMV	10-94
Main relief valve, torque converter relief valve, and main flow selector valve	10-98
Axle	10-104
Differential	10-107
Final drive	10-111
Steering system	10-115
Layout of steering devices	10-115
Steering column	10-116
Flow amplifier valve	10-117
Steering valve	10-121
Emergency steering pump	10-127

Emergency steering motor	10-128
Brake system	10-129
Layout of brake parts	10-129
Parking brake solenoid and accumulator charge valve	10-131
Accumulator	10-137
Shut off solenoid valve	10-138
Brake valve	10-139
Proportional pressure reducing valve	10-144
Slack adjuster	10-146
Brake	10-150
Brake system tank	10-153
Parking brake	10-154
Undercarriage and frame	10-157
Suspension	10-157
Suspension cylinder	10-161
Oscillation hitch	10-164
Hydraulic system	10-165
Hydraulic component layout	10-165
Dump body control	10-167
Hydraulic tank	10-168
Steering and hoist pump	10-169
Hoist valve	10-179
Steering pump selector solenoid valve	10-185
Dump EPC valve	10-186
Center brake cooling remote motor	10-188
Front brake cooling relief valve	10-197
Center brake cooling relief valve	10-198
Cab and its attachments	10-199
ROPS cab	10-199
Cab tilt	10-200
Electrical system	10-201
Electrical control system	10-201
Machine monitor system	10-230
KOMTRAX system	10-253
System component parts	10-257
Sensor	10-283
20 Standard value tables	20-1
Table of contents	20-2
Standard service value table	20-3
Standard value table for engine	20-3
Standard value table for machine	20-6
30 Testing and adjusting	30-1
Table of contents	30-2
Precautions before work	30-2-2
Related information on testing and adjusting	30-3
Tools for testing and adjusting	30-3
Sketch of tools for testing and adjusting	30-8
Engine and cooling system	30-9
Testing engine speed	30-9
Testing boost pressure	30-10
Testing exhaust gas temperature	30-12
Testing exhaust gas color	30-14
Adjusting valve clearance	30-16
Testing compression pressure	30-18
Testing blowby pressure	30-20
Testing engine oil pressure	30-21
Testing fuel pressure	30-23
Handling cylinder cutout mode operation	30-24
Handling no-injection cranking operation	30-25
Testing fuel return rate and leakage	30-26

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$