
## **Shop Manual**

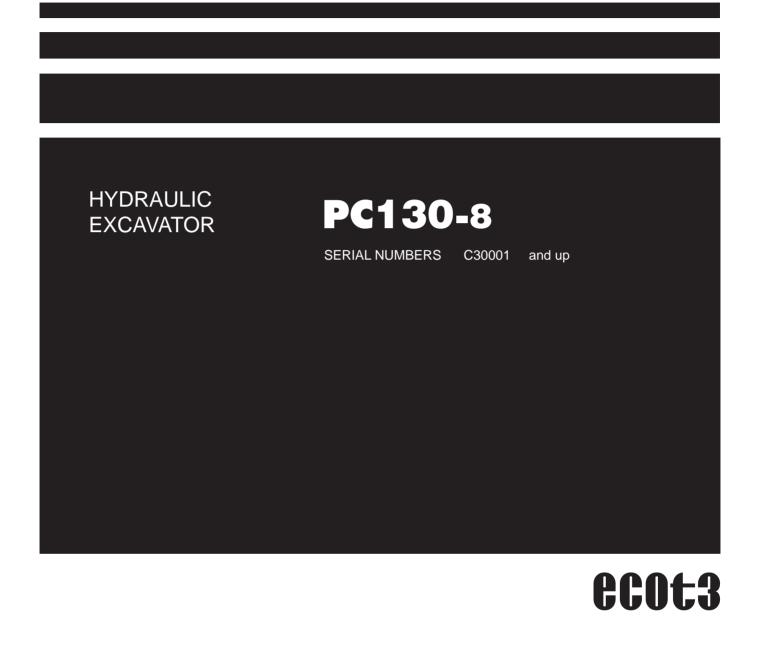



### **SHOP MANUAL**

# HYDRAULIC EXCAVATOR PC130-8

Machine model Serial number

PC130-8 C30001 and up

## **00 Index and foreword** Index

Composition of shop manual	2
Table of contents	

#### **Composition of shop manual**

The contents of this shop manual are shown together with Form No. in a list.

- Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly. The marks shown to the right of Form No. denote the following:
  - ○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)
- Note 2: This shop manual can be supplied for each Form No.
- Note 3: To file this shop manual in the special binder for management, handle it as follows:
  - Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
  - File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03763-13TH
00 Index and foreword	SEN03764-13
Index	SEN03765-13 ●
Foreword and general information	SEN03766-02
01 Specification	SEN03767-01
Specification and technical data	SEN03768-01
10 Structure, function and maintenance standard	SEN03769-06
Engine and cooling system	SEN03770-01
Power train	SEN03771-01
Undercarriage and frame	SEN03772-01
Hydraulic system, Part 1	SEN03773-00
Hydraulic system, Part 2	SEN03774-01
Hydraulic system, Part 3	SEN03775-04
Work equipment	SEN03776-00
Cab and its attachments	SEN03777-00
Electrical system	SEN03778-03 ●
20 Standard value table	SEN03779-02
Standard service value table	SEN04113-02
30 Testing and adjusting	SEN03780-06
Testing and adjusting, Part 1	SEN04114-06 ●
Testing and adjusting, Part 2	SEN04115-04 ●
Testing and adjusting, Part 3	SEN04116-00
40 Troubleshooting	SEN03781-05
Failure code table and fuse locations	SEN04117-03
General information on troubleshooting	SEN04118-02
Troubleshooting by failure code, Part 1	SEN04119-01
Troubleshooting by failure code, Part 2	SEN04120-03
Troubleshooting by failure code, Part 3	SEN04121-02 ●
Troubleshooting by failure code, Part 4	SEN04122-01
Troubleshooting of electrical system (E-mode)	SEN04123-01

Hydraulic diagrams and drawings

Electrical diagrams and drawings

Troubleshooting of hydraulic and mechanical system (H-mode) Troubleshooting of engine (S-mode)	SEN04124-00 SEN04125-02
50 Disassembly and assembly General information on disassembly and assembly	SEN03782-07 SEN04126-02
Engine and cooling system	SEN04127-02
Power train	SEN04128-01
Undercarriage and frame	SEN04129-02
Hydraulic system	SEN04130-01
Work equipment	SEN04131-00
Cab and its attachments	SEN04132-01
Electrical system	SEN04134-00
90 Diagrams and drawings	SEN03783-02
Linder die die energie en dieler die ee	

03/03 SEN03784-00

SEN03785-02 •

It's a preview. You can download the full file by clicking the link below.

# https://shopservicemanual.com/

Service Manuals from 2\$