

# Shop Manual

HYDRAULIC  
EXCAVATOR

# PC138US-10

SERIAL NUMBERS PC138US-10 F40003 and up

**KOMATSU**



# **SHOP MANUAL**

---

# **HYDRAULIC EXCAVATOR PC138US-10**

<b>Machine model</b>	<b>Serial number</b>
PC138US-10	F40003 and up

---

## **00 Index and foreword**

---

---

**Table of contents**

## 00 Index and foreword

Table of contents.....	2
Foreword, safety and general information.....	15
Important safety notice.....	15
Fire prevention.....	20
Dispose of waste materials.....	21
How to read the shop manual.....	22
Explanation of terms for maintenance standard.....	24
Handling equipment of fuel system devices.....	26
Handling of intake system parts.....	27
Handling of hydraulic equipment.....	28
Method of disconnecting and connecting of push-pull type coupler.....	30
Handling of electrical equipment.....	33
How to read electric wire code.....	41
Precautions when performing operation.....	44
Practical use of KOMTRAX.....	49
Standard tightening torque table.....	50
List of abbreviation.....	56
Conversion table.....	61

## 01 Specification

Specifications.....	3
Specification drawing.....	3
Working range drawings.....	5
Specifications.....	6
Weight table.....	10
Table of fuel, coolant, and lubricants.....	12

## 10 Structure and function

Engine and cooling system.....	4
Engine related parts.....	4
PTO.....	6
VFT.....	7
EGR system piping drawing.....	11
EGR system circuit diagram.....	13
EGR valve.....	14
EGR cooler.....	16
KCCV layout drawing.....	18
KCCV ventilator.....	20
CDR valve.....	21
KDOC muffler.....	22
Cooling system.....	24
Power train.....	26
Power train system.....	26
Swing circle.....	28
Swing machinery.....	29
Undercarriage and frame.....	31
Track frame.....	31
Idler cushion.....	32
Hydraulic system.....	33

Hydraulic component layout .....	33
Valve control .....	35
Hydraulic tank .....	36
CLSS .....	38
Main pump .....	42
Control valve .....	69
Swing motor .....	119
Travel motor .....	131
Work equipment and swing PPC valve .....	142
Travel PPC valve .....	149
Blade PPC valve .....	155
2-piece boom PPC valve .....	157
1st-line attachment PPC valve (with EPC valve) .....	159
Solenoid valve .....	166
Attachment circuit selector valve (for low pressure circuit) .....	172
Quick coupler control valve .....	175
Center swivel joint .....	179
PPC circuit accumulator .....	181
Attachment circuit accumulator (for low pressure circuit) .....	182
Work equipment .....	183
Work equipment .....	183
Work equipment shim .....	184
Bucket play adjustment shim .....	185
Cab and its attachments .....	186
Cab mount and cab tipping stopper .....	186
ROPS cab .....	187
Take wiring harness out of cab .....	188
Electrical system .....	189
Electrical control system .....	189
Engine control function .....	192
Engine and pump combined control function .....	194
Auto-deceleration function .....	200
Engine automatic warm-up function .....	202
Overheat prevention function .....	205
Turbocharger protection function .....	207
Travel control function .....	211
PPC lock function .....	215
System operating lamp function .....	216
Battery disconnect switch function .....	217
Oil flow adjuster function for attachment .....	219
Machine monitor system .....	221
Display .....	225
KOMTRAX system .....	242
Sensor .....	259
20 Standard value tables	
Standard value table for engine .....	3
Standard value table for machine .....	4
Machine posture and procedure for measuring performance .....	15
Standard value table for electrical system .....	20
30 Testing and adjusting	

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$