

Shop Manual

HYDRAULIC
EXCAVATOR

PC138US-11

SERIAL NUMBERS C30001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-20
FOREWORD, SAFETY, BASIC INFORMATION	00-26
HOW TO READ THE SHOP MANUAL	00-26
SAFETY NOTICE FOR OPERATION	00-28
PRECAUTIONS TO PREVENT FIRE	00-36
ACTIONS IF FIRE OCCURS	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-40
PRECAUTIONS FOR DEF	00-41
STORE AdBlue/DEF	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-56
PRACTICAL USE OF KOMTRAX	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-77
STANDARD TIGHTENING TORQUE TABLE	00-80
CONVERSION TABLE	00-87
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-14
FUNCTION OF UREA SCR SYSTEM	10-15
COMPONENT PARTS OF UREA SCR SYSTEM	10-37
BOOT-UP SYSTEM	10-46
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-46
SYSTEM OPERATING LAMP SYSTEM	10-47
BATTERY DISCONNECT SWITCH	10-50
ENGINE SYSTEM	10-51
LAYOUT DRAWING OF ENGINE SYSTEM	10-51
ENGINE CONTROL SYSTEM	10-53
AUTO-DECELERATION SYSTEM	10-59
ENGINE AUTOMATIC WARM-UP SYSTEM	10-61
OVERHEAT PREVENTION SYSTEM	10-63

TURBOCHARGER PROTECTION SYSTEM	10-65
AUTOMATIC IDLE STOP SYSTEM	10-66
COMPONENT PARTS OF ENGINE SYSTEM	10-70
COOLING SYSTEM.....	10-86
LAYOUT DRAWING OF COOLING SYSTEM	10-86
CONTROL SYSTEM.....	10-88
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-88
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL- LER).....	10-90
MACHINE MONITOR SYSTEM	10-92
KomVision SYSTEM	10-95
KOMTRAX SYSTEM.....	10-99
COMPONENT PARTS OF CONTROL SYSTEM.....	10-101
HYDRAULIC SYSTEM.....	10-139
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-139
CLSS	10-141
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-144
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-149
WORK EQUIPMENT SYSTEM	10-233
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-233
STRUCTURE OF VALVE CONTROL.....	10-236
PPC LOCK SYSTEM	10-237
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-238
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-240
QUICK COUPLER CONTROL VALVE SYSTEM.....	10-242
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-243
SWING SYSTEM.....	10-268
LAYOUT DRAWING OF SWING SYSTEM	10-268
SWING CONTROL SYSTEM DIAGRAM	10-270
COMPONENT PARTS OF SWING SYSTEM.....	10-273
TRAVEL SYSTEM.....	10-285
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-285
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-287
COMPONENT PARTS OF TRAVEL SYSTEM	10-291
UNDERCARRIAGE AND FRAME.....	10-310
LAYOUT DRAWING OF UNDERCARRIAGE	10-310
IDLER CUSHION.....	10-311
WORK EQUIPMENT.....	10-312
STRUCTURE OF WORK EQUIPMENT	10-312
FUNCTION OF WORK EQUIPMENT	10-313
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-314
BUCKET CLEARANCE ADJUSTMENT SHIM	10-315
CAB AND ITS ATTACHMENTS	10-316
ROPS CAB	10-316
CAB MOUNT	10-318
TAKE WIRING HARNESS OUT OF CAB	10-320
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE:PC138US-11.....	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE:PC138US-11	20-13
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-26
30 TESTING AND ADJUSTING.....	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-11

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$