

Shop Manual

HYDRAULIC
EXCAVATOR

PC138USLC-11

SERIAL NUMBERS C30001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-20
FOREWORD, SAFETY, BASIC INFORMATION	00-26
HOW TO READ THE SHOP MANUAL.....	00-26
SAFETY NOTICE FOR OPERATION.....	00-28
PRECAUTIONS TO PREVENT FIRE.....	00-36
ACTIONS IF FIRE OCCURS	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-40
PRECAUTIONS FOR DEF.....	00-41
STORE AdBlue/DEF	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-56
PRACTICAL USE OF KOMTRAX	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-77
STANDARD TIGHTENING TORQUE TABLE.....	00-80
CONVERSION TABLE	00-87
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM.....	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM	10-11
UREA SCR SYSTEM DIAGRAM	10-13
FUNCTION OF UREA SCR SYSTEM.....	10-14
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-36
BOOT-UP SYSTEM	10-45
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-45
SYSTEM OPERATING LAMP SYSTEM	10-46
BATTERY DISCONNECT SWITCH	10-49
ENGINE SYSTEM	10-50
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-50
ENGINE CONTROL SYSTEM	10-52
AUTO-DECELERATION SYSTEM.....	10-58
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-60
OVERHEAT PREVENTION SYSTEM.....	10-62

TURBOCHARGER PROTECTION SYSTEM	10-64
AUTOMATIC IDLE STOP SYSTEM	10-65
COMPONENT PARTS OF ENGINE SYSTEM	10-69
COOLING SYSTEM.....	10-89
LAYOUT DRAWING OF COOLING SYSTEM	10-89
CONTROL SYSTEM.....	10-91
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-91
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL- LER).....	10-93
MACHINE MONITOR SYSTEM	10-95
KomVision SYSTEM	10-98
KOMTRAX SYSTEM.....	10-102
COMPONENT PARTS OF CONTROL SYSTEM.....	10-104
HYDRAULIC SYSTEM.....	10-147
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-147
CLSS	10-149
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-152
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-157
WORK EQUIPMENT SYSTEM	10-246
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-246
STRUCTURE OF VALVE CONTROL.....	10-249
PPC LOCK SYSTEM	10-250
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-251
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-253
TOOL CONTROL SYSTEM	10-255
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-257
SWING SYSTEM.....	10-286
LAYOUT DRAWING OF SWING SYSTEM	10-286
SWING CONTROL SYSTEM DIAGRAM	10-288
COMPONENT PARTS OF SWING SYSTEM.....	10-291
TRAVEL SYSTEM.....	10-304
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-304
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-306
COMPONENT PARTS OF TRAVEL SYSTEM	10-310
UNDERCARRIAGE AND FRAME.....	10-329
LAYOUT DRAWING OF UNDERCARRIAGE	10-329
IDLER CUSHION.....	10-330
WORK EQUIPMENT.....	10-331
STRUCTURE OF WORK EQUIPMENT	10-331
FUNCTION OF WORK EQUIPMENT	10-332
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-333
BUCKET CLEARANCE ADJUSTMENT SHIM	10-334
CAB AND ITS ATTACHMENTS	10-335
ROPS CAB	10-335
CAB MOUNT	10-337
TAKE WIRING HARNESS OUT OF CAB.....	10-339
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE:PC138USLC-11	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE:PC138USLC-11	20-13
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-27
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-11

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$