

# Shop Manual

HYDRAULIC  
EXCAVATOR

**GALEO**

**PC200 -8**

**PC200LC-8**

**PC220 -8**

**PC220LC-8**

SERIAL NUMBERS

PC200- 30001

PC200LC- 30001

PC220- 7001

PC220LC- 7001

and up

**KOMATSU**



# HYDRAULIC EXCAVATOR

## PC200-8

## PC200LC-8

## PC220-8

## PC220LC-8

| Machine model | Serial number |
|---------------|---------------|
|---------------|---------------|

|           |              |
|-----------|--------------|
| PC200-8   | 30001 and up |
| PC200LC-8 | 30001 and up |
| PC220-8   | 7001 and up  |
| PC220LC-8 | 7001 and up  |

---

## 00 Index and foreword

### Index

---

---

|  |   |
|--|---|
| Organization list of the shop manual ..... | 2 |
| Table of contents .....                    | 4 |

## Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| Section Title                                       | Form Number   |
|---|---------------|
| Shop Manual, contents binder, binder label and tabs | SEN00084-03   |
| 00 Index and foreword                               | SEN00085-03   |
| Index   | SEN00093-03 ● |
| Foreword and general information                    | SEN00094-01 ● |
| 01 Specification                                    | SEN00086-00   |
| Specification and technical data                    | SEN00095-00   |
| 10 Structure, function and maintenance standard     | SEN00087-00   |
| Engine and cooling system                           | SEN00096-00   |
| Power train   | SEN00097-00   |
| Undercarriage and frame                             | SEN00098-00   |
| Hydraulic system, Part 1                            | SEN00099-00   |
| Hydraulic system, Part 2                            | SEN00100-00   |
| Hydraulic system, Part 3                            | SEN00160-00   |
| Work equipment                                      | SEN00101-00   |
| Cab and its attachments                             | SEN00102-00   |
| Electrical system                                   | SEN00103-00   |
| 20 Standard value table                             | SEN00088-01   |
| Standard service value table                        | SEN00227-01 ● |
| 30 Testing and adjusting                            | SEN00089-01   |
| Testing and adjusting, Part 1                       | SEN00228-01 ● |
| Testing and adjusting, Part 2                       | SEN00229-01 ● |
| Testing and adjusting, Part 3                       | SEN00230-01 ● |

|   |               |
|---|---------------|
| 40 Troubleshooting  | SEN00090-01   |
| General information on troubleshooting                      | SEN00231-01 ● |
| Troubleshooting by failure code (Display of code), Part 1   | SEN00240-01 ● |
| Troubleshooting by failure code (Display of code), Part 2   | SEN00241-01 ● |
| Troubleshooting by failure code (Display of code), Part 3   | SEN00242-01 ● |
| Troubleshooting by failure code (Display of code), Part 4   | SEN00243-01 ● |
| Troubleshooting of electrical system (E-mode)               | SEN00244-01 ● |
| Troubleshooting of hydraulic and mechanical system (H-mode) | SEN00245-00   |
| Troubleshooting of engine (S-mode)                          | SEN00246-01 ● |
| <br>  |               |
| 50 Disassembly and assembly                                 | SEN00658-00   |
| Disassembly and assembly related information                | SEN00659-00   |
| Engine cooling related                                      | SEN00660-00   |
| Power train   | SEN00661-00   |
| Under carriage and frame                                    | SEN00662-00   |
| Hydraulic system  | SEN00663-00   |
| Work equipment  | SEN00664-00   |
| Cab related   | SEN00665-00   |
| Electric components   | SEN00666-00   |
| <br>  |               |
| 90 Diagrams and drawings                                    | SEN00092-02   |
| Hydraulic diagrams and drawings                             | SEN00112-00   |
| Electrical diagrams and drawings                            | SEN00113-02 ● |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$