

Shop Manual

HYDRAULIC
EXCAVATOR

PC200 -8M0

PC200LC-8M0

PC220 -8M0

PC220LC-8M0

SERIAL NUMBERS

PC200- 40001
PC200LC- 40001
PC220- 10001
PC220LC- 10001

and up

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC200-8M0

PC200LC-8M0

PC220-8M0

PC220LC-8M0

Machine model	Serial number
---------------	---------------

PC200-8M0	400001 and up
PC200LC-8M0	400001 and up
PC220-8M0	100001 and up
PC220LC-8M0	100001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN06109-13
00 Index and foreword	SEN06110-13
100 Index	SEN06111-13
200 Foreword and general information	SEN06112-02
01 Specification	SEN06113-00
100 Specification and technical data	SEN06114-00
10 Structure, function and maintenance standard	SEN06115-04
100 Engine and cooling system	SEN06116-00
200 Power train	SEN06117-00
300 Undercarriage and frame	SEN06118-00
401 Hydraulic system, Part 1	SEN06119-02
402 Hydraulic system, Part 2	SEN06120-01
403 Hydraulic system, Part 3	SEN06121-03
500 Work equipment	SEN06122-01
600 Electrical system	SEN06123-01
20 Standard value table	SEN06124-01
100 Standard service value table	SEN06125-01
30 Testing and adjusting	SEN06126-02
101 Testing and adjusting, Part 1	SEN06127-01
102 Testing and adjusting, Part 2	SEN06128-00
103 Testing and adjusting, Part 3	SEN06129-01
40 Troubleshooting	SEN06130-04
100 Failure code table and fuse locations	SEN06131-00
200 General Information on troubleshooting	SEN06132-02
301 Troubleshooting by failure code, Part 1	SEN06133-01
302 Troubleshooting by failure code, Part 2	SEN06134-01
303 Troubleshooting by failure code, Part 3	SEN06135-01
304 Troubleshooting by failure code, Part 4	SEN06136-02
305 Troubleshooting by failure code, Part 5	SEN06137-01
400 Troubleshooting of electrical system (E-mode)	SEN06138-02
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN06139-01
600 Troubleshooting of engine (S-mode)	SEN06140-00
50 Disassembly and assembly	SEN06141-05
100 General information on disassembly and assembly	SEN06142-02
200 Engine and cooling system	SEN06143-03
300 Power train	SEN06144-03
400 Undercarriage and frame	SEN06145-04

500	Hydraulic system	SEN06146-03
600	Work equipment	SEN06147-02
700	Cab and its attachments	SEN06148-04
800	Electrical system	SEN06149-03
80	Appendix	SEN06150-01
100	Air conditioner	SEN06151-01
90	Diagrams and drawings	SEN06152-04
100	Hydraulic diagrams and drawings	SEN06153-02
200	Electrical diagrams and drawings	SEN06154-04

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$