

Shop Manual

HYDRAULIC
EXCAVATOR

PC2000-11

SERIAL NUMBERS 30001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-23
Foreword, Safety, Basic Information.....	00-26
How to Read the Shop Manual	00-26
Safety Notice for Operation	00-28
Precautions to Prevent Fire.....	00-36
Procedures If Fire Occurs	00-38
Precautions When You Discard Waste Materials.....	00-39
Precautions When You Handle Hydraulic Equipment	00-40
Precautions When You Disconnect and Connect Pipings.....	00-43
Precautions When You Handle Electrical Equipment	00-49
Precautions When You Handle Fuel System Equipment	00-51
Precautions When You Handle Intake System Equipment	00-52
Practical Use of KOMTRAX	00-53
Disconnect and Connect Push-Pull Type Coupler	00-54
Precautions for Disconnection and Connection of Connectors	00-58
How to Disconnect and Connect Deutsch Connector	00-62
How to Disconnect and Connect Slide Lock Type Connector	00-63
How to Disconnect and Connect Connector with Lock to Pull	00-65
How to Disconnect and Connect Connector with Lock to Push	00-66
How to Disconnect and Connect Connector with Housing to Rotate	00-68
How to Read the Codes for Electric Cable	00-69
Explanation of Terms for Maintenance Standard	00-73
Standard Tightening Torque Table.....	00-76
Conversion Table	00-83
01 Specifications	01-1
Table of Contents	01-2
Specifications.....	01-3
Specification Drawing.....	01-3
Working Range Drawings.....	01-6
Specifications.....	01-8
Weight Table	01-15
Fuel, Coolant, Lubricants (For North America)	01-22
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-6
Layout Drawing of Boot-up System	10-6
System Operating Lamp System.....	10-7
Battery Isolator	10-9
Engine System.....	10-11
Layout Drawing of Engine System	10-11
Engine Control System	10-13
Auto-Deceleration System.....	10-15
Automatic Low Idle System	10-17
Engine Automatic Warm-up System.....	10-19
Overheat Prevention System	10-21
Turbocharger Protection System.....	10-23
Multiple Injection Control System	10-25
Component Parts of Engine System	10-26
Cooling System.....	10-49
Layout Drawing of Cooling System	10-49
Fan Speed Control System of Hydraulic Fan	10-51
Engine Output Control System of Hydraulic Fan	10-53
Fan Reverse Rotation System of Hydraulic Fan	10-54
Component Parts of Cooling System	10-55
Control System	10-76

Layout Drawing of Control System	10-76
Machine Monitor System.....	10-78
KOMTRAX Plus System	10-80
Component Parts of Control System	10-85
Hydraulic System	10-140
Layout Drawing of Hydraulic System.....	10-140
Electronic OLSS.....	10-143
Engine and Pump Combined Control System	10-146
Component Parts of Hydraulic System.....	10-150
Work Equipment System	10-206
Layout Drawing of Work Equipment System	10-206
Layout Drawing of Work Equipment System (Loading Shovel Specification).....	10-212
Work Equipment System Diagram	10-218
Machine Push-up System	10-219
Heavy Lift System	10-221
Boom Shockless Control Function	10-223
PPC Lock System	10-224
Work Equipment and Travel Automatic Lock System	10-225
Component Parts of Work Equipment System	10-227
Swing System	10-248
Layout Drawing of Swing System.....	10-248
Swing Control System Diagram	10-251
Swing Priority System Diagram.....	10-254
Component Parts of Swing System.....	10-256
Travel System	10-269
Layout Drawing of Travel System.....	10-269
System Diagram of Travel Control System.....	10-273
Travel Straight System Diagram.....	10-274
HIC System.....	10-277
Component Parts of Travel System.....	10-281
Accumulator for HIC System	10-301
Lifting System	10-302
Hydraulically Operated Stairway System.....	10-302
Component Parts of Lifting System	10-304
Service Center System	10-306
Layout Drawing of Service Center System	10-306
Service Center System Diagram	10-308
Component Parts of Service Center System	10-310
Grease Lubrication System	10-315
Grease Lubrication System Diagram.....	10-315
Component Parts of Grease Lubrication System.....	10-319
Undercarriage and Frame	10-325
Layout Drawing of Undercarriage.....	10-325
Work Equipment	10-326
Structure of Work Equipment	10-326
Structure of Work Equipment (Loading Shovel Specification).....	10-327
Function of Work Equipment	10-328
Work Equipment Clearance Adjustment Shim.....	10-329
CAB Related Parts	10-330
CAB	10-330
Wiper System.....	10-331
CAB Mount	10-335
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC2000-11	20-3
Standard Value Table for Machine.....	20-8
Standard Value Table for Machine: PC2000-11 (Backhoe Specification)	20-8

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$