

Shop Manual

HYDRAULIC
EXCAVATOR

PC2000-11R

SERIAL NUMBERS 30019 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-21
Foreword, Safety, Basic Information	00-24
How to Read the Shop Manual	00-24
Safety Notice for Operation	00-26
Precautions to Prevent Fire	00-34
Procedures If Fire Occurs	00-36
Precautions When You Discard Waste Materials	00-37
Precautions When You Handle Hydraulic Equipment	00-38
Precautions When You Disconnect and Connect Pipings	00-41
Precautions When You Handle Electrical Equipment	00-47
Precautions When You Handle Fuel System Equipment	00-49
Precautions When You Handle Intake System Equipment	00-50
Practical Use of KOMTRAX	00-51
Disconnect and Connect Push-Pull Type Coupler	00-52
Precautions for Disconnection and Connection of Connectors	00-56
How to Disconnect and Connect Deutsch Connector	00-60
How to Disconnect and Connect Slide Lock Type Connector	00-61
How to Disconnect and Connect Connector with Lock to Pull	00-63
How to Disconnect and Connect Connector with Lock to Push	00-64
How to Disconnect and Connect Connector with Housing to Rotate	00-66
How to Disconnect and Connect Molex Connector	00-67
How to Read the Codes for Electric Cable	00-68
Explanation of Terms for Maintenance Standard	00-72
Standard Tightening Torque Table	00-75
Conversion Table	00-82
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-6
Specifications	01-8
Weight Table	01-15
Fuel, Coolant, Lubricant	01-22
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-6
Layout Drawing of Boot-up System	10-6
System Operating Lamp System	10-7
Battery Isolator	10-9
Engine System	10-11
Layout Drawing of Engine System	10-11
Engine Control System	10-13
Auto-Deceleration System	10-15
Automatic Low Idle System	10-17
Engine Automatic Warm-up System	10-19
Overheat Prevention System	10-21
Turbocharger Protection System	10-23
Component Parts of Engine System	10-25
Cooling System	10-28
Layout Drawing of Cooling System	10-28
Fan Speed Control System of Hydraulic Fan	10-30
Engine Output Control System of Hydraulic Fan	10-32
Fan Reverse Rotation System of Hydraulic Fan	10-33
Component Parts of Cooling System	10-34
Control System	10-56

Layout Drawing of Control System	10-56
Machine Monitor System.....	10-58
KOMTRAX Plus System	10-60
Component Parts of Control System	10-65
Hydraulic System	10-114
Layout Drawing of Hydraulic System.....	10-114
Electronic OLSS.....	10-117
Engine and Pump Combined Control System	10-120
Component Parts of Hydraulic System.....	10-124
Work Equipment System.....	10-180
Layout Drawing of Work Equipment System	10-180
Layout Drawing of Work Equipment System (Loading Shovel Specification).....	10-186
Work Equipment System Diagram	10-192
Machine Push-up System	10-193
Heavy Lift System	10-195
Boom Shockless Control Function	10-197
PPC Lock System	10-198
Work Equipment and Travel Automatic Lock System	10-199
Component Parts of Work Equipment System	10-201
Swing System	10-220
Layout Drawing of Swing System.....	10-220
Swing Control System Diagram	10-223
Swing Priority System Diagram.....	10-226
Component Parts of Swing System.....	10-228
Travel System	10-240
Layout Drawing of Travel System.....	10-240
System Diagram of Travel Control System.....	10-244
Travel Straight System Diagram.....	10-245
HIC System.....	10-248
Component Parts of Travel System.....	10-252
Accumulator for HIC System	10-271
Lifting System	10-272
Hydraulically Operated Stairway System.....	10-272
Component Parts of Lifting System	10-274
Service Center System	10-276
Layout Drawing of Service Center System	10-276
Service Center System Diagram	10-278
Component Parts of Service Center System	10-280
Grease Lubrication System	10-285
Grease Lubrication System Diagram.....	10-285
Component Parts of Grease Lubrication System.....	10-289
Undercarriage and Frame	10-295
Layout Drawing of Undercarriage.....	10-295
Work Equipment	10-296
Structure of Work Equipment	10-296
Structure of Work Equipment (Loading Shovel Specification).....	10-297
Function of Work Equipment.....	10-298
Work Equipment Clearance Adjustment Shim.....	10-299
CAB Related Parts.....	10-300
CAB	10-300
Wiper System.....	10-301
CAB Mount	10-305
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC2000-11R.....	20-3
Standard Value Table for Machine.....	20-7
Standard Value Table for Machine: PC2000-11R (Backhoe Specification)	20-7

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$