

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC2000-11R***

SERIAL NUMBERS 30035 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-21
Foreword, Safety, Basic Information .....	00-24
How to Read the Shop Manual .....	00-24
Safety Notice for Operation .....	00-26
Precautions to Prevent Fire .....	00-34
Procedures If Fire Occurs .....	00-36
Precautions When You Discard Waste Materials .....	00-37
Precautions When You Handle Hydraulic Equipment .....	00-38
Precautions When You Disconnect and Connect Pipings .....	00-41
Precautions When You Handle Electrical Equipment .....	00-47
Precautions When You Handle Fuel System Equipment .....	00-49
Precautions When You Handle Intake System Equipment .....	00-50
Practical Use of KOMTRAX .....	00-51
Disconnect and Connect Push-Pull Type Coupler .....	00-52
Precautions for Disconnection and Connection of Connectors .....	00-56
How to Disconnect and Connect Deutsch Connector .....	00-60
How to Disconnect and Connect Slide Lock Type Connector .....	00-61
How to Disconnect and Connect Connector with Lock to Pull .....	00-63
How to Disconnect and Connect Connector with Lock to Push .....	00-64
How to Disconnect and Connect Connector with Housing to Rotate .....	00-66
How to Disconnect and Connect Molex Connector .....	00-67
How to Read the Codes for Electric Cable .....	00-68
Explanation of Terms for Maintenance Standard .....	00-72
Standard Tightening Torque Table .....	00-75
Conversion Table .....	00-82
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-6
Specifications .....	01-8
Weight Table .....	01-15
Fuel, Coolant, Lubricant .....	01-22
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Boot-up System .....	10-6
Layout Drawing of Boot-up System .....	10-6
System Operating Lamp System .....	10-7
Battery Isolator .....	10-9
Engine System .....	10-11
Layout Drawing of Engine System .....	10-11
Engine Control System .....	10-13
Auto-Deceleration System .....	10-15
Automatic Low Idle System .....	10-17
Engine Automatic Warm-up System .....	10-19
Overheat Prevention System .....	10-21
Turbocharger Protection System .....	10-23
Component Parts of Engine System .....	10-25
Cooling System .....	10-28
Layout Drawing of Cooling System .....	10-28
Fan Speed Control System of Hydraulic Fan .....	10-30
Engine Output Control System of Hydraulic Fan .....	10-32
Fan Reverse Rotation System of Hydraulic Fan .....	10-33
Component Parts of Cooling System .....	10-34
Control System .....	10-56

Layout Drawing of Control System .....	10-56
Machine Monitor System.....	10-58
KOMTRAX Plus System .....	10-60
Component Parts of Control System .....	10-65
Hydraulic System .....	10-114
Layout Drawing of Hydraulic System.....	10-114
Electronic OLSS.....	10-117
Engine and Pump Combined Control System .....	10-120
Component Parts of Hydraulic System.....	10-124
Work Equipment System.....	10-180
Layout Drawing of Work Equipment System .....	10-180
Layout Drawing of Work Equipment System (Loading Shovel Specification).....	10-186
Work Equipment System Diagram .....	10-192
Machine Push-up System .....	10-193
Heavy Lift System.....	10-195
Boom Shockless Control Function .....	10-197
PPC Lock System.....	10-198
Work Equipment and Travel Automatic Lock System .....	10-199
Component Parts of Work Equipment System .....	10-201
Swing System .....	10-220
Layout Drawing of Swing System.....	10-220
Swing Control System Diagram .....	10-223
Swing Priority System Diagram.....	10-226
Component Parts of Swing System.....	10-228
Travel System .....	10-240
Layout Drawing of Travel System.....	10-240
System Diagram of Travel Control System.....	10-244
Travel Straight System Diagram.....	10-245
HIC System.....	10-248
Component Parts of Travel System.....	10-252
Accumulator for HIC System .....	10-271
Lifting System .....	10-272
Hydraulically Operated Stairway System.....	10-272
Component Parts of Lifting System .....	10-274
Service Center System .....	10-276
Layout Drawing of Service Center System .....	10-276
Service Center System Diagram .....	10-278
Component Parts of Service Center System .....	10-280
Grease Lubrication System .....	10-285
Grease Lubrication System Diagram.....	10-285
Component Parts of Grease Lubrication System.....	10-289
Undercarriage and Frame .....	10-295
Layout Drawing of Undercarriage.....	10-295
Work Equipment .....	10-296
Structure of Work Equipment .....	10-296
Structure of Work Equipment (Loading Shovel Specification).....	10-297
Function of Work Equipment.....	10-298
Work Equipment Clearance Adjustment Shim.....	10-299
CAB Related Parts.....	10-300
CAB .....	10-300
Wiper System.....	10-301
CAB Mount .....	10-305
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: PC2000-11R.....	20-3
Standard Value Table for Machine.....	20-7
Standard Value Table for Machine: PC2000-11R (Backhoe Specification) .....	20-7

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$