
## **Shop Manual**

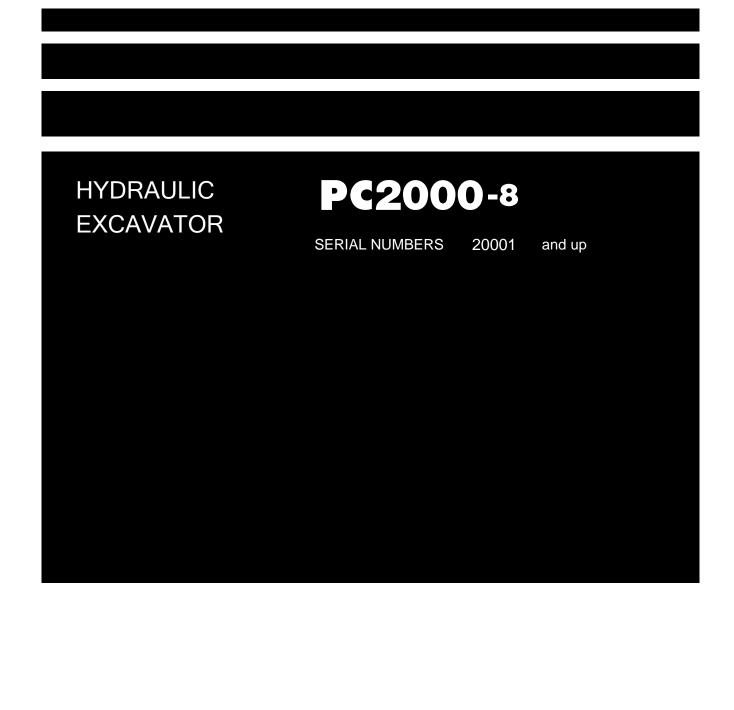



### **SHOP MANUAL**

# HYDRAULIC EXCAVATOR PC2000-8

Machine model Serial number

PC2000-8 20001 and up

## **00 Index and foreword** Index

| Composition of shop manual | 2 |
|----------------------------|---|
| Table of contents          | 4 |

#### **Composition of shop manual**

The contents of this shop manual are shown together with Form No. in a list.

| Section Title   | Form Number |
|---|-------------|
| Shop Manual, contents binder, binder label and tabs         | SEN01607-35 |
| 00 Index and foreword                                       | SEN01608-35 |
| Index   | SEN01609-35 |
| Foreword and general information                            | SEN01610-05 |
| 01 Specification  | SEN01611-05 |
| Specification and technical data                            | SEN01612-05 |
| 10 Structure, function and maintenance standard             | SEN01613-14 |
| Engine and cooling system                                   | SEN01614-01 |
| Power train   | SEN01615-03 |
| Undercarriage and frame                                     | SEN01616-04 |
| Hydraulic system, Part 1                                    | SEN01618-06 |
| Hydraulic system, Part 2                                    | SEN01619-02 |
| Hydraulic system, Part 3                                    | SEN01620-02 |
| Work equipment  | SEN01621-04 |
| Cab and its attachments                                     | SEN01622-02 |
| Electrical system   | SEN01623-03 |
| 20 Standard value table                                     | SEN01624-03 |
| Standard service value table                                | SEN02006-03 |
| 30 Testing and adjusting                                    | SEN01625-09 |
| Testing and adjusting, Part 1                               | SEN02007-04 |
| Testing and adjusting, Part 2                               | SEN02008-05 |
| Testing and adjusting, Part 3                               | SEN02009-05 |
| Testing and adjusting, Part 4                               | SEN02010-05 |
| 40 Troubleshooting  | SEN01626-06 |
| Failure code table and fuse locations                       | SEN02011-03 |
| General information on troubleshooting                      | SEN02012-05 |
| Troubleshooting by failure code, Part 1                     | SEN02096-03 |
| Troubleshooting by failure code, Part 2                     | SEN02097-02 |
| Troubleshooting by failure code, Part 3                     | SEN02098-02 |
| Troubleshooting by failure code, Part 4                     | SEN02099-03 |
| Troubleshooting by failure code, Part 5                     | SEN02100-03 |
| Troubleshooting by failure code, Part 6                     | SEN02101-02 |
| Troubleshooting by failure code, Part 7                     | SEN02102-01 |
| Troubleshooting of electrical system (E-mode)               | SEN02103-02 |
| Troubleshooting of hydraulic and mechanical system (H-mode) | SEN02104-03 |
| Troubleshooting of mechanical system (S-mode)               | SEN02105-02 |
| 50 Disassembly and assembly                                 | SEN01627-22 |
| General information on disassembly and assembly             | SEN02133-07 |

| Engine and cooling system        | SEN02134-07 |
|----------------------------------|-------------|
| Engine                           | SEN02135-10 |
| Power train                      | SEN02136-06 |
| Undercarriage and frame          | SEN02137-07 |
| Hydraulic system                 | SEN02138-08 |
| Work equipment                   | SEN02139-04 |
| Cab and its attachments          | SEN02140-07 |
| Electrical system                | SEN02141-06 |
| 90 Diagrams and drawings         | SEN01628-11 |
| Hydraulic diagrams and drawings  | SEN01629-03 |
| Electrical diagrams and drawings | SEN01630-09 |

It's a preview. You can download the full file by clicking the link below.

# https://shopservicemanual.com/

Service Manuals from 2\$