

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC210LC-10***

SERIAL NUMBERS    450001    and up

**KOMATSU**



# **SHOP MANUAL**

# **HYDRAULIC EXCAVATOR**

## **PC210LC-10**

Model              Serial Number

PC210LC-10    450001 and up

---

---

## **00 Index and foreword**

---

---

**Index**

00 Index and foreword .....	00-1
Index .....	00-2
Foreword, safety and general information .....	00-14
Important safety notice .....	00-14
How to read the shop manual .....	00-21
Explanation of terms for maintenance standard .....	00-23
Handling equipment of fuel system devices .....	00-25
Handling of intake system parts .....	00-26
Handling of hydraulic equipment .....	00-27
Method of disconnecting and connecting of push-pull type coupler .....	00-29
Handling of electrical equipment .....	00-32
How to read electric wire code .....	00-40
Precautions when performing operation .....	00-43
Practical use of KOMTRAX .....	00-48
Standard tightening torque table .....	00-49
List of abbreviation .....	00-55
Conversion table .....	00-60
01 Specification .....	01-1
Table of contents .....	01-2
Specifications .....	01-3
Specification drawing .....	01-3
Working range drawings .....	01-4
Specifications .....	01-5
Weight table .....	01-8
Table of fuel, coolant, and lubricants .....	01-9
10 Structure and function .....	10-1
Table of contents .....	10-2
Engine and cooling system .....	10-3
Engine related parts .....	10-3
VGT .....	10-5
EGR system piping drawing .....	10-12
EGR system circuit diagram .....	10-14
EGR valve .....	10-16
EGR cooler .....	10-18
KCCV layout drawing .....	10-19
KCCV ventilator .....	10-21
KDPF .....	10-23
Cooling system .....	10-27
Power train .....	10-29
Power train system .....	10-29
Swing circle .....	10-31
Swing machinery .....	10-32
Final drive .....	10-34
Undercarriage and frame .....	10-36
Track frame and idler cushion .....	10-36
Hydraulic system .....	10-38
Hydraulic equipment layout drawing .....	10-38
Valve control .....	10-40
Hydraulic tank .....	10-42
CLSS .....	10-44
Main pump .....	10-49
Control valve .....	10-74
Swing motor .....	10-131
Travel motor .....	10-143
PPC valve .....	10-156
Solenoid valve .....	10-178
Attachment circuit selector valve (for high pressure circuit) .....	10-181
Attachment circuit selector valve (for low pressure circuit) .....	10-183

Anti-drop valve for boom .....	10-186
Anti-drop valve for arm .....	10-191
Center swivel joint .....	10-196
Accumulator .....	10-198
Work equipment .....	10-199
Work equipment .....	10-199
Work equipment shim .....	10-200
Bucket play adjustment shim .....	10-201
Cab and its attachments .....	10-202
Cab mount and cab tipping stopper .....	10-202
ROPS cab .....	10-203
Electrical system .....	10-204
Electrical control system .....	10-204
Machine monitor system .....	10-255
KOMTRAX system .....	10-277
Sensor .....	10-280
20 Standard value tables .....	20-1
Table of contents .....	20-2
Standard service value table .....	20-3
Standard value table for engine .....	20-3
Standard value table for machine .....	20-5
Standard value table for electrical system .....	20-18
30 Testing and adjusting .....	30-1
Table of contents .....	30-2
Related information on testing and adjusting .....	30-3
Tools for testing and adjusting .....	30-3
Sketch of tools for testing and adjusting .....	30-7
Engine and cooling system .....	30-8
Testing engine speed .....	30-8
Testing boost pressure .....	30-9
Testing exhaust gas color .....	30-11
Testing mass air flow and temperature sensor .....	30-12-2
Testing and adjusting valve clearance .....	30-13
Testing compression pressure .....	30-16
Testing blowby pressure .....	30-20
Testing engine oil pressure .....	30-21
Testing EGR valve and VGT oil pressures .....	30-22
Measuring fuel pressure .....	30-23
Measuring fuel delivery, return and leakage .....	30-29
Bleeding air from fuel system .....	30-34
Testing fuel circuit for leakage .....	30-36
Handling cylinder cutout mode operation .....	30-37
Handling no-injection cranking operation .....	30-38
Testing and adjusting air conditioner compressor belt tension .....	30-39
Replacing fan belt .....	30-41
Power train .....	30-42
Testing swing circle bearing clearance .....	30-42
Undercarriage and frame .....	30-43
Testing and adjusting track tension .....	30-43
Hydraulic system .....	30-44
Releasing remaining pressure from hydraulic circuit .....	30-44
Testing and adjusting oil pressure in work equipment, swing, and travel circuits .....	30-48
Testing oil pressure of control circuit .....	30-52
Testing and adjusting oil pressure in pump PC control circuit .....	30-55
Testing and adjusting oil pressure in pump LS control circuit .....	30-58
Testing output pressure of solenoid valve .....	30-63
Testing PPC valve output pressure .....	30-67
Adjusting play of work equipment and swing PPC valves .....	30-69
Testing pump swash plate sensor .....	30-70
Isolating the parts causing hydraulic drift in work equipment .....	30-71

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$