

Shop Manual

HYDRAULIC
EXCAVATOR

PC210LCi-11

SERIAL NUMBERS 504809 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-24
FOREWORD, SAFETY, BASIC INFORMATION	00-27
HOW TO READ THE SHOP MANUAL	00-27
SAFETY NOTICE FOR OPERATION	00-29
PRECAUTIONS TO PREVENT FIRE	00-37
ACTIONS IF FIRE OCCURS	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-40
ENGINE TECHNOLOGY TO CONFORM EXHAUST GAS EMISSION	00-41
PRECAUTIONS FOR DEF	00-42
STORE AdBlue/DEF	00-43
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-44
PRECAUTIONS WHEN YOU DISCONNECT AND CONNECT PIPINGS	00-47
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-56
PRACTICAL USE OF KOMTRAX	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-77
STANDARD TIGHTENING TORQUE TABLE	00-80
CONVERSION TABLE	00-87
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
WORKING RANGE DRAWINGS	01-5
SPECIFICATIONS	01-6
WEIGHT TABLE	01-9
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-11
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
NO _x CONTROL SYSTEM	10-6
FUNCTION OF NO _x CONTROL SYSTEM	10-6
UREA SCR SYSTEM	10-7
LAYOUT DRAWING OF UREA SCR SYSTEM	10-8
UREA SCR SYSTEM DIAGRAM	10-13
FUNCTION OF UREA SCR SYSTEM	10-14
COMPONENT PARTS OF UREA SCR SYSTEM	10-23
BOOT-UP SYSTEM	10-32
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-32
SYSTEM OPERATING LAMP SYSTEM	10-34
BATTERY DISCONNECT SWITCH	10-36
ENGINE SYSTEM	10-37
LAYOUT DRAWING OF ENGINE SYSTEM	10-37
ENGINE CONTROL SYSTEM	10-39
AUTO-DECELERATION SYSTEM	10-42
ENGINE AUTOMATIC WARM-UP SYSTEM	10-44
OVERHEAT PREVENTION SYSTEM	10-46

TURBOCHARGER PROTECTION SYSTEM	10-49
AUTOMATIC IDLE STOP SYSTEM	10-51
COMPONENT PARTS OF ENGINE SYSTEM	10-54
COOLING SYSTEM.....	10-72
LAYOUT DRAWING OF COOLING SYSTEM	10-72
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH	10-74
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-76
COMPONENT PARTS OF COOLING SYSTEM.....	10-78
CONTROL SYSTEM.....	10-79
LAYOUT DRAWING OF CONTROL SYSTEM PARTS	10-79
MACHINE MONITOR SYSTEM	10-82
KomVision SYSTEM	10-84
KOMTRAX SYSTEM.....	10-88
PPC LEVERS	10-89
AUTOMATIC GREASE SYSTEM.....	10-91
COMPONENT PARTS OF CONTROL SYSTEM.....	10-103
HYDRAULIC SYSTEM.....	10-143
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-143
CLSS	10-149
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-172
PUMP AND VALVE CONTROL SYSTEM	10-178
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-181
WORK EQUIPMENT SYSTEM	10-260
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-260
STRUCTURE OF VALVE CONTROL	10-265
BUCKET CONTROL SYSTEM	10-267
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-268
PPC LOCK SYSTEM	10-270
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-271
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-273
TOOL CONTROL SYSTEM	10-275
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-277
ICT SYSTEM	10-316
LAYOUT DRAWING OF ICT SYSTEM.....	10-316
ICT CONTROL SYSTEM DIAGRAM.....	10-319
BUCKET EDGE POSITION DETECTION SYSTEM.....	10-320
THE INTELLIGENT MACHINE CONTROL SYSTEM.....	10-322
CUSHION SYSTEM FOR ARM IN END.....	10-348
BOOM SECONDARY DRIVE SWITCH.....	10-350
COMPONENT PARTS OF ICT SYSTEM	10-351
SWING SYSTEM.....	10-380
LAYOUT DRAWING OF SWING SYSTEM	10-380
SWING CONTROL SYSTEM DIAGRAM	10-383
COMPONENT PARTS OF SWING SYSTEM.....	10-387
TRAVEL SYSTEM.....	10-402
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-402
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-406
COMPONENT PARTS OF TRAVEL SYSTEM	10-408
UNDERCARRIAGE AND FRAME.....	10-429
LAYOUT DRAWING OF UNDERCARRIAGE	10-429
WORK EQUIPMENT.....	10-431
STRUCTURE OF WORK EQUIPMENT	10-431
FUNCTION OF WORK EQUIPMENT	10-432
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-433
BUCKET CLEARANCE ADJUSTMENT SHIM	10-434
CAB AND ITS ATTACHMENTS	10-435
ROPS CAB	10-435
CAB MOUNT	10-436

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$