

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC210LCi-11***

SERIAL NUMBERS 505280 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-23
Foreword, Safety, Basic Information .....	00-26
How to Read the Shop Manual .....	00-26
Safety Notice for Operation .....	00-28
Precautions to Prevent Fire .....	00-36
Procedures If Fire Occurs .....	00-38
Precautions When You Discard Waste Materials .....	00-39
Procedures for Exhaust Gas Regulations .....	00-40
Precautions for DEF .....	00-41
Store DEF .....	00-42
Precautions When You Handle Hydraulic Equipment .....	00-43
Precautions When You Disconnect and Connect Pipings .....	00-46
Precautions When You Handle Electrical Equipment .....	00-53
Precautions When You Handle Fuel System Equipment .....	00-55
Precautions When You Handle Intake System Equipment .....	00-56
Practical Use of KOMTRAX .....	00-57
Disconnect and Connect Push-Pull Type Coupler .....	00-58
Precautions for Disconnection and Connection of Connectors .....	00-62
Disconnect and Connect Deutsch Connector .....	00-66
How to Disconnect and Connect Slide Lock Type Connector .....	00-67
Disconnect and Connect Connector with Lock to Pull .....	00-69
Disconnect and Connect Connector with Lock to Push .....	00-70
Disconnect and Connect Connector with Housing to Rotate .....	00-72
How to Read the Codes for Electric Cable .....	00-73
Explanation of Terms for Maintenance Standard .....	00-77
Standard Tightening Torque Table .....	00-80
Conversion Table .....	00-87
01 Specification .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-5
Specifications .....	01-6
Weight Table .....	01-9
Table of Fuel, Coolant, and Lubricants .....	01-11
10 Structure and Function .....	10-1
Table of Contents .....	10-2
NOx Control System .....	10-6
Function of NOx Control System .....	10-6
Urea SCR System .....	10-7
Layout Drawing of Urea SCR System .....	10-8
Urea SCR System Diagram .....	10-13
Function of Urea SCR System .....	10-14
Component Parts of Urea SCR System .....	10-24
Boot-up System .....	10-33
Layout Drawing of Boot-up System .....	10-33
System Operating Lamp System .....	10-35
Battery Disconnect Switch .....	10-37
Engine System .....	10-38
Layout Drawing of Engine System .....	10-38
Engine Control System .....	10-40
Auto-Deceleration System .....	10-43
Engine Automatic Warm-up System .....	10-45
Overheat Prevention System .....	10-47
Turbocharger Protection System .....	10-50

Automatic Idle Stop System .....	10-52
Component Parts of Engine System .....	10-55
Cooling System.....	10-73
Layout Drawing of Cooling System .....	10-73
Fan Speed Control System of Fan Clutch .....	10-75
Engine Output Control System of Fan Clutch.....	10-77
Component Parts of Cooling System .....	10-79
Control System .....	10-80
Layout Drawing of Control System .....	10-80
Machine Monitor System.....	10-83
KomVision System.....	10-85
KOMTRAX System .....	10-89
PPC Levers.....	10-90
Automatic Grease System.....	10-92
Component Parts of Control System .....	10-104
Hydraulic System .....	10-144
Layout Drawing of Hydraulic System.....	10-144
CLSS .....	10-150
Engine and Pump Combined Control System .....	10-173
Pump and Valve Control System.....	10-179
Component Parts of Hydraulic System.....	10-182
Work Equipment System.....	10-262
Layout Drawing of Work Equipment System .....	10-262
Structure of Valve Control .....	10-267
Bucket Control System.....	10-269
One-Touch Power Maximizing System .....	10-270
PPC Lock System .....	10-272
Work Equipment and Travel Automatic Lock System .....	10-273
Attachment Oil Flow Adjuster System .....	10-275
Tool Control System.....	10-277
Component Parts of Work Equipment System .....	10-279
ICT System .....	10-318
Layout Drawing of ICT System.....	10-318
System Diagram of ICT Control System.....	10-321
Bucket Edge Position Detection System .....	10-322
The Intelligent Machine Control System.....	10-324
Cushion System for Arm IN End.....	10-350
Boom Secondary Drive Switch.....	10-352
Component Parts of ICT System.....	10-353
Swing System .....	10-381
Layout Drawing of Swing System.....	10-381
Swing Control System Diagram .....	10-384
Component Parts of Swing System.....	10-388
Travel System .....	10-402
Layout Drawing of Travel System.....	10-402
System Diagram of Travel Control System.....	10-406
Component Parts of Travel System.....	10-408
Undercarriage and Frame .....	10-429
Layout Drawing of Undercarriage.....	10-429
Work Equipment .....	10-431
Structure of Work Equipment .....	10-431
Function of Work Equipment.....	10-432
Work Equipment Clearance Adjustment Shim.....	10-433
Bucket Clearance Adjustment Shim .....	10-434
CAB Related Parts.....	10-435
ROPS CAB .....	10-435
CAB Mount .....	10-436
CAB Tipping Stopper .....	10-437

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$