

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC228USLC -11E0

SERIAL NUMBERS 6826 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-21
FOREWORD, SAFETY, BASIC INFORMATION	00-27
HOW TO READ THE SHOP MANUAL	00-27
SAFETY NOTICE FOR OPERATION	00-29
PRECAUTIONS TO PREVENT FIRE	00-37
ACTIONS IF FIRE OCCURS	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-41
PRECAUTIONS FOR DEF	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-56
PRACTICAL USE OF KOMTRAX	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-77
STANDARD TIGHTENING TORQUE TABLE	00-80
CONVERSION TABLE	00-87
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
WORKING RANGE DRAWINGS	01-5
SPECIFICATIONS	01-6
WEIGHT TABLE	01-9
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION)	01-11
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
UREA SCR SYSTEM	10-6
LAYOUT DRAWING OF UREA SCR SYSTEM	10-6
UREA SCR SYSTEM DIAGRAM	10-11
FUNCTION OF UREA SCR SYSTEM	10-12
COMPONENT PARTS OF UREA SCR SYSTEM	10-22
BOOT-UP SYSTEM	10-31
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-31
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL-	10-33
LER)	
SYSTEM OPERATING LAMP SYSTEM	10-35
BATTERY DISCONNECT SWITCH	10-38
ENGINE SYSTEM	10-39
LAYOUT DRAWING OF ENGINE SYSTEM	10-39
ENGINE CONTROL SYSTEM	10-41
AUTO-DECELERATION SYSTEM	10-47
ENGINE AUTOMATIC WARM-UP SYSTEM	10-49
OVERHEAT PREVENTION SYSTEM	10-51
TURBOCHARGER PROTECTION SYSTEM	10-54

AUTOMATIC IDLE STOP SYSTEM	10-56
COMPONENT PARTS OF ENGINE SYSTEM	10-60
COOLING SYSTEM.....	10-78
LAYOUT DRAWING OF COOLING SYSTEM	10-78
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH	10-80
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-82
COMPONENT PARTS OF COOLING SYSTEM.....	10-84
CONTROL SYSTEM.....	10-85
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-85
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL- LER).....	10-88
MACHINE MONITOR SYSTEM	10-91
KomVision SYSTEM	10-94
KOMTRAX SYSTEM.....	10-98
COMPONENT PARTS OF CONTROL SYSTEM.....	10-100
HYDRAULIC SYSTEM.....	10-139
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-139
CLSS	10-143
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-162
PUMP AND VALVE CONTROL SYSTEM	10-168
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-171
WORK EQUIPMENT SYSTEM	10-256
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-256
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-261
PPC LOCK SYSTEM	10-263
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-264
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-266
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-268
SWING SYSTEM.....	10-299
LAYOUT DRAWING OF SWING SYSTEM	10-299
SWING CONTROL SYSTEM DIAGRAM	10-303
COMPONENT PARTS OF SWING SYSTEM.....	10-307
TRAVEL SYSTEM.....	10-321
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-321
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-325
COMPONENT PARTS OF TRAVEL SYSTEM	10-327
UNDERCARRIAGE AND FRAME.....	10-348
LAYOUT DRAWING OF UNDERCARRIAGE	10-348
WORK EQUIPMENT.....	10-350
STRUCTURE OF WORK EQUIPMENT	10-350
FUNCTION OF WORK EQUIPMENT	10-351
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-352
BUCKET CLEARANCE ADJUSTMENT SHIM	10-353
CAB AND ITS ATTACHMENTS	10-354
ROPS CAB	10-354
CAB MOUNT	10-356
CAB TIPPING STOPPER	10-357
TAKE WIRING HARNESS OUT OF CAB	10-358
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: PC228USLC-11E0	20-3
STANDARD VALUE TABLE FOR MACHINE.....	20-8
STANDARD VALUE TABLE FOR MACHINE: PC228USLC-11E0	20-8
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-22
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING	30-6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$