

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC290LCi-11***

SERIAL NUMBERS 35039 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-21
Foreword, Safety, Basic Information .....	00-24
How to Read the Shop Manual .....	00-24
Safety Notice for Operation .....	00-26
Precautions to Prevent Fire .....	00-34
Procedures If Fire Occurs .....	00-36
Precautions When You Discard Waste Materials .....	00-37
Procedures for Exhaust Gas Regulations .....	00-38
Precautions for DEF .....	00-39
Store DEF .....	00-40
Precautions When You Handle Hydraulic Equipment .....	00-41
Precautions When You Disconnect and Connect Pipings .....	00-44
Precautions When You Handle Electrical Equipment .....	00-51
Precautions When You Handle Fuel System Equipment .....	00-53
Precautions When You Handle Intake System Equipment .....	00-54
Practical Use of KOMTRAX .....	00-55
Disconnect and Connect Push-Pull Type Coupler .....	00-56
Precautions for Disconnection and Connection of Connectors .....	00-60
Disconnect and Connect Deutsch Connector .....	00-64
How to Disconnect and Connect Slide Lock Type Connector .....	00-65
Disconnect and Connect Connector with Lock to Pull .....	00-67
Disconnect and Connect Connector with Lock to Push .....	00-68
Disconnect and Connect Connector with Housing to Rotate .....	00-70
How to Read the Codes for Electric Cable .....	00-71
Explanation of Terms for Maintenance Standard .....	00-75
Standard Tightening Torque Table .....	00-78
Conversion Table .....	00-85
01 Specification .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-5
Specifications .....	01-6
Weight Table .....	01-9
Table of Fuel, Coolant, and Lubricants .....	01-11
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-6
Layout Drawing of Urea SCR System .....	10-7
Urea SCR System Diagram .....	10-12
Function of Urea SCR System .....	10-13
Component Parts of Urea SCR System .....	10-29
Boot-up System .....	10-38
Layout Drawing of Boot-up System .....	10-38
System Operating Lamp System .....	10-40
Battery Disconnect Switch .....	10-42
Engine System .....	10-43
Layout Drawing of Engine System .....	10-43
Engine Control System .....	10-45
Auto-Deceleration System .....	10-48
Engine Automatic Warm-up System .....	10-50
Overheat Prevention System .....	10-52
Turbocharger Protection System .....	10-55
Automatic Idle Stop System .....	10-57
Component Parts of Engine System .....	10-60

Cooling System.....	10-78
Layout Drawing of Cooling System .....	10-78
Control System .....	10-80
Layout Drawing of Control System .....	10-80
Machine Monitor System.....	10-82
KomVision System.....	10-84
KOMTRAX System .....	10-88
Component Parts of Control System .....	10-89
Hydraulic System .....	10-128
Layout Drawing of Hydraulic System.....	10-128
CLSS .....	10-134
Engine and Pump Combined Control System .....	10-154
Pump and Valve Control System.....	10-160
Component Parts of Hydraulic System.....	10-163
Work Equipment System.....	10-235
Layout Drawing of Work Equipment System .....	10-235
Structure of Valve Control .....	10-240
One-Touch Power Maximizing System .....	10-242
PPC Lock System .....	10-244
Work Equipment and Travel Automatic Lock System .....	10-245
Attachment Oil Flow Adjuster System .....	10-247
Component Parts of Work Equipment System .....	10-249
ICT System .....	10-271
Layout Drawing of ICT System.....	10-271
System Diagram of ICT Control System.....	10-273
Bucket Edge Position Detection System .....	10-274
The Intelligent Machine Control System.....	10-276
Cushion System for Arm IN End.....	10-291
Boom Secondary Drive Switch.....	10-293
Component Parts of ICT System.....	10-294
Swing System .....	10-328
Layout Drawing of Swing System.....	10-328
Swing Control System Diagram .....	10-331
Component Parts of Swing System.....	10-335
Travel System .....	10-349
Layout Drawing of Travel System.....	10-349
System Diagram of Travel Control System.....	10-353
Component Parts of Travel System.....	10-355
Undercarriage and Frame .....	10-375
Layout Drawing of Undercarriage.....	10-375
Work Equipment .....	10-377
Structure of Work Equipment .....	10-377
Function of Work Equipment.....	10-378
Work Equipment Clearance Adjustment Shim.....	10-379
Bucket Clearance Adjustment Shim .....	10-380
CAB Related Parts.....	10-381
ROPS CAB .....	10-381
CAB Mount .....	10-382
CAB Tipping Stopper .....	10-383
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: PC290LCI-11 .....	20-3
Standard Value Table for Machine.....	20-7
Standard Value Table for Machine: PC290LCI-11.....	20-7
Machine Posture and Procedures to Measure Performance .....	20-29
Standard Value Table for Electricity.....	20-33
Standard Value Table for Electricity.....	20-33

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$