

Shop Manual

HYDRAULIC
EXCAVATOR

PC290LCi-11

SERIAL NUMBERS 35180 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-23
Foreword, Safety, Basic Information	00-26
How to Read the Shop Manual	00-26
Safety Notice for Operation	00-28
Precautions to Prevent Fire	00-36
Procedures If Fire Occurs	00-38
Precautions When You Discard Waste Materials	00-39
Procedures for Exhaust Gas Regulations	00-40
Precautions for DEF	00-41
Store DEF	00-42
Precautions When You Handle Hydraulic Equipment	00-43
Precautions When You Disconnect and Connect Pipings	00-46
Precautions When You Handle Electrical Equipment	00-53
Precautions When You Handle Fuel System Equipment	00-55
Precautions When You Handle Intake System Equipment	00-56
Practical Use of KOMTRAX	00-57
Disconnect and Connect Push-Pull Type Coupler	00-58
Precautions for Disconnection and Connection of Connectors	00-62
Disconnect and Connect Deutsch Connector	00-66
How to Disconnect and Connect Slide Lock Type Connector	00-67
Disconnect and Connect Connector with Lock to Pull	00-69
Disconnect and Connect Connector with Lock to Push	00-70
Disconnect and Connect Connector with Housing to Rotate	00-72
How to Read the Codes for Electric Cable	00-73
Explanation of Terms for Maintenance Standard	00-77
Standard Tightening Torque Table	00-80
Conversion Table	00-87
01 Specification	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-5
Specifications	01-6
Weight Table	01-9
Table of Fuel, Coolant, and Lubricants	01-11
10 Structure and Function	10-1
Table of Contents	10-2
Urea SCR System	10-6
Layout Drawing of Urea SCR System	10-7
Urea SCR System Diagram	10-12
Function of Urea SCR System	10-13
Component Parts of Urea SCR System	10-23
Boot-up System	10-32
Layout Drawing of Boot-up System	10-32
System Operating Lamp System	10-34
Battery Disconnect Switch	10-36
Engine System	10-37
Layout Drawing of Engine System	10-37
Engine Control System	10-39
Auto-Deceleration System	10-42
Engine Automatic Warm-up System	10-44
Overheat Prevention System	10-46
Turbocharger Protection System	10-49
Automatic Idle Stop System	10-51
Component Parts of Engine System	10-54

Cooling System.....	10-72
Layout Drawing of Cooling System	10-72
Control System	10-74
Layout Drawing of Control System	10-74
Machine Monitor System.....	10-77
KomVision System.....	10-79
KOMTRAX System	10-83
PPC Levers.....	10-84
Automatic Grease System.....	10-86
Component Parts of Control System	10-98
Hydraulic System	10-138
Layout Drawing of Hydraulic System.....	10-138
CLSS	10-144
Engine and Pump Combined Control System	10-167
Pump and Valve Control System.....	10-173
Component Parts of Hydraulic System.....	10-176
Work Equipment System.....	10-255
Layout Drawing of Work Equipment System	10-255
Structure of Valve Control	10-260
Bucket Control System.....	10-262
One-Touch Power Maximizing System	10-263
PPC Lock System	10-265
Work Equipment and Travel Automatic Lock System	10-266
Attachment Oil Flow Adjuster System	10-268
Tool Control System.....	10-270
Component Parts of Work Equipment System	10-272
ICT System	10-311
Layout Drawing of ICT System.....	10-311
System Diagram of ICT Control System.....	10-314
Bucket Edge Position Detection System	10-315
The Intelligent Machine Control System.....	10-317
Cushion System for Arm IN End.....	10-343
Boom Secondary Drive Switch.....	10-345
Component Parts of ICT System.....	10-346
Swing System	10-374
Layout Drawing of Swing System.....	10-374
Swing Control System Diagram	10-377
Component Parts of Swing System.....	10-381
Travel System	10-395
Layout Drawing of Travel System.....	10-395
System Diagram of Travel Control System.....	10-399
Component Parts of Travel System.....	10-401
Undercarriage and Frame	10-421
Layout Drawing of Undercarriage.....	10-421
Work Equipment	10-423
Structure of Work Equipment	10-423
Function of Work Equipment.....	10-424
Work Equipment Clearance Adjustment Shim.....	10-425
Bucket Clearance Adjustment Shim	10-426
CAB Related Parts.....	10-427
ROPS CAB	10-427
CAB Mount	10-428
CAB Tipping Stopper	10-429
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC290LCI-11	20-3
Standard Value Table for Machine.....	20-7

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$