

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC300-8M2**  
**PC350-8M2**

**PC300LC-8M2**  
**PC350LC-8M2**

SERIAL NUMBERS

PC300- C91744  
PC350- C91744 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-14
FOREWORD, SAFETY, BASIC INFORMATION .....	00-17
HOW TO READ THE SHOP MANUAL .....	00-17
SAFETY NOTICE FOR OPERATION .....	00-19
PRECAUTIONS TO PREVENT FIRE .....	00-27
ACTIONS IF FIRE OCCURS .....	00-28
PRECAUTIONS WHEN YOU DISPOSE OF WASTE MATERIALS .....	00-29
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-30
PRECAUTIONS WHEN YOU DISCONNECT AND CONNECT PIPINGS .....	00-33
PRECAUTIONS WHEN YOU HANDLE ELECTRICAL EQUIPMENT .....	00-40
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-42
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-43
PRACTICAL USE OF KOMTRAX .....	00-44
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-45
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-49
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-53
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-54
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-56
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-59
HOW TO READ ELECTRICAL WIRE CODE .....	00-60
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-64
STANDARD TIGHTENING TORQUE TABLE .....	00-67
CONVERSION TABLE .....	00-74
01 SPECIFICATION .....	01-1
CONTENTS .....	01-2
SPECIFICATIONS .....	01-3
SPECIFICATION DRAWING .....	01-3
WORKING RANGE DRAWINGS .....	01-8
SPECIFICATIONS .....	01-14
WEIGHT TABLE .....	01-31
FUEL, COOLANT, LUBRICANT .....	01-39
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
BOOT-UP SYSTEM .....	10-5
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-5
SYSTEM OPERATING LAMP SYSTEM .....	10-6
BATTERY DISCONNECT SWITCH .....	10-7
ENGINE SYSTEM .....	10-8
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-8
ENGINE CONTROL SYSTEM .....	10-10
AUTO-DECELERATION SYSTEM .....	10-12
ENGINE AUTOMATIC WARM-UP SYSTEM .....	10-14
OVERHEAT PREVENTION SYSTEM .....	10-15
TURBOCHARGER PROTECTION SYSTEM .....	10-17
COOLING SYSTEM .....	10-18
LAYOUT DRAWING OF COOLING SYSTEM .....	10-18
CONTROL SYSTEM .....	10-19
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-19
MACHINE MONITOR SYSTEM .....	10-21
KOMTRAX SYSTEM .....	10-23
CONTROL SYSTEM .....	10-24
HYDRAULIC SYSTEM .....	10-49
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-49

CLSS .....	10-52
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-69
PUMP AND VALVE CONTROL SYSTEM .....	10-75
HYDRAULIC SYSTEM.....	10-77
WORK EQUIPMENT SYSTEM .....	10-159
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-159
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-163
MACHINE PUSH-UP SYSTEM.....	10-165
PPC LOCK SYSTEM .....	10-167
ATTACHMENT OIL FLOW ADJUSTER SYSTEM .....	10-169
WORK EQUIPMENT SYSTEM .....	10-170
SWING SYSTEM .....	10-189
LAYOUT DRAWING OF SWING SYSTEM .....	10-189
SYSTEM DIAGRAM OF SWING CONTROL SYSTEM .....	10-191
SWING SYSTEM .....	10-193
TRAVEL SYSTEM.....	10-205
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-205
SYSTEM DIAGRAM OF TRAVEL CONTROL SYSTEM.....	10-207
TRAVEL SYSTEM .....	10-209
UNDERCARRIAGE AND FRAME.....	10-229
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-229
WORK EQUIPMENT.....	10-231
STRUCTURE OF WORK EQUIPMENT .....	10-231
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-232
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-233
CAB RELATED PARTS.....	10-234
ROPS CAB .....	10-234
CAB MOUNT .....	10-235
CAB TIPPING STOPPER .....	10-237
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
STANDARD VALUE TABLE FOR ENGINE .....	20-3
STANDARD VALUE TABLE FOR ENGINE: PC300,300LC-8M2/PC350,350LC-8M2.....	20-3
STANDARD VALUE TABLE FOR MACHINE.....	20-6
STANDARD VALUE TABLE FOR MACHINE: PC300,300LC-8M2/PC350,350LC-8M2 .....	20-6
MACHINE POSTURE AND PROCEDURES TO MEASURE PERFORMANCE .....	20-18
30 TESTING AND ADJUSTING .....	30-1
CONTENTS .....	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING .....	30-5
TOOLS FOR TESTING AND ADJUSTING.....	30-5
SKETCH OF TOOLS FOR TESTING AND ADJUSTING .....	30-10
ENGINE AND COOLING SYSTEM.....	30-11
TEST ENGINE SPEED .....	30-11
Test boost pressure.....	30-14
TEST EXHAUST GAS COLOR.....	30-17
TEST AND ADJUST VALVE CLEARANCE .....	30-20
TEST COMPRESSION PRESSURE.....	30-23
TEST BLOWBY PRESSURE .....	30-28
TEST ENGINE OIL PRESSURE .....	30-31
TEST FUEL PRESSURE .....	30-33
TEST FUEL RETURN RATE AND LEAKAGE.....	30-39
BLEED AIR FROM FUEL SYSTEM .....	30-43
Test fuel system for leakage.....	30-44
CYLINDER CUT-OUT MODE OPERATION .....	30-46
NO-INJECTION CRANKING OPERATION .....	30-47
TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION .....	30-48

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$