

Shop Manual

HYDRAULIC
EXCAVATOR

PC360LCi-11

SERIAL NUMBERS 91532 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-23
Foreword, Safety, Basic Information.....	00-26
How to Read the Shop Manual	00-26
Safety Notice for Operation	00-28
Precautions to Prevent Fire.....	00-36
Procedures If Fire Occurs	00-38
Precautions When You Discard Waste Materials.....	00-39
Procedures for Exhaust Gas Regulations.....	00-40
Precautions for DEF.....	00-41
Store DEF	00-42
Precautions When You Handle Hydraulic Equipment.....	00-43
Precautions When You Disconnect and Connect Pipings.....	00-46
Precautions When You Handle Electrical Equipment	00-53
Precautions When You Handle Fuel System Equipment	00-55
Precautions When You Handle Intake System Equipment	00-56
Practical Use of KOMTRAX	00-57
Disconnect and Connect Push-Pull Type Coupler	00-58
Precautions for Disconnection and Connection of Connectors	00-62
Disconnect and Connect Deutsch Connector	00-66
How to Disconnect and Connect Slide Lock Type Connector	00-67
Disconnect and Connect Connector with Lock to Pull	00-69
Disconnect and Connect Connector with Lock to Push	00-70
Disconnect and Connect Connector with Housing to Rotate	00-72
How to Read the Codes for Electric Cable	00-73
Explanation of Terms for Maintenance Standard	00-77
Standard Tightening Torque Table.....	00-80
Conversion Table	00-87
01 Specification.....	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing.....	01-3
Working Range Drawings.....	01-5
Specifications	01-6
Weight Table	01-9
Fuel, Coolant, Lubricant.....	01-11
10 Structure and Function	10-1
Table of Contents	10-2
Urea SCR System.....	10-6
Layout Drawing of Urea SCR System (Applicable Machine: 90156 to 92053).....	10-6
Layout Drawing of Urea SCR System (Applicable Machine: 92054 and up).....	10-11
Urea SCR System Diagram	10-15
Function of Urea SCR System	10-16
Component Parts of Urea SCR System	10-29
Boot-up System	10-39
Layout Drawing of Boot-up System	10-39
System Operating Lamp System.....	10-41
Battery Disconnect Switch.....	10-43
Engine System	10-44
Layout Drawing of Engine System	10-44
Engine Control System	10-46
Auto-Deceleration System.....	10-49
Engine Automatic Warm-up System	10-51
Overheat Prevention System	10-53
Turbocharger Protection System.....	10-55
Automatic Idle Stop System	10-57

Component Parts of Engine System	10-60
Cooling System.....	10-77
Layout Drawing of Cooling System	10-77
Control System	10-79
Layout Drawing of Control System	10-79
Machine Monitor System.....	10-82
KomVision System	10-84
KOMTRAX System	10-88
PPC Levers.....	10-89
Automatic Grease System.....	10-91
Component Parts of Control System	10-103
Hydraulic System	10-143
Layout Drawing of Hydraulic System.....	10-143
CLSS	10-146
Engine and Pump Combined Control System	10-169
Pump and Valve Control System.....	10-175
Component Parts of Hydraulic System.....	10-178
Work Equipment System.....	10-263
Layout Drawing of Work Equipment System	10-263
Structure of Valve Control	10-268
Bucket Control System.....	10-270
One-Touch Power Maximizing System.....	10-271
Machine Push-up System	10-273
PPC Lock System	10-275
Work Equipment and Travel Automatic Lock System	10-276
Attachment Oil Flow Adjuster System	10-278
Tool Control System	10-280
Component Parts of Work Equipment System	10-282
ICT System	10-320
Layout Drawing of ICT System.....	10-320
System Diagram of ICT Control System.....	10-323
Bucket Edge Position Detection System	10-324
The Intelligent Machine Control System.....	10-326
Cushion System for Arm IN End.....	10-352
Cushion System for Boom Raise End	10-354
Boom Secondary Drive Switch	10-356
Component Parts of ICT System.....	10-357
Swing System	10-385
Layout Drawing of Swing System.....	10-385
Swing Control System Diagram	10-388
Component Parts of Swing System.....	10-392
Travel System	10-406
Layout Drawing of Travel System.....	10-406
System Diagram of Travel Control System.....	10-410
Component Parts of Travel System.....	10-412
Undercarriage and Frame	10-432
Layout Drawing of Undercarriage.....	10-432
Work Equipment	10-434
Structure of Work Equipment	10-434
Function of Work Equipment	10-435
Work Equipment Clearance Adjustment Shim.....	10-436
Bucket Clearance Adjustment Shim	10-437
CAB Related Parts	10-438
ROPS CAB	10-438
CAB Mount	10-439
CAB Tipping Stopper	10-440
20 Standard Value Table	20-1
Table of Contents	20-2

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$