

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC490 -11

PC490LC -11

**SERIAL NUMBERS 85006 and up
 K70001 and up**

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-19
HOW TO READ THE SHOP MANUAL	00-19
SAFETY NOTICE FOR OPERATION	00-21
PRECAUTIONS TO PREVENT FIRE	00-29
ACTIONS IF FIRE OCCURS	00-31
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-32
.....	00-32
STORE DEF	00-34
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-35
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-37
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-43
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-45
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-46
PRACTICAL USE OF KOMTRAX	00-47
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-48
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-52
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-56
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-59
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-60
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-62
.....	00-62
HOW TO READ ELECTRICAL WIRE CODE	00-63
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-67
ABBREVIATION LIST	00-70
STANDARD TIGHTENING TORQUE TABLE	00-75
CONVERSION TABLE	00-82
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
WORKING RANGE DRAWINGS	01-5
SPECIFICATIONS	01-6
WEIGHT TABLE	01-9
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-11
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
UREA SCR SYSTEM	10-6
LAYOUT DRAWING OF UREA SCR SYSTEM	10-6
UREA SCR SYSTEM DIAGRAM	10-10
FUNCTION OF UREA SCR SYSTEM	10-11
COMPONENT PARTS OF UREA SCR SYSTEM	10-21
BOOT-UP SYSTEM	10-30
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-30
SYSTEM OPERATING LAMP SYSTEM	10-32
BATTERY DISCONNECT SWITCH	10-33
ENGINE SYSTEM	10-34
LAYOUT DRAWING OF ENGINE SYSTEM	10-34
ENGINE CONTROL SYSTEM	10-37
AUTO-DECELERATION SYSTEM	10-40
ENGINE AUTOMATIC WARM-UP SYSTEM	10-42
OVERHEAT PREVENTION SYSTEM	10-44
TURBOCHARGER PROTECTION SYSTEM	10-47
AUTOMATIC IDLE STOP SYSTEM	10-49
COMPONENT PARTS OF ENGINE SYSTEM	10-52

COOLING SYSTEM.....	10-67
LAYOUT DRAWING OF COOLING SYSTEM	10-67
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN.....	10-70
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN.....	10-72
FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN.....	10-75
COMPONENT PARTS OF COOLING SYSTEM.....	10-76
CONTROL SYSTEM.....	10-90
LAYOUT DRAWING OF CONTROL SYSTEM	10-90
MACHINE MONITOR SYSTEM	10-93
KOMTRAX SYSTEM.....	10-94
PPC LEVERS	10-95
AUTOMATIC GREASE SYSTEM.....	10-97
COMPONENT PARTS OF CONTROL SYSTEM.....	10-112
.....	10-141
HYDRAULIC SYSTEM.....	10-144
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-144
CLSS	10-146
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-165
PUMP AND VALVE CONTROL SYSTEM	10-172
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-175
WORK EQUIPMENT SYSTEM	10-265
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-265
STRUCTURE OF VALVE CONTROL.....	10-270
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-271
MACHINE PUSH-UP SYSTEM.....	10-273
PPC LOCK SYSTEM	10-275
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-276
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-278
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-280
SWING SYSTEM.....	10-302
LAYOUT DRAWING OF SWING SYSTEM	10-302
SWING CONTROL SYSTEM DIAGRAM	10-308
COMPONENT PARTS OF SWING SYSTEM.....	10-312
TRAVEL SYSTEM.....	10-327
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-327
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-331
COMPONENT PARTS OF TRAVEL SYSTEM	10-333
UNDERCARRIAGE AND FRAME.....	10-354
LAYOUT DRAWING OF UNDERCARRIAGE	10-354
WORK EQUIPMENT.....	10-355
STRUCTURE OF WORK EQUIPMENT.....	10-355
FUNCTION OF WORK EQUIPMENT	10-356
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-357
BUCKET CLEARANCE ADJUSTMENT SHIM	10-358
CAB AND ITS ATTACHMENTS	10-359
ROPS CAB	10-359
CAB MOUNT	10-360
CAB TIPPING STOPPER	10-361
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: PC490LC-11	20-3
STANDARD VALUE TABLE FOR MACHINE.....	20-6
STANDARD VALUE TABLE FOR MACHINE: PC490LC-11	20-6
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-22
STANDARD VALUE TABLE FOR ELECTRICAL	20-26
STANDARD VALUE TABLE FOR ELECTRICAL	20-26
30 TESTING AND ADJUSTING.....	30-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$