

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC490 -11

PC490LC -11

**SERIAL NUMBERS 85006 and up
 K70001 and up**

KOMATSU

00 INDEX AND FOREWORD

INDEX

(ALL-A-0310-001-10-B)

00 INDEX AND FOREWORD 00-1

 ABBREVIATION LIST 00-19

 FOREWORD, SAFETY, BASIC INFORMATION 00-25

 HOW TO READ THE SHOP MANUAL 00-25

 SAFETY NOTICE FOR OPERATION 00-27

 PRECAUTIONS TO PREVENT FIRE 00-35

 ACTIONS IF FIRE OCCURS 00-37

 PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS 00-38

 00-38

 STORE DEF 00-40

 PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT 00-41

 PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS 00-44

 PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT 00-51

 PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT 00-53

 PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT 00-54

 PRACTICAL USE OF KOMTRAX 00-55

 DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER 00-56

 PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS 00-60

 METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR 00-64

 METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR 00-65

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ... 00-67

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. 00-68

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .
 00-70

 HOW TO READ ELECTRICAL WIRE CODE 00-71

 EXPLANATION OF TERMS FOR MAINTENANCE STANDARD 00-75

 STANDARD TIGHTENING TORQUE TABLE 00-78

 CONVERSION TABLE 00-85

01 SPECIFICATIONS 01-1

 CONTENTS 01-2

 ABBREVIATION LIST 01-3

 SPECIFICATIONS 01-9

 SPECIFICATION DRAWING 01-9

 WORKING RANGE DRAWINGS 01-11

 SPECIFICATIONS 01-12

 WEIGHT TABLE 01-15

 TABLE OF FUEL, COOLANT, AND LUBRICANTS 01-17

10 STRUCTURE AND FUNCTION 10-1

 CONTENTS 10-2

 ABBREVIATION LIST 10-6

 UREA SCR SYSTEM 10-12

 LAYOUT DRAWING OF UREA SCR SYSTEM 10-12

 UREA SCR SYSTEM DIAGRAM 10-16

 FUNCTION OF UREA SCR SYSTEM 10-17

 COMPONENT PARTS OF UREA SCR SYSTEM 10-27

 BOOT-UP SYSTEM 10-36

 LAYOUT DRAWING OF BOOT-UP SYSTEM 10-36

 SYSTEM OPERATING LAMP SYSTEM 10-38

 BATTERY DISCONNECT SWITCH 10-39

 ENGINE SYSTEM 10-40

 LAYOUT DRAWING OF ENGINE SYSTEM 10-40

 ENGINE CONTROL SYSTEM 10-43

 AUTO-DECELERATION SYSTEM 10-46

 ENGINE AUTOMATIC WARM-UP SYSTEM 10-48

 OVERHEAT PREVENTION SYSTEM 10-50

 TURBOCHARGER PROTECTION SYSTEM 10-53

AUTOMATIC IDLE STOP SYSTEM	10-55
COMPONENT PARTS OF ENGINE SYSTEM	10-58
COOLING SYSTEM.....	10-74
LAYOUT DRAWING OF COOLING SYSTEM	10-74
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN.....	10-77
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN.....	10-79
FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN.....	10-82
COMPONENT PARTS OF COOLING SYSTEM.....	10-84
CONTROL SYSTEM.....	10-98
LAYOUT DRAWING OF CONTROL SYSTEM	10-98
MACHINE MONITOR SYSTEM	10-101
KOMTRAX SYSTEM.....	10-102
PPC LEVERS	10-103
AUTOMATIC GREASE SYSTEM.....	10-105
COMPONENT PARTS OF CONTROL SYSTEM.....	10-106
.....	10-136
HYDRAULIC SYSTEM.....	10-140
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-140
CLSS	10-142
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-161
PUMP AND VALVE CONTROL SYSTEM	10-168
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-171
WORK EQUIPMENT SYSTEM	10-261
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-261
STRUCTURE OF VALVE CONTROL.....	10-266
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-267
MACHINE PUSH-UP SYSTEM.....	10-269
PPC LOCK SYSTEM	10-271
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-272
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-274
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-276
SWING SYSTEM.....	10-296
LAYOUT DRAWING OF SWING SYSTEM	10-296
SWING CONTROL SYSTEM DIAGRAM	10-302
COMPONENT PARTS OF SWING SYSTEM.....	10-306
TRAVEL SYSTEM.....	10-321
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-321
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-325
COMPONENT PARTS OF TRAVEL SYSTEM	10-327
UNDERCARRIAGE AND FRAME.....	10-349
LAYOUT DRAWING OF UNDERCARRIAGE	10-349
WORK EQUIPMENT.....	10-350
STRUCTURE OF WORK EQUIPMENT	10-350
FUNCTION OF WORK EQUIPMENT	10-351
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-352
BUCKET CLEARANCE ADJUSTMENT SHIM	10-353
CAB AND ITS ATTACHMENTS	10-354
ROPS CAB	10-354
CAB MOUNT	10-355
CAB TIPPING STOPPER	10-356
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC490LC-11	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-12
STANDARD VALUE TABLE FOR MACHINE: PC490LC-11	20-12
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-28

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$