

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC490 -11E0

PC490LC -11E0

PC490HRD-11E0

SERIAL NUMBERS K75001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

(ALL-A-0310-001-10-B)

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-21
FOREWORD, SAFETY, BASIC INFORMATION	00-27
HOW TO READ THE SHOP MANUAL	00-27
SAFETY NOTICE FOR OPERATION	00-29
PRECAUTIONS TO PREVENT FIRE	00-37
ACTIONS IF FIRE OCCURS	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-41
PRECAUTIONS FOR DEF	00-42
STORE DEF	00-43
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-44
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-47
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-54
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-56
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-57
PRACTICAL USE OF KOMTRAX	00-58
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-59
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-63
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-71
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-73
HOW TO READ ELECTRICAL WIRE CODE	00-74
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-78
STANDARD TIGHTENING TORQUE TABLE	00-81
CONVERSION TABLE	00-88
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-17
SPECIFICATIONS - PC490HRD-11E0	01-18
SPECIFICATION DRAWING	01-18
SPECIFICATIONS	01-22
WEIGHT TABLE	01-24
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-16
FUNCTION OF UREA SCR SYSTEM	10-17
COMPONENT PARTS OF UREA SCR SYSTEM	10-27
BOOT-UP SYSTEM	10-36
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-36
SYSTEM OPERATING LAMP SYSTEM	10-38
BATTERY DISCONNECT SWITCH	10-39
ENGINE SYSTEM	10-40
LAYOUT DRAWING OF ENGINE SYSTEM	10-40

ENGINE CONTROL SYSTEM	10-43
AUTO-DECELERATION SYSTEM	10-46
ENGINE AUTOMATIC WARM-UP SYSTEM	10-48
OVERHEAT PREVENTION SYSTEM	10-50
TURBOCHARGER PROTECTION SYSTEM	10-53
AUTOMATIC IDLE STOP SYSTEM	10-55
COMPONENT PARTS OF ENGINE SYSTEM	10-58
COOLING SYSTEM.....	10-74
LAYOUT DRAWING OF COOLING SYSTEM	10-74
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN.....	10-77
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN.....	10-79
FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN.....	10-82
COMPONENT PARTS OF COOLING SYSTEM.....	10-84
CONTROL SYSTEM.....	10-98
LAYOUT DRAWING OF CONTROL SYSTEM	10-98
MACHINE MONITOR SYSTEM	10-101
KomVision SYSTEM	10-102
KOMTRAX SYSTEM.....	10-106
PPC LEVERS	10-107
AUTOMATIC GREASE SYSTEM.....	10-109
COMPONENT PARTS OF CONTROL SYSTEM.....	10-124
SENSOR.....	10-159
HYDRAULIC SYSTEM.....	10-162
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-162
CLSS	10-164
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-183
PUMP AND VALVE CONTROL SYSTEM	10-190
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-193
HYDRAULIC SYSTEM - PC490HRD-11E0	10-283
LAYOUT DRAWING OF HYDRAULIC SYSTEM.....	10-283
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-286
WORK EQUIPMENT SYSTEM	10-306
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-306
STRUCTURE OF VALVE CONTROL.....	10-311
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-312
MACHINE PUSH-UP SYSTEM.....	10-314
PPC LOCK SYSTEM	10-316
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-317
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-319
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-321
WORK EQUIPMENT SYSTEM - PC490HRD-11E0	10-341
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-341
SWING SYSTEM.....	10-345
LAYOUT DRAWING OF SWING SYSTEM	10-345
SWING CONTROL SYSTEM DIAGRAM	10-351
COMPONENT PARTS OF SWING SYSTEM.....	10-355
TRAVEL SYSTEM.....	10-370
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-370
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-374
COMPONENT PARTS OF TRAVEL SYSTEM	10-376
UNDERCARRIAGE AND FRAME.....	10-398
LAYOUT DRAWING OF UNDERCARRIAGE	10-398
WORK EQUIPMENT.....	10-400
STRUCTURE OF WORK EQUIPMENT	10-400
FUNCTION OF WORK EQUIPMENT	10-401
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-402
BUCKET CLEARANCE ADJUSTMENT SHIM	10-403
CAB AND ITS ATTACHMENTS	10-404

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$