

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC490LCi-11**

SERIAL NUMBERS    85113    and up

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-22
Foreword, Safety, Basic Information.....	00-25
How to Read the Shop Manual .....	00-25
Safety Notice for Operation .....	00-27
Precautions to Prevent Fire.....	00-35
Procedures If Fire Occurs .....	00-37
Precautions When You Discard Waste Materials.....	00-38
Procedures for Exhaust Gas Regulations.....	00-39
Precautions for DEF.....	00-40
Store DEF .....	00-41
Precautions When You Handle Hydraulic Equipment.....	00-42
Precautions When You Disconnect and Connect Pipings.....	00-45
Precautions When You Handle Electrical Equipment .....	00-52
Precautions When You Handle Fuel System Equipment .....	00-54
Precautions When You Handle Intake System Equipment .....	00-55
Practical Use of KOMTRAX .....	00-56
Disconnect and Connect Push-Pull Type Coupler .....	00-57
Precautions for Disconnection and Connection of Connectors .....	00-61
Disconnect and Connect Deutsch Connector .....	00-65
How to Disconnect and Connect Slide Lock Type Connector .....	00-66
Disconnect and Connect Connector with Lock to Pull .....	00-68
Disconnect and Connect Connector with Lock to Push .....	00-69
Disconnect and Connect Connector with Housing to Rotate .....	00-71
How to Read the Codes for Electric Cable .....	00-72
Explanation of Terms for Maintenance Standard .....	00-76
Standard Tightening Torque Table.....	00-79
Conversion Table .....	00-86
01 Specification.....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing.....	01-3
Working Range Drawings.....	01-5
Specifications.....	01-6
Weight Table .....	01-10
Table of Fuel, Coolant, and Lubricants .....	01-12
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System.....	10-6
Layout Drawing of Urea SCR System .....	10-6
Urea SCR System Diagram .....	10-10
Function of Urea SCR System .....	10-11
Component Parts of Urea SCR System .....	10-27
Boot-up System .....	10-36
Layout Drawing of Boot-up System .....	10-36
System Operating Lamp System.....	10-38
Battery Disconnect Switch.....	10-40
Engine System.....	10-41
Layout Drawing of Engine System .....	10-41
Engine Control System .....	10-44
Auto-Deceleration System.....	10-47
Engine Automatic Warm-up System.....	10-49
Overheat Prevention System .....	10-51
Turbocharger Protection System.....	10-54
Automatic Idle Stop System .....	10-56
Component Parts of Engine System .....	10-59

Cooling System.....	10-75
Layout Drawing of Cooling System .....	10-75
Fan Speed Control System of Hydraulic Fan .....	10-78
Engine Output Control System of Hydraulic Fan .....	10-80
Fan Reverse Rotation System of Hydraulic Fan.....	10-83
Component Parts of Cooling System .....	10-84
Control System .....	10-98
Layout Drawing of Control System .....	10-98
Layout Drawing of Control System (Multi GNSS Support, 10.4 inch Display) .....	10-101
Machine Monitor System.....	10-104
KOMTRAX System .....	10-105
Component Parts of Control System .....	10-106
Hydraulic System .....	10-136
Layout Drawing of Hydraulic System.....	10-136
CLSS .....	10-138
Engine and Pump Combined Control System .....	10-161
Pump and Valve Control System.....	10-168
Component Parts of Hydraulic System.....	10-171
Work Equipment System.....	10-263
Layout Drawing of Work Equipment System .....	10-263
Structure of Valve Control .....	10-268
One-Touch Power Maximizing System.....	10-269
Machine Push-up System .....	10-271
PPC Lock System .....	10-273
Work Equipment and Travel Automatic Lock System .....	10-274
Attachment Oil Flow Adjuster System .....	10-276
Component Parts of Work Equipment System .....	10-278
ICT System .....	10-300
Layout Drawing of ICT System.....	10-300
Layout Drawing of ICT System (Multi GNSS Support, 10.4 inch Display).....	10-301
System Diagram of ICT Control System.....	10-303
Bucket Edge Position Detection System .....	10-304
The Intelligent Machine Control System.....	10-306
Cushion System for Arm IN End.....	10-321
Boom Secondary Drive Switch .....	10-323
Component Parts of ICT System.....	10-324
Swing System .....	10-358
Layout Drawing of Swing System.....	10-358
Swing Control System Diagram .....	10-363
Component Parts of Swing System.....	10-367
Travel System .....	10-382
Layout Drawing of Travel System.....	10-382
System Diagram of Travel Control System.....	10-386
Component Parts of Travel System.....	10-388
Undercarriage and Frame .....	10-409
Layout Drawing of Undercarriage.....	10-409
Work Equipment .....	10-410
Structure of Work Equipment .....	10-410
Function of Work Equipment .....	10-411
Work Equipment Clearance Adjustment Shim.....	10-412
Bucket Clearance Adjustment Shim .....	10-413
CAB Related Parts .....	10-414
ROPS CAB .....	10-414
CAB Mount .....	10-415
CAB Tipping Stopper .....	10-416
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$