

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC490LCi-11***

SERIAL NUMBERS 86044 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-24
Foreword, Safety, Basic Information .....	00-30
How to Read the Shop Manual .....	00-30
Safety Notice for Operation .....	00-32
Precautions to Prevent Fire .....	00-40
Procedures If Fire Occurs .....	00-42
Precautions When You Discard Waste Materials .....	00-43
Procedures for Exhaust Gas Regulations .....	00-44
Precautions for DEF .....	00-45
Store DEF .....	00-46
Precautions When You Handle Hydraulic Equipment .....	00-47
Precautions When You Disconnect and Connect Pippings .....	00-50
Precautions When You Handle Electrical Equipment .....	00-57
Precautions When You Handle Fuel System Equipment .....	00-59
Precautions When You Handle Intake System Equipment .....	00-60
Practical Use of KOMTRAX .....	00-61
Disconnect and Connect Push-Pull Type Coupler .....	00-62
Precautions for Disconnection and Connection of Connectors .....	00-66
Disconnect and Connect Deutsch Connector .....	00-70
How to Disconnect and Connect Slide Lock Type Connector .....	00-71
Disconnect and Connect Connector with Lock to Pull .....	00-73
Disconnect and Connect Connector with Lock to Push .....	00-74
Disconnect and Connect Connector with Housing to Rotate .....	00-76
How to Read the Codes for Electric Cable .....	00-77
Explanation of Terms for Maintenance Standard .....	00-81
Standard Tightening Torque Table .....	00-84
Conversion Table .....	00-91
01 Specification .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-5
Specifications .....	01-6
Weight Table .....	01-10
Table of Fuel, Coolant, and Lubricants .....	01-12
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-6
LAYOUT DRAWING OF UREA SCR SYSTEM (APPLICABLE MACHINE: 85001 to 86052) .....	10-6
LAYOUT DRAWING OF UREA SCR SYSTEM (APPLICABLE MACHINE: 86053 and up) .....	10-10
Urea SCR System Diagram .....	10-14
Function of Urea SCR System .....	10-15
Component Parts of Urea SCR System .....	10-27
Boot-up System .....	10-37
Layout Drawing of Boot-up System .....	10-37
System Operating Lamp System .....	10-39
Battery Isolator .....	10-41
Engine System .....	10-42
Layout Drawing of Engine System .....	10-42
Engine Control System .....	10-45
Auto-Deceleration System .....	10-49
Engine Automatic Warm-up System .....	10-51
Overheat Prevention System .....	10-53
Turbocharger Protection System .....	10-56
Automatic Idle Stop System .....	10-58

Component Parts of Engine System .....	10-61
Cooling System.....	10-78
Layout Drawing of Cooling System .....	10-78
Fan Speed Control System of Hydraulic Fan .....	10-81
Engine Output Control System of Hydraulic Fan .....	10-83
Fan Reverse Rotation System of Hydraulic Fan.....	10-86
Component Parts of Cooling System .....	10-87
Control System .....	10-102
Layout Drawing of Control System .....	10-102
Machine Monitor System.....	10-105
KomVision System.....	10-107
KOMTRAX System .....	10-111
PPC Levers.....	10-112
Component Parts of Control System .....	10-114
Hydraulic System .....	10-157
Layout Drawing of Hydraulic System.....	10-157
CLSS .....	10-159
Engine and Pump Combined Control System .....	10-182
Pump and Valve Control System.....	10-188
Component Parts of Hydraulic System.....	10-191
Work Equipment System.....	10-267
Layout Drawing of Work Equipment System .....	10-267
Structure of Valve Control .....	10-272
Bucket Control System.....	10-273
One-Touch Power Maximizing System .....	10-274
Machine Push-up System .....	10-276
PPC Lock System.....	10-278
Work Equipment and Travel Automatic Lock System .....	10-279
Attachment Oil Flow Adjuster System .....	10-281
Quick Coupler Control Valve System.....	10-283
Component Parts of Work Equipment System .....	10-284
ICT System .....	10-313
Layout Drawing of ICT System.....	10-313
System Diagram of ICT Control System.....	10-316
Bucket Edge Position Detection System .....	10-317
The Intelligent Machine Control System.....	10-319
Cushion System for Arm IN End.....	10-345
Boom Secondary Drive Switch.....	10-347
Component Parts of ICT System.....	10-348
Swing System .....	10-378
Layout Drawing of Swing System.....	10-378
Swing Control System Diagram .....	10-383
Component Parts of Swing System.....	10-387
Travel System .....	10-402
Layout Drawing of Travel System.....	10-402
System Diagram of Travel Control System.....	10-406
Component Parts of Travel System.....	10-408
Undercarriage and Frame .....	10-429
Layout Drawing of Undercarriage.....	10-429
Work Equipment .....	10-430
Structure of Work Equipment .....	10-430
Function of Work Equipment.....	10-431
Work Equipment Clearance Adjustment Shim.....	10-432
Bucket Clearance Adjustment Shim .....	10-433
CAB Related Parts.....	10-434
ROPS CAB .....	10-434
CAB Mount .....	10-435
CAB Tipping Stopper .....	10-436

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$