

Shop Manual

HYDRAULIC
EXCAVATOR

PC80MR-5

SERIAL NUMBERS PC80MR-5 F50003 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-11
FOREWORD, SAFETY, BASIC INFORMATION	00-17
HOW TO READ THE SHOP MANUAL.....	00-17
SAFETY NOTICE FOR OPERATION.....	00-19
PRECAUTIONS TO PREVENT FIRE.....	00-27
ACTIONS IF FIRE OCCURS	00-29
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS.....	00-30
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-31
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-34
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-41
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-43
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-44
PRACTICAL USE OF KOMTRAX.....	00-45
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-50
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-54
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-55
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-58
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-60
HOW TO READ ELECTRICAL WIRE CODE	00-61
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-65
STANDARD TIGHTENING TORQUE TABLE.....	00-68
CONVERSION TABLE	00-75
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS	01-12
SPECIFICATIONS	01-16
WEIGHT TABLE	01-21
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-23
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-4
BOOT-UP SYSTEM.....	10-10
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-10
SYSTEM OPERATING LAMP SYSTEM	10-12
BATTERY DISCONNECT SWITCH	10-14
ENGINE SYSTEM	10-15
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-15
ENGINE CONTROL SYSTEM	10-16
AUTO-DECELERATION SYSTEM.....	10-20
OVERHEAT PREVENTION SYSTEM.....	10-22
AUTOMATIC IDLE STOP SYSTEM	10-24
COMPONENT PARTS OF ENGINE SYSTEM	10-26
COOLING SYSTEM.....	10-27
LAYOUT DRAWING OF COOLING SYSTEM	10-27
CONTROL SYSTEM.....	10-29
LAYOUT DRAWING OF CONTROL SYSTEM	10-29
MACHINE MONITOR SYSTEM	10-30
KOMTRAX SYSTEM.....	10-31
COMPONENT PARTS OF CONTROL SYSTEM.....	10-32

HYDRAULIC SYSTEM.....	10-49
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-49
CLSS	10-51
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-54
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-57
WORK EQUIPMENT SYSTEM	10-108
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-108
STRUCTURE OF VALVE CONTROL.....	10-112
PPC LOCK SYSTEM	10-114
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-115
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-116
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-118
SWING SYSTEM	10-129
LAYOUT DRAWING OF SWING SYSTEM	10-129
COMPONENT PARTS OF SWING SYSTEM.....	10-130
TRAVEL SYSTEM.....	10-142
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-142
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-144
COMPONENT PARTS OF TRAVEL SYSTEM	10-146
UNDERCARRIAGE AND FRAME.....	10-160
LAYOUT DRAWING OF UNDERCARRIAGE	10-160
IDLER CUSHION.....	10-161
WORK EQUIPMENT.....	10-162
STRUCTURE OF WORK EQUIPMENT	10-162
FUNCTION OF WORK EQUIPMENT	10-164
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-165
CAB AND ITS ATTACHMENTS	10-166
ROPS CAB	10-166
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC80MR-5.....	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-11
STANDARD VALUE TABLE FOR MACHINE: PC80MR-5	20-11
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-23
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-4
RELATED INFORMATION ON TESTING AND ADJUSTING	30-10
ENGINE AND COOLING SYSTEM.....	30-11
TEST ENGINE SPEED	30-11
TEST EXHAUST GAS COLOR.....	30-13
TEST AND ADJUST VALVE CLEARANCE.....	30-15
TEST COMPRESSION PRESSURE.....	30-17
TEST ENGINE OIL PRESSURE	30-19
BLEED AIR FROM FUEL SYSTEM	30-21
TEST FUEL CIRCUIT FOR LEAKAGE	30-22
HANDLE CYLINDER CUT-OUT MODE OPERATION.....	30-23
TEST AND ADJUST ALTERNATOR BELT TENSION	30-24
TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION	30-26
POWER TRAIN.....	30-28
TEST SWING CIRCLE BEARING CLEARANCE	30-28
UNDERCARRIAGE AND FRAME.....	30-29
TEST AND ADJUST TRACK TENSION.....	30-29
HYDRAULIC SYSTEM.....	30-31
RELEASE REMAINING PRESSURE FROM HYDRAULIC SYSTEM.....	30-31

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$