

Shop Manual

HYDRAULIC
EXCAVATOR

PC900LC-11
PC950 -11E0
PC950LC-11E0

SERIAL NUMBERS PC900LC- 10013
 PC950- 10026 and up
 PC950LC- 10026

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-24
Foreword, Safety, Basic Information	00-27
How to Read the Shop Manual	00-27
Safety Notice for Operation	00-29
Precautions to Prevent Fire	00-37
Procedures If Fire Occurs	00-39
Precautions When You Dispose of Waste Materials	00-40
Procedures for Exhaust Gas Regulations	00-41
Precautions for DEF	00-42
Store DEF	00-43
Precautions When You Handle Hydraulic Equipment	00-44
Precautions When You Disconnect and Connect Pipings	00-47
Precautions When You Handle Electrical Equipment	00-54
Precautions When You Handle Fuel System Equipment	00-56
Precautions When You Handle Intake System Equipment	00-57
Practical Use of KOMTRAX	00-58
Disconnect and Connect Push-Pull Type Coupler	00-59
Precautions for Disconnection and Connection of Connectors	00-63
How to Disconnect and Connect Deutsch Connector	00-67
How to Disconnect and Connect Slide Lock Type Connector	00-68
How to Disconnect and Connect Connector with Lock to Pull	00-70
How to Disconnect and Connect Connector with Lock to Push	00-71
How to Disconnect and Connect Connector with Housing to Rotate	00-73
How to Read the Codes for Electric Cable	00-74
Explanation of Terms for Maintenance Standard	00-78
Standard Tightening Torque Table	00-81
Conversion Table	00-88
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-10
Specifications	01-17
Weight Table	01-42
How to Use Fuel, Coolant and Lubricants by Ambient Temperature (PC900LC-11)	01-55
How to Use Fuel, Coolant and Lubricants by Ambient Temperature (PC950-11E0, PC950LC-11E0)	01-57
10 Structure and Function	10-1
Table of Contents	10-2
Urea SCR System	10-6
Layout Drawing of Urea SCR System	10-6
Urea SCR System Diagram	10-10
Function of Urea SCR System	10-11
Component Parts of Urea SCR System	10-27
Boot-up System	10-36
Layout Drawing of Boot-up System	10-36
System Operating Lamp System	10-37
Battery Disconnect Switch	10-39
Engine System	10-40
Layout Drawing of Engine System	10-40
Engine Control System	10-42
Auto-Deceleration System	10-45
Automatic Low Idle System	10-47
Engine Automatic Warm-up System	10-49
Overheat Prevention System	10-51

Turbocharger Protection System	10-53
Automatic Idle Stop System	10-54
Component Parts of Engine System	10-57
Cooling System	10-78
Layout Drawing of Cooling System	10-78
Fan Speed Control System of Hydraulic Fan	10-81
Engine Output Control System of Hydraulic Fan	10-83
Fan Reverse Rotation System of Hydraulic Fan	10-85
Component Parts of Cooling System	10-87
Control System	10-110
Layout Drawing of Control System	10-110
Machine Monitor System	10-112
KomVision System	10-115
KOMTRAX System	10-120
Component Parts of Control System	10-121
Hydraulic System	10-173
Layout Drawing of Hydraulic System	10-173
Electronic OLSS	10-176
Engine and Pump Combined Control System	10-179
Component Parts of Hydraulic System	10-183
Work Equipment System	10-238
Layout Drawing of Work Equipment System	10-238
Work Equipment System Diagram	10-244
Machine Push-up System	10-246
Boom Shockless Control Function	10-248
PPC Lock System	10-250
Work Equipment and Travel Automatic Lock System	10-252
Component Parts of Work Equipment System	10-255
Swing System	10-282
Layout Drawing of Swing System	10-282
Swing Control System Diagram	10-286
Component Parts of Swing System	10-292
Travel System	10-352
Layout Drawing of Travel System	10-352
System Diagram of Travel Control System	10-355
Component Parts of Travel System	10-357
Undercarriage and Frame	10-396
Layout Drawing of Undercarriage	10-396
Work Equipment	10-398
Structure of Work Equipment	10-398
Function of Work Equipment	10-399
Work Equipment Clearance Adjustment Shim	10-400
Bucket Clearance Adjustment Shim	10-401
CAB Related Parts	10-402
CAB	10-402
CAB Mount	10-403
CAB Tipping Stopper	10-404
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC900LC-11	20-3
Standard Value Table for Engine: PC900LC-11(SE)	20-7
Standard Value Table for Engine: PC950-11E0	20-11
Standard Value Table for Engine: PC950-11E0(SE)	20-15
Standard Value Table for Engine: PC950LC-11E0	20-19
Standard Value Table for Engine: PC950LC-11E0(SE)	20-23
Standard Value Table for Machine	20-27
Standard Value Table for Machine: PC900LC-11	20-27

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$