

Shop Manual

HYDRAULIC
EXCAVATOR

PW98MR-10

SERIAL NUMBERS PW98MR-10 F10003 and up

KOMATSU

SHOP MANUAL

HYDRAULIC EXCAVATOR PW98MR-10

Machine model	Serial number
PW98MR-10	F10003 and up

00 Index and foreword

Table of contents

00 Index and foreword

Table of contents.....	2
Foreword, safety and general information.....	17
Important safety notice.....	17
Fire prevention.....	22
Dispose of waste materials.....	23
How to read the shop manual.....	24
Explanation of terms for maintenance standard.....	26
Handling equipment of fuel system devices.....	28
Handling of intake system parts.....	29
Handling of hydraulic equipment.....	30
Method of disconnecting and connecting of push-pull type coupler.....	32
Handling of electrical equipment.....	35
How to read electric wire code.....	43
Precautions when performing operation.....	46
Practical use of KOMTRAX.....	51
Standard tightening torque table.....	52
List of abbreviation.....	58
Conversion table.....	63

01 Specification

Specifications.....	3
Overall dimensions.....	3
Working range drawings.....	4
Specifications.....	6
Weight table.....	11
Table of fuel, coolant, and lubricants.....	13

10 Structure and function

Engine and cooling system.....	4
Engine related parts.....	4
PTO.....	6
Variable flow turbocharger.....	7
EGR system piping drawing.....	11
EGR system circuit diagram.....	13
EGR valve.....	14
EGR cooler.....	16
KCCV layout drawing.....	17
KCCV ventilator.....	20
KDOC muffler.....	22
Cooling system.....	24
Power train.....	27
Power train overview.....	27
Swing circle.....	29
Swing machinery.....	31
Undercarriage and frame.....	33
Front axle.....	33
Transmission.....	39
Rear axle.....	41
Hydraulic system.....	63

Hydraulic component layout	63
Valve control	65
Hydraulic tank	67
Control valve	71
CLSS	83
Hydraulic pump	101
Self-reducing pressure valve	114
Swing motor	120
Travel motor	131
Work equipment and swing PPC valve	135
Boom swing and 2 piece boom PPC valve	142
Travel PPC valve	144
Brakes pump	145
Swivel joint	147
Solenoid valve	149
Steering control solenoid valve group	151
1-Attachment flow adjustment EPC valve	152
2-Attachment flow adjustment EPC valve	153
Travel speed and direction control solenoid valve	154
Boom/Outrigger schematic	155
Undercarriage attachment schematic	156
Accumulator	157
Travel by-pass control valve	160
Anti-drop valve	161
Blade/outriggers safety valve	166
2-piece boom safety valve	167
Boom swing safety valve	168
Hydraulic quick coupler	169
Work equipment	172
Work equipment	172
Work equipment shim	173
Bucket play adjustment shim	174
Cab and its attachments	175
Cab mount and cab tipping stopper	175
ROPS cab	177
Steering column	179
Electrical system	180
Electrical control system	180
Machine monitor system	240
KOMTRAX system	269
Sensor	272
PPC Levers	283
Overload warning device	285
20 Standard value tables	
Standard service value table	3
Standard value table for engine	3
Standard value table for machine	5
Standard value table for electrical system	22
30 Testing and adjusting	1
Related information on testing and adjusting	4
Sketch of tools for testing and adjusting	4

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$