

Shop Manual

WHEEL LOADER

WA200-6

Emerging Country Specification

SERIAL NUMBERS 72001 and up

ecot3

KOMATSU

SHOP MANUAL

WHEEL LOADER

WA200-6



Machine model Serial number

WA200-6 72001 and up

00 Index and foreword

Index and foreword

Index

00 Index and foreword

Index and foreword	00-2
Foreword, safety and general information.....	00-11
Important safety notice	00-11
How to read the shop manual.....	00-18
Explanation of terms for maintenance standard	00-20
Handling equipment of fuel system devices	00-22
Handling of intake system parts	00-23
Handling of hydraulic equipment	00-24
Method of disconnecting and connecting of push-pull type coupler	00-26
Handling of electrical equipment	00-29
How to read electric wire code	00-37
Precautions when performing operation.....	00-40
Practical use of KOMTRAX	00-45
Standard tightening torque table	00-46
List of Abbreviation	00-52
Conversion table.....	00-56

01 Specifications

Specification.....	01-3
Specification dimension drawing	01-3
Specifications	01-4
Weight table.....	01-8
Table of fuel, coolant and lubricants.....	01-10

10 Structure, function and maintenance standard

Engine and cooling system	10-4
Engine mount and transfer mount	10-4
Damper.....	10-5
Cooling system	10-6
Cooling system hydraulic piping diagram	10-7
Cooling fan motor	10-9
Power train	10-17
Power train	10-17
Power train system diagram	10-18
Drive shaft	10-20
HST hydraulic piping diagram	10-21
HST pump	10-22
HST motor	10-30
Transfer	10-36
Clutch solenoid valve.....	10-47
Axe.....	10-48
Differential	10-50
Torque proportioning differential.....	10-55
Limited slip differential.....	10-58
Final drive	10-62
Steering system	10-67
Steering piping diagram.....	10-67
Steering column.....	10-68
Priority valve	10-69
Orbit-roll valve	10-72

2-way restrictor valve	10-80
Cushion valve	10-81
Steering cylinder	10-82
Emergency steering piping diagram	10-84
Emergency steering valve	10-85
Steering relief valve	10-88
Brake system	10-89
Brake piping diagram	10-89
Charge valve	10-90
Brake valve	10-94
Inching valve	10-98
Accumulator (for brake)	10-99
Slack adjuster	10-100
Brake	10-102
Parking brake control	10-107
Parking brake	10-108
Undercarriage and frame	10-110
Axe mount and center hinge pin	10-110
Hydraulic system	10-116
Work equipment hydraulic piping diagram	10-116
Work equipment control lever linkage	10-118
Hydraulic tank	10-120
Quadruple gear pump	10-122
Work equipment control valve	10-125
PPC valve	10-142
Lock valve	10-150
Accumulator (for PPC circuit)	10-151
Work equipment	10-152
Work equipment linkage	10-152
Bucket	10-154
Bucket positioner and boom kick-out	10-156
Work equipment cylinder	10-164
Cab and its attachments	10-167
Cab	10-167
Air conditioner	10-169
Electrical system	10-181
Machine monitor system	10-181
Machine monitor	10-185
Electrical system (HST controller system)	10-206
HST controller	10-220
KOMTRAX system	10-222
Engine starting circuit	10-226
Engine stopping circuit	10-228
Preheating circuit	10-229
Engine output derating function	10-230
Automatic warm-up function	10-230
Parking brake circuit	10-231
Max. traction switch	10-233
Sensor	10-234

20 Standard value table

Standard service value table	20-3
Standard service value table for engine	20-3
Standard service value table for chassis	20-4

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$