

Shop Manual

WHEEL LOADER

WA200 -6

WA200PZ-6

SERIAL NUMBERS

WA200- 70001

WA200PZ- 70001

and up

ecot3

KOMATSU

WHEEL LOADER

WA200-6

WA200PZ-6

Machine model Serial number

WA200-6 70001 and up
WA200PZ-6 70001 and up

00 Index and foreword

100 Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03862-06
00 Index and foreword	SEN03863-06
100 Index	SEN03871-06 ●
200 Foreword and general information	SEN03872-00
01 Specification	SEN03864-00
100 Specification and technical data	SEN03873-00
10 Structure, function and maintenance standard	SEN03865-01
100 Engine and cooling system	SEN03874-00
200 Power train	SEN03875-00
300 Steering system	SEN03876-01 ●
400 Brake system	SEN03877-00
500 Undercarriage and frame	SEN03878-00
600 Hydraulic system	SEN03879-00
700 Work equipment	SEN03880-01 ●
800 Cab and its attachments	SEN03881-00
910 Electrical system, Part 1	SEN03882-00
920 Electrical system, Part 2	SEN03883-00
20 Standard value table	SEN03866-01
100 Standard service value table	SEN03884-01
30 Testing and adjusting	SEN03867-04
110 Testing and adjusting, Part 1	SEN03885-02
120 Testing and adjusting, Part 2	SEN03886-03
130 Testing and adjusting, Part 3	SEN03887-02

40 Troubleshooting	SEN03868-02
100 Failure code table and fuse locations	SEN03888-01
200 General information on troubleshooting	SEN03889-01
310 Troubleshooting by failure code (Display of code), Part 1	SEN03890-01
320 Troubleshooting by failure code (Display of code), Part 2	SEN03891-01
330 Troubleshooting by failure code (Display of code), Part 3	SEN03892-01
340 Troubleshooting by failure code (Display of code), Part 4	SEN03893-01
350 Troubleshooting by failure code (Display of code), Part 5	SEN03894-01
360 Troubleshooting by failure code (Display of code), Part 6	SEN03895-01
370 Troubleshooting by failure code (Display of code), Part 7	SEN03896-00
400 Troubleshooting of electrical system (E-mode)	SEN03897-02
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03898-01
600 Troubleshooting of engine (S-mode)	SEN03899-01
50 Disassembly and assembly	SEN03869-03
100 General information on disassembly and assembly	SEN03900-02 ●
200 Engine and cooling system	SEN03901-01
310 Power train, Part 1	SEN03902-01 ●
320 Power train, Part 2	SEN03903-00
400 Undercarriage and frame	SEN03904-01
500 Hydraulic system	SEN03905-01 ●
600 Work equipment	SEN03906-00
700 Cab and its attachments	SEN03907-00
800 Electrical system	SEN03908-00
90 Diagrams and drawings	SEN03870-01
100 Hydraulic diagrams and drawings	SEN03909-00
200 Electrical diagrams and drawings	SEN03910-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$